


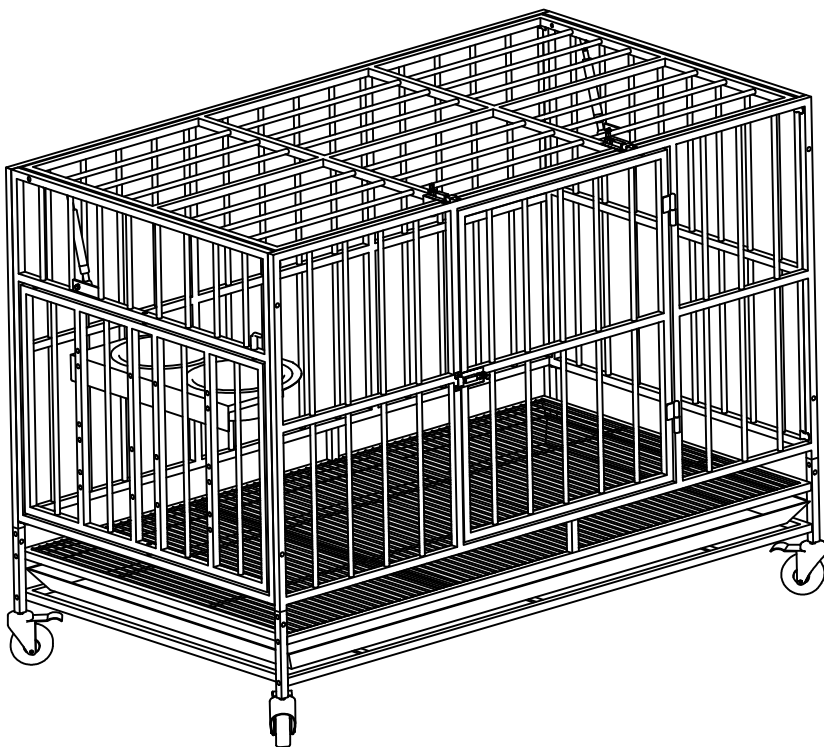

























# Heavy Duty Dog Cage Kennel Instruction Manual



# PARTS LIST

- Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.
- Carefully and strictly follow these assembly&installation instructions to ensure a completed product as designed.
- Do not tighten all the screws until each part is properly assembled.










Number	Parts	Quantity
A		1PC
B		1PC
C		1PC
D		1PC
E		1PC
F		1PC
G		1PC
H		1PC
I		1PC
J		2PCS
K		2PCS
L		4PCS
M		4PCS
N		2PCS

Number	Parts	Quantity
①	 M6*25	20PCS
②	 M6*40	2PCS
③	 M6*22	14PCS
④	 M5*15	4PCS
⑤	 M8	2PCS
⑥	 M6	10PCS
⑦	 M6	6PCS
⑧	 M4	1PC
⑨	 10-10	1PC
⑩	 12-12	1PC
⑪	 14-14	1PC
⑫	 Philips head screwdriver	1PC


# DOG CRATE ASSEMBLY

## STEP 1

Use labeled (1)(8) to screw (A) to (D) and (C) respectively according to the figure, use (8)(9)(3)(6) to tighten the two (M) on A respectively





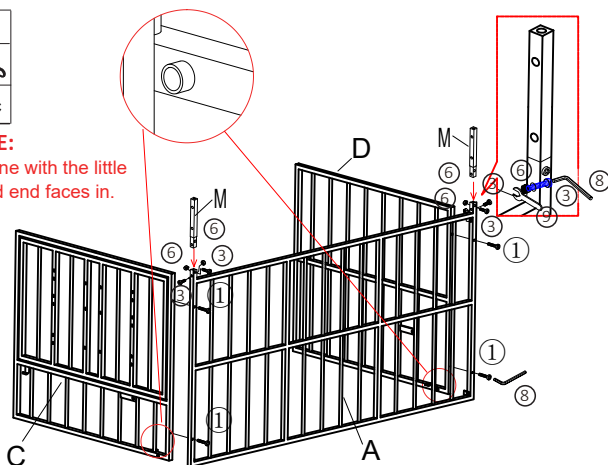


	①	③	⑥	⑧	⑨
					
	4PCS	4PCS	4PCS	1PC	1PC
Required Tools					
	A		1PC		
	C		1PC		
	D		1PC		
	M		2PCS		


**NOTE:**  
The one with the little round end faces in.



## STEP 2

Use labeled (1)(8) to screw (B) to (D) and (C), use (8)(9)(3)(6) to tighten the two (M) on (B) respectively

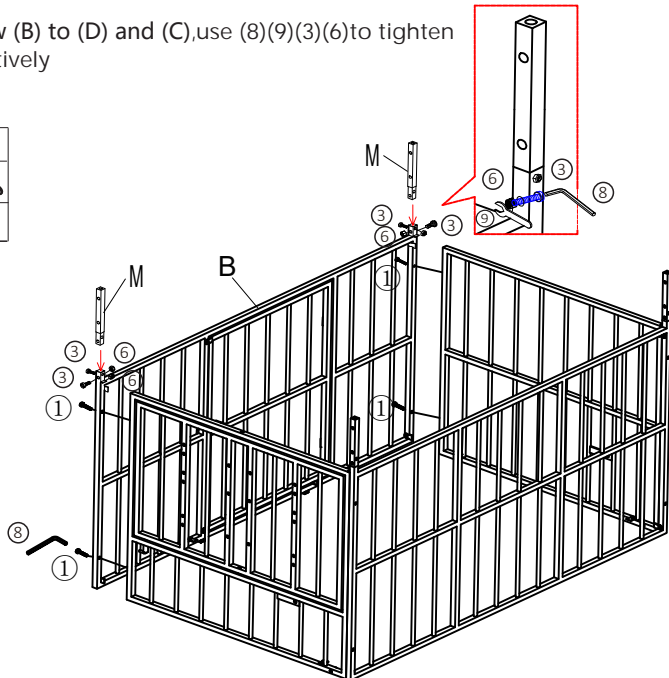


	①	③	⑥	⑧	⑨
					
	4PCS	4PCS	4PCS	1PC	1PC
Required Tools					
	B		1PC		
	M		2PCS		




☆ Please pay attention to the hole position in the picture and screw it in vertically

## STEP 3




Use (1)(8) to screw the two (N) according to the picture

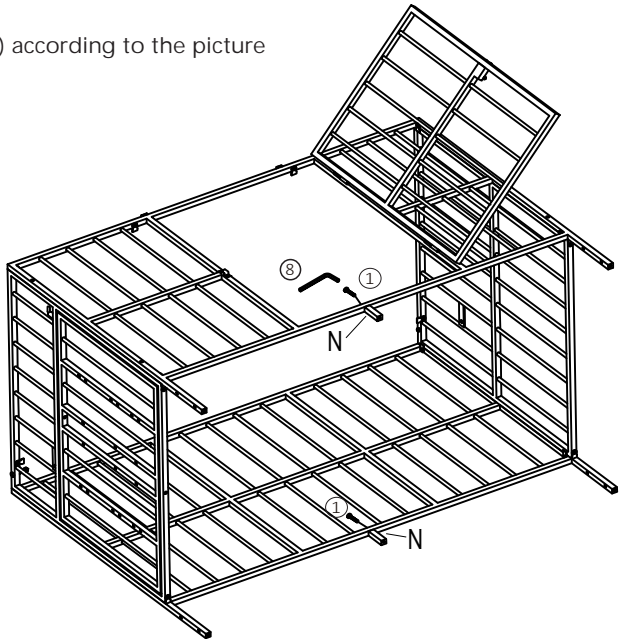
Required Tools	①	⑧
		
	2PCS	1PC
	N	
		2PCS



## STEP 4

Put (F) into the dog cage from the bottom and screw (F) from the four sides with (1) and (8)

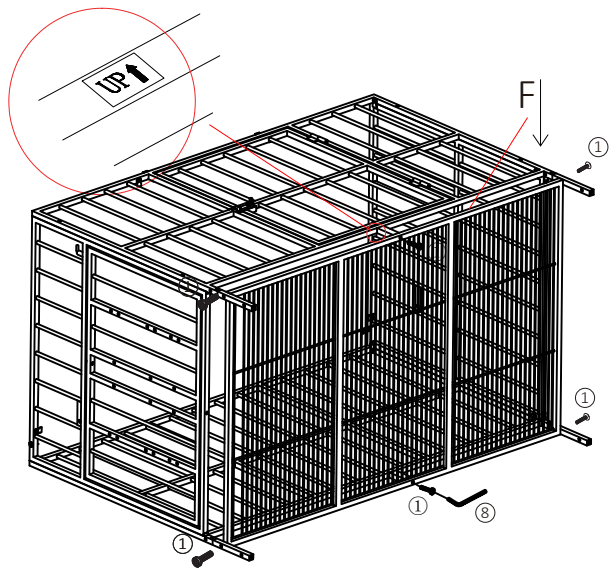


Required Tools	①	⑧
		
	6PCS	1PC
	F	
		1PC




☆ Please pay attention to the hole position in the picture and screw it in vertically

# STEP 5



Put (G) into the dog cage from the bottom and screw (G) from the four sides with(1) and (8)

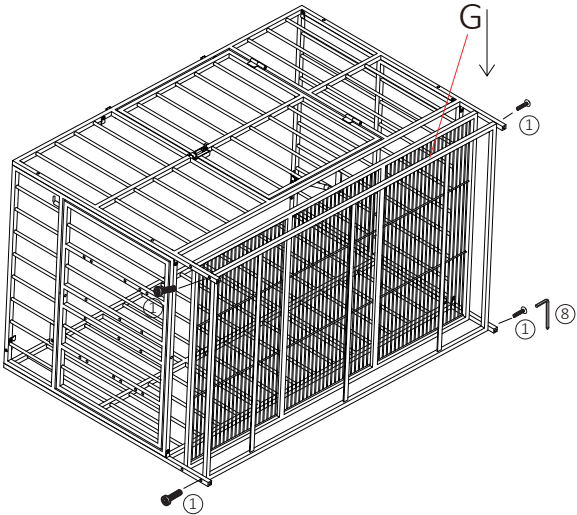
Required Tools	①	⑧	
			
	4PCS	1PC	
	G		1PC



# STEP 6

Use (11) to install the four (L) universal wheels on the dog cage from the bottom


Required Tools	⑪		1PC
	L		4PCS

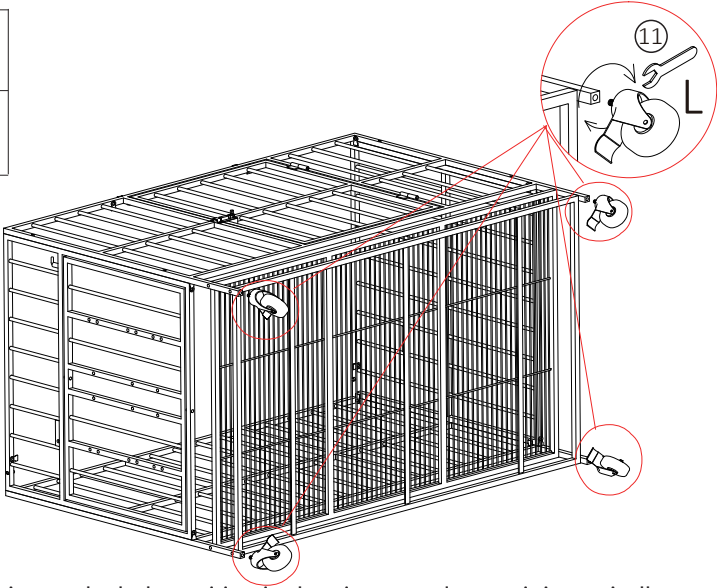

☆ Please pay attention to the hole position in the picture and screw it in vertically


# STEP 7

Use (4) (12) to install (K) to (E) as shown in the figure

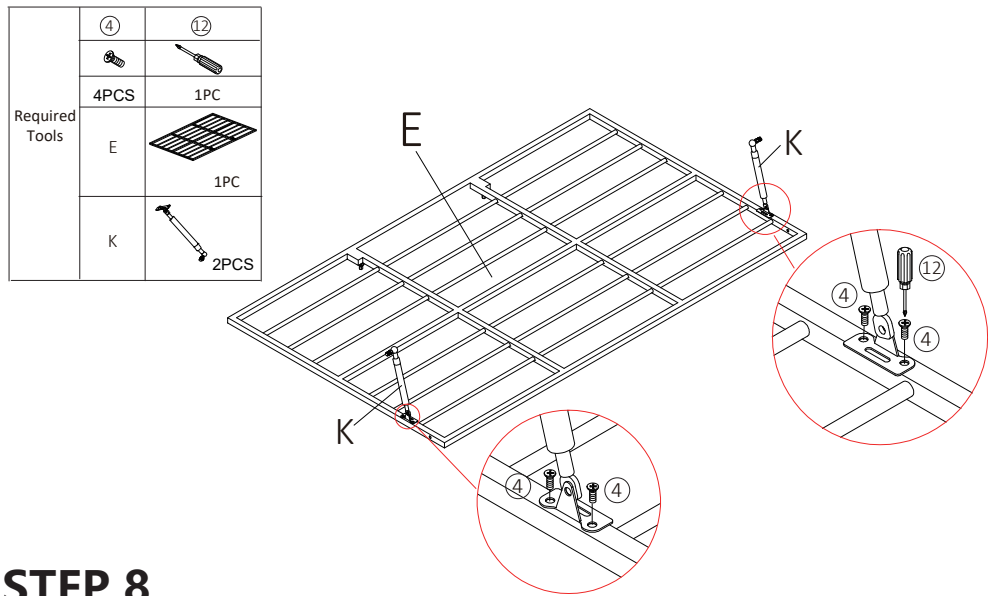

# STEP 8

Put (E+K) into the dog cage from the top, and use (2)(6)(8)(9) to screw it from the left and right ends respectively

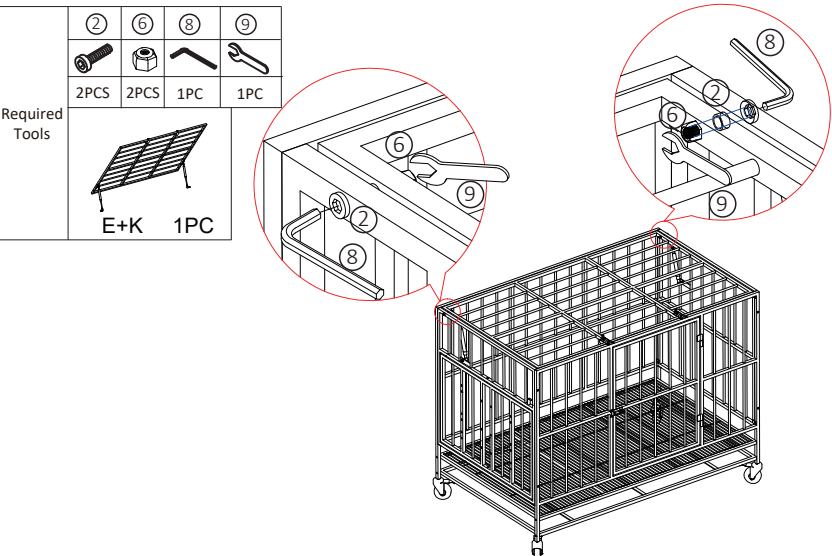


☆ Please pay attention to the hole position in the picture and screw it in vertically

# STEP 9

Use (5)(10)(11) to screw the hydraulic rod from the left and right ends, and then put (H) into the dog cage from the bottom

	(5)	(10)	(11)	H
Required Tools				
	2PCS	1PC	1PC	1PC

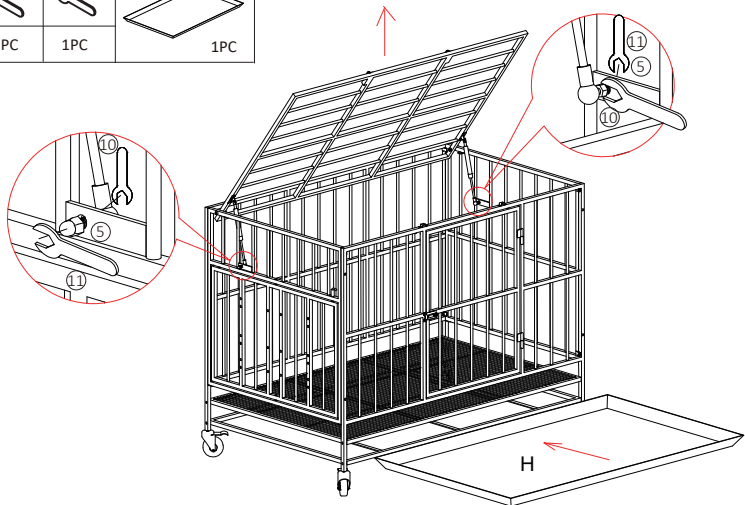


# STEP 10


Use tools (3)(7)(8)(9) to screw the dog feeding tray (I) to the (C) iron frame  
You can measure the height of the dog according to the method shown in the figure and then select the corresponding installation height of the dog feeding tray

1. Measure your dog from the floor to the highest point of their shoulder blades.
2. Match your dog's measurement to the feeder height on the chart.

	(3)	(7)	(8)	(9)	I
Required Tools					
	6PCS	6PCS	1PC	1PC	1PC

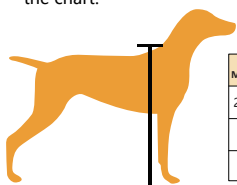

Dog Measurement	Feeder Height
21" & Taller	20"
15" - 20"	14"
10" - 14"	8"

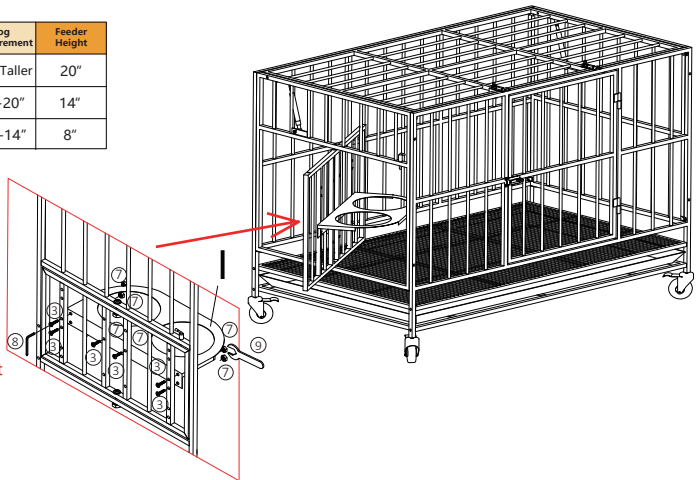


**NOTE:**


The three pairs of holes are respectively 8 inches, 14 inches and 20 inches from the height of the bottom iron net

☆ Please pay attention to the hole position in the picture and screw it in vertically


## STEP 11

Place the dog bowl (J) into the feeding tray.

Required Tools	J
	
	2PCS

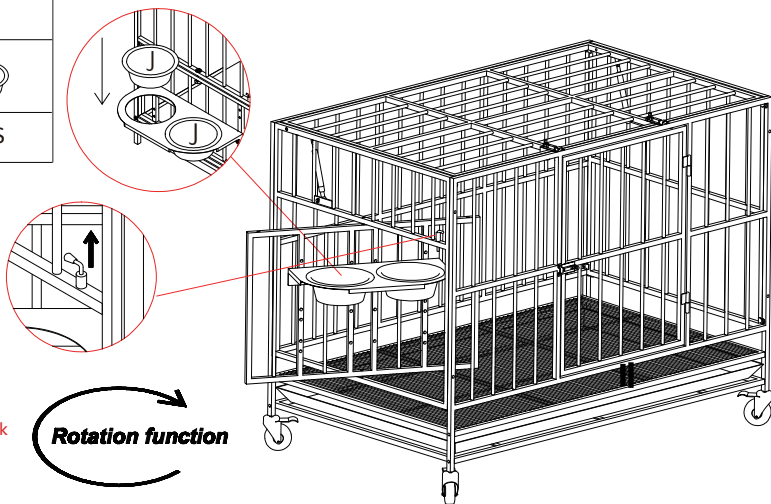

## STEP 12

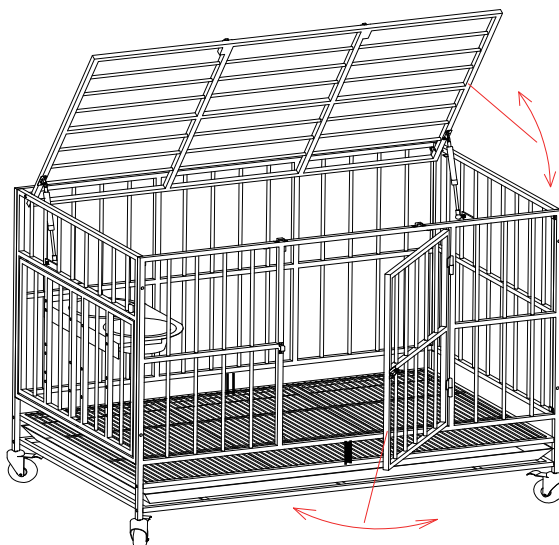

☆ Please pay attention to the hole position in the picture and screw it in vertically





# Thank You for Your Purchase!

We truly appreciate your trust in our products and our team. We hope this item adds lasting value and enjoyment to your home. Every product is carefully packaged and goes through a thorough quality check before it reaches you.

If you have any questions or run into any issues—whether it's with shipping or the product itself—don't hesitate to get in touch. We're here to help and committed to making things right.

Sincerely,  
The Lilly & Max Team