



N704P277398D

N704P277399D



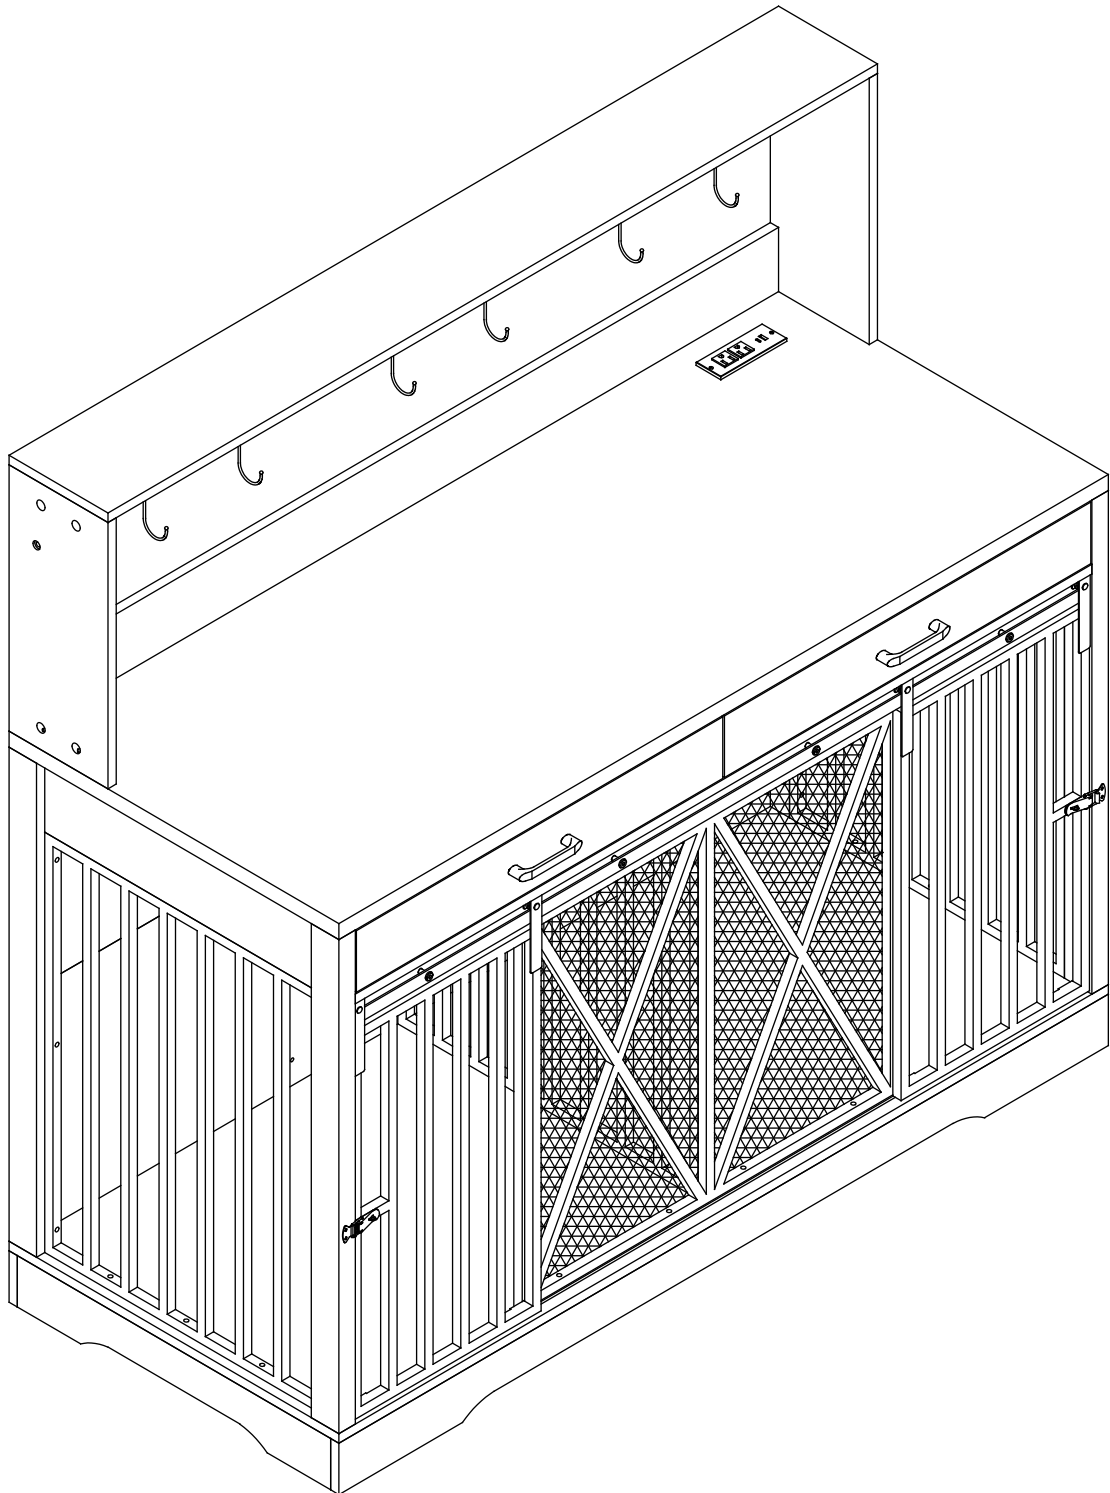


2PERS

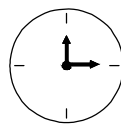

45 MIN

Tool Required Not Provided

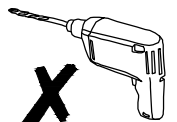



[EN]

Warning: Please read these instructions fully before starting assembly. Check you have all the components and tools listed on pages. Keep the instructions for later reference. Parts of the assembly will be easier with 2 people. Seek professional assistance if necessary.

Warning: Please place all parts on a flat surface. Place a soft blanket or similar underneath to protect against scratches or stains. Avoid dragging or sliding components across the floor.


Warning: Regularly check all fittings and fastenings to ensure they are secure and to prevent accidents. If any parts are missing, broken, damaged, or worn, discontinue use of the product until repairs have been made using factory authorized parts.

Warning: Do not allow children to climb on the furniture as this may result in tipping and serious personal injury. Assemble the furniture away from the reach of children.















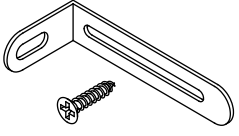
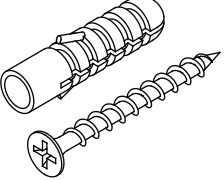
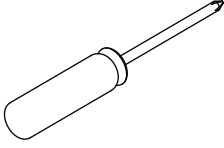
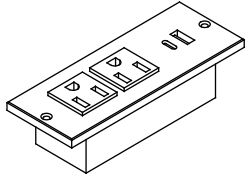

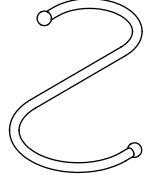

Warning: Do not place furniture close to fire sources or high-temperature objects to avoid the risk of fire. Do not place furniture in damp environments to prevent material damage.


Warning: Clean furniture with a damp cloth or alcohol, avoid using cleaning agents containing corrosive chemicals.

Warning: This product is equipped with an anti-tilt device. Please be sure to install this device to prevent unnecessary injuries caused by tipping.

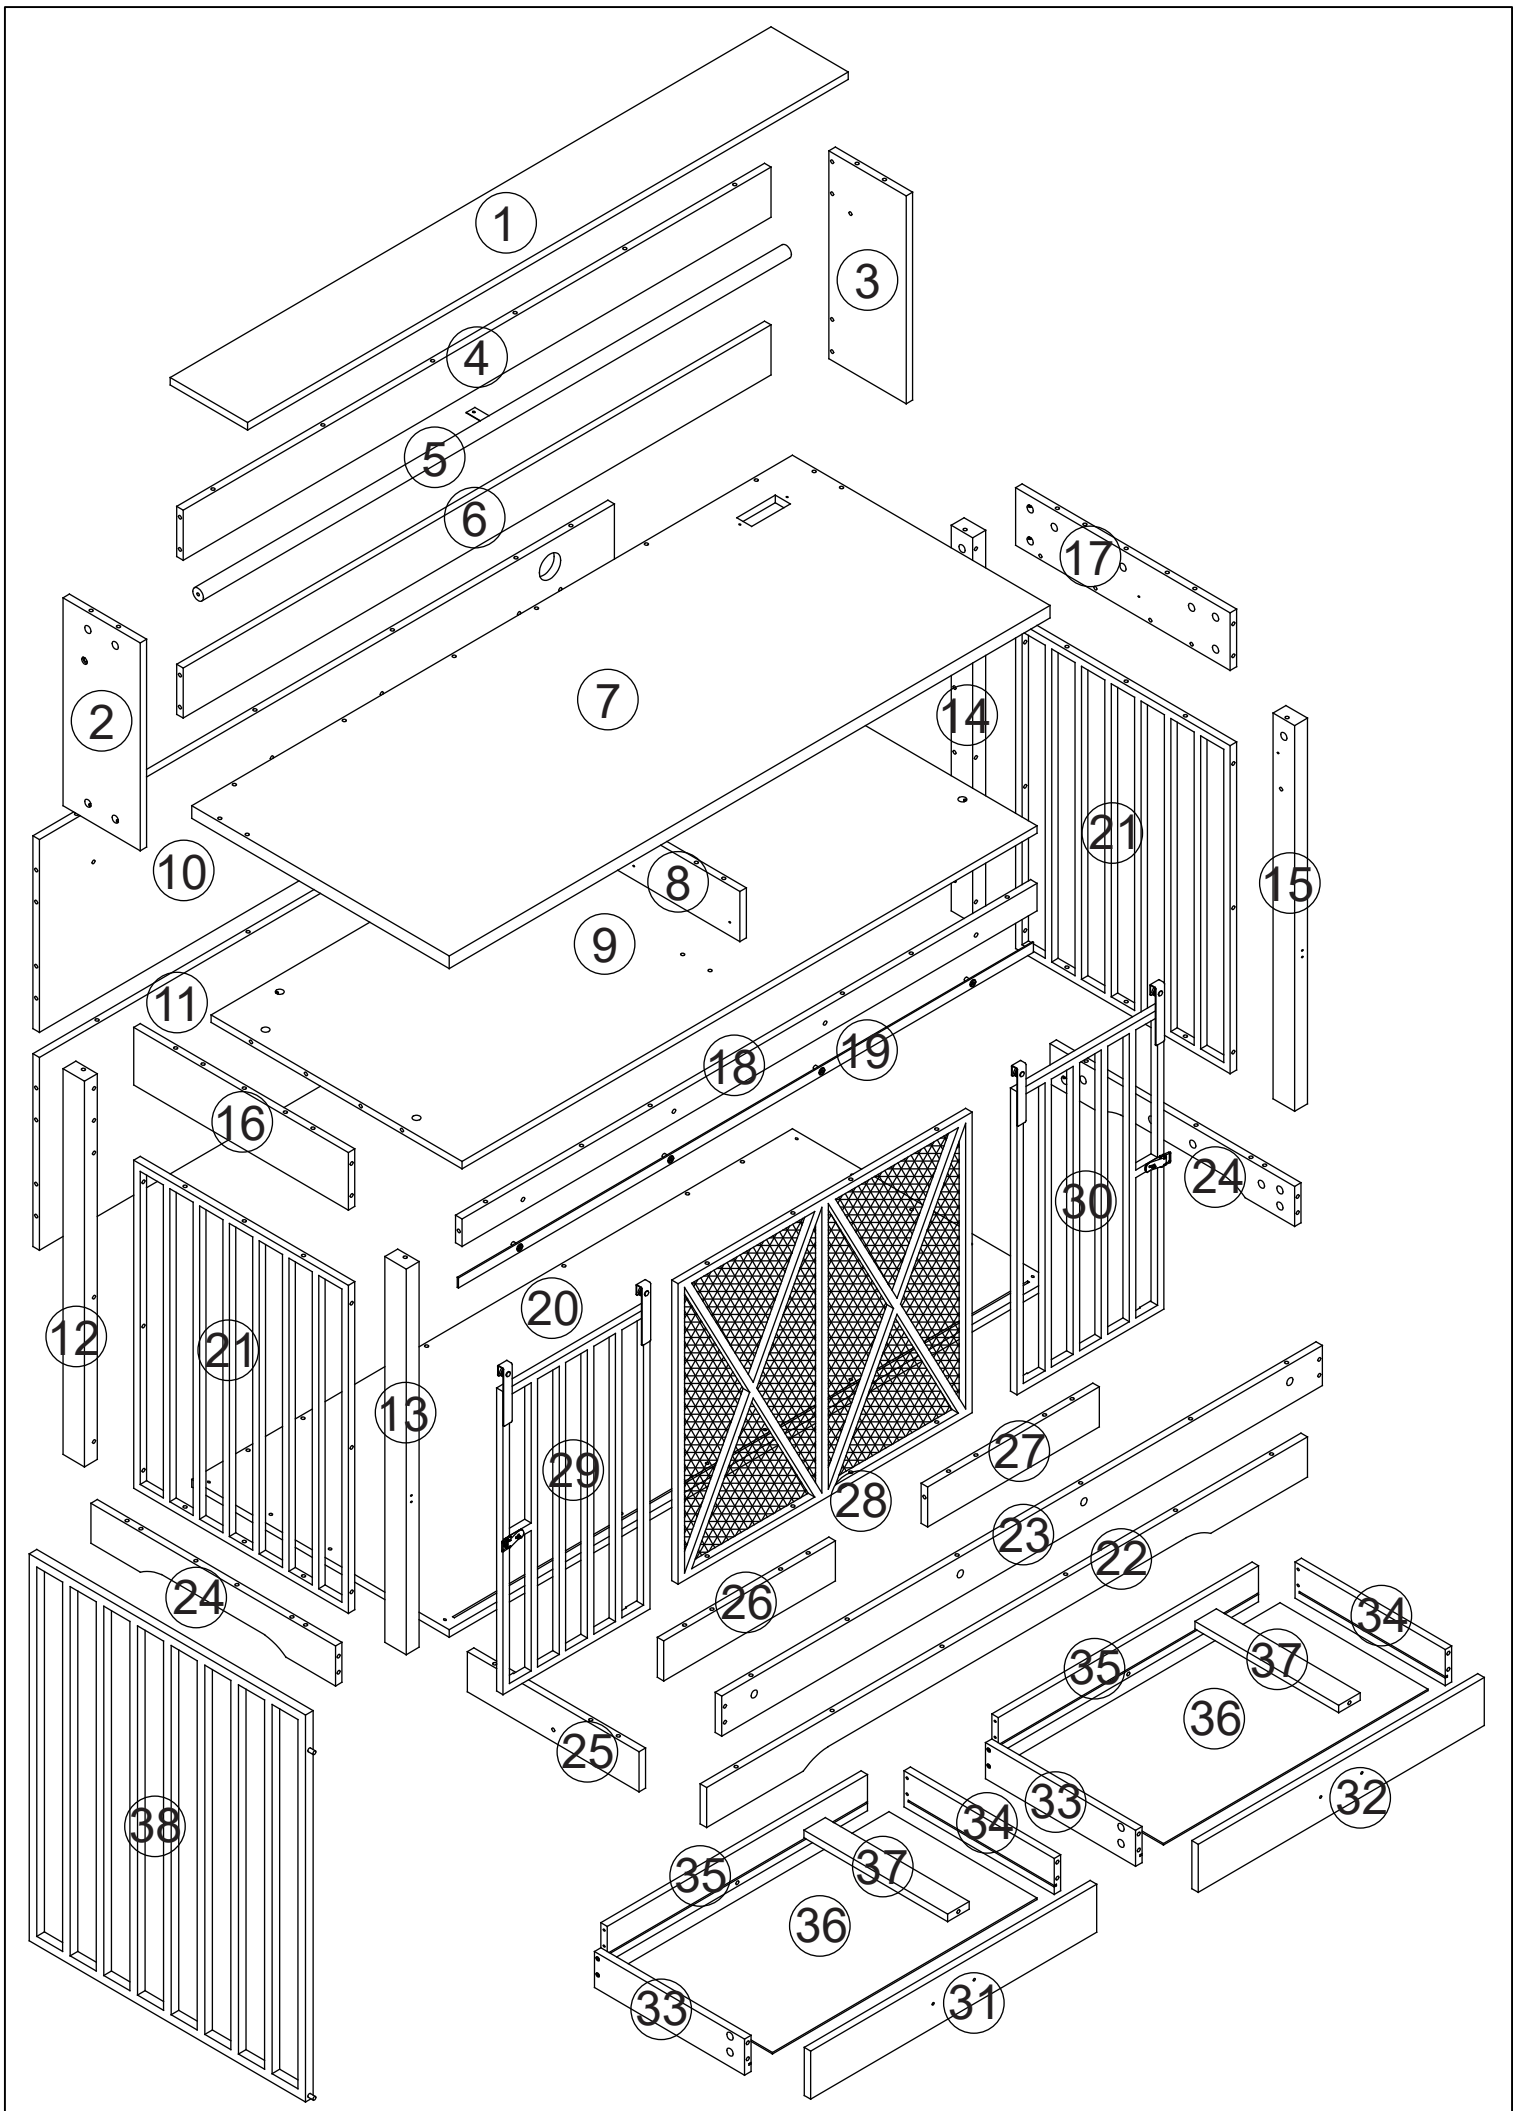


Hardwareliste

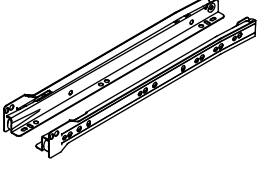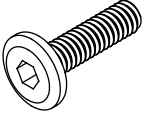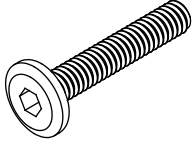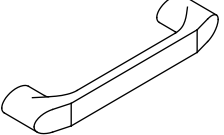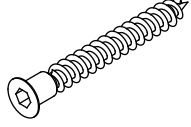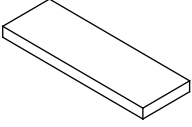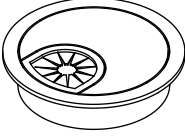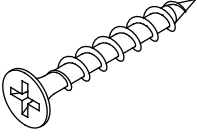
<p>A x 120+2</p>  <p>7x40mm</p>	<p>B x 120+2</p>  <p>15x10mm</p>	<p>C x 50+2</p> 	<p>D x 23+2</p> 	<p>E x 2</p> 
<p>F x 24+1</p> 	<p>G x 6</p> 	<p>H x 4</p> 	<p>I x 2</p> 	<p>J x 14+1</p> 
<p>K x 4</p> 	<p>L x 1</p> 	<p>M x 8+1</p> 	<p>N x 120+2</p> 	<p>O x 2</p> 
<p>P x 2</p> 	<p>Q x 1</p> 	<p>R x 1</p> 	<p>S x 2</p> 	<p>T x 6</p> 
<p>U x 1</p> 				

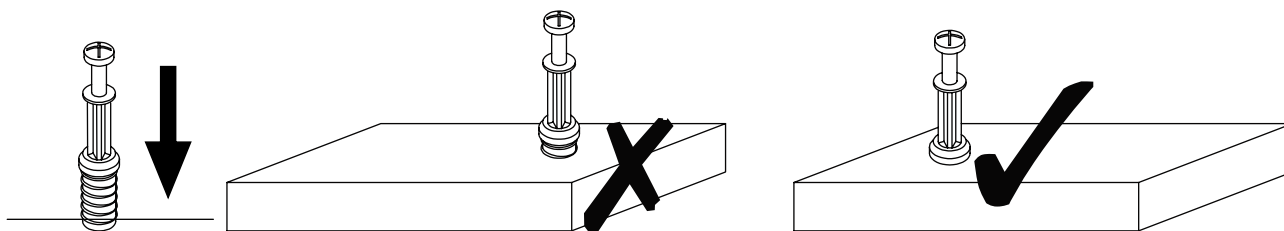


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

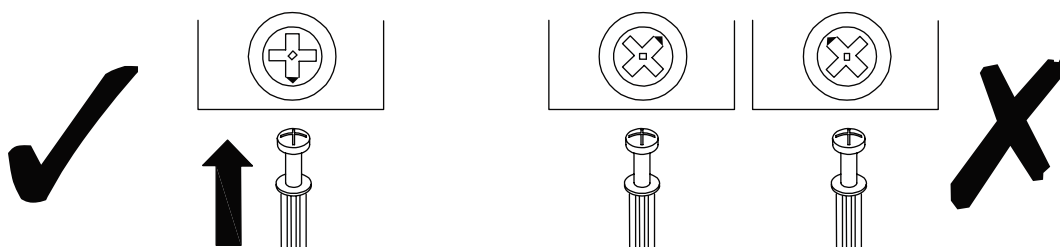

EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

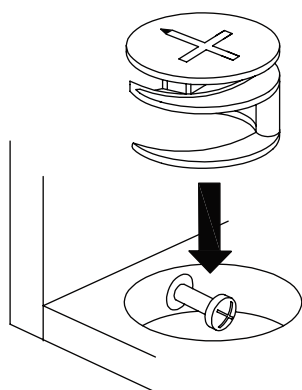























EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

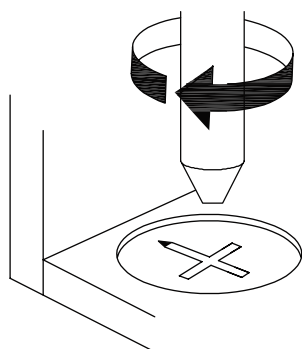


















EN_Turn cam lock clockwise to tighten.

Before installation, insert the screws into the holes and tighten them, but do not tighten them to 100%, 70% to 80% is sufficient. Finally, after all screws are installed, tighten all screws to 100%.


N704P277398D

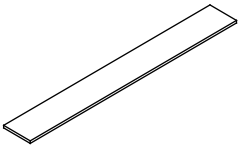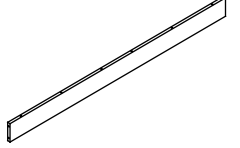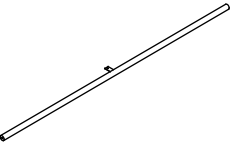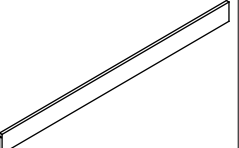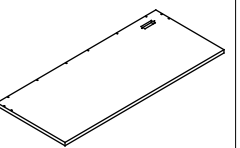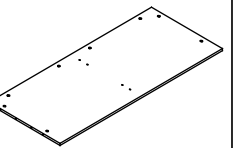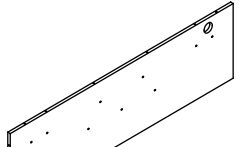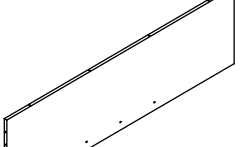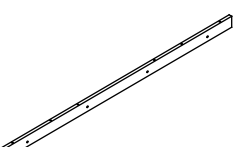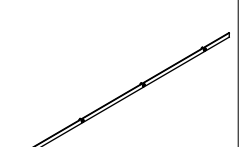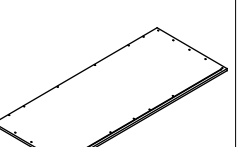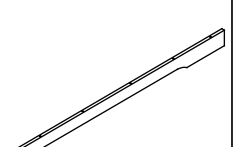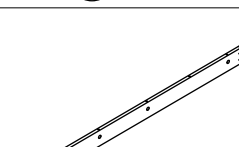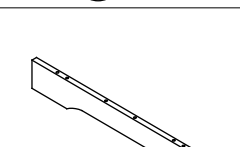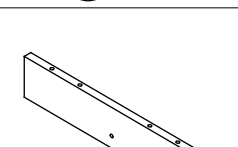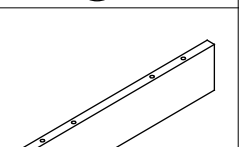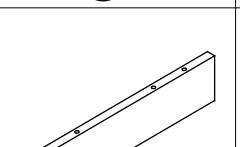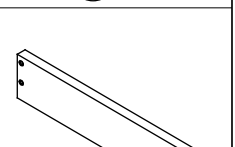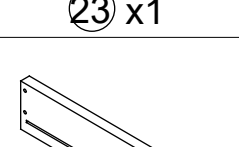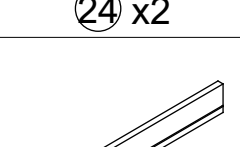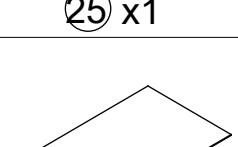
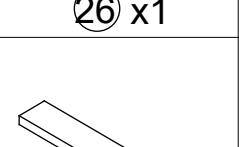
 ① x1	 ④ x1	 ⑤ x1	 ⑥ x1	 ⑦ x1	 ⑨ x1
 ⑩ x1	 ⑪ x1	 ⑱ x1	 ⑲ x1	 ⑳ x1	 ㉒ x1
 ㉓ x1	 ㉔ x2	 ㉕ x1	 ㉖ x1	 ㉗ x1	 ㉓ x2
 ㉔ x2	 ㉕ x2	 ㉖ x2	 ㉗ x2		

N704P277399D

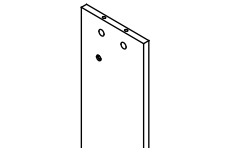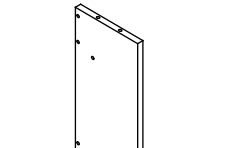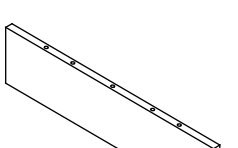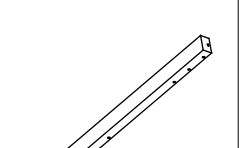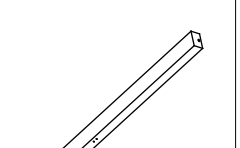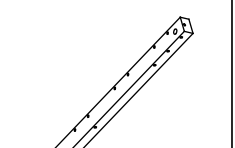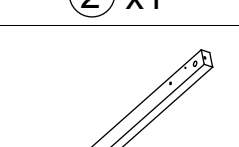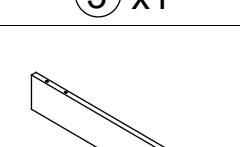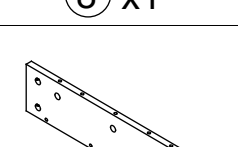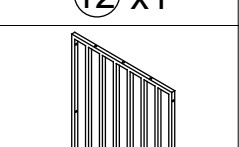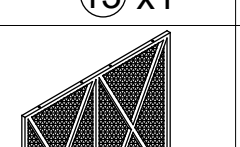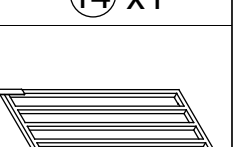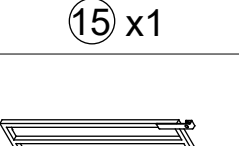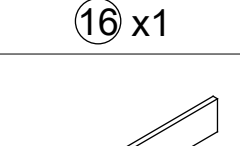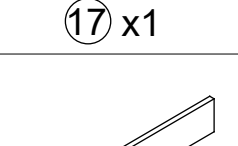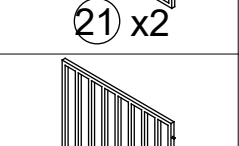
 ② x1	 ③ x1	 ⑧ x1	 ⑫ x1	 ⑬ x1	 ⑭ x1
 ⑮ x1	 ⑯ x1	 ⑰ x1	 ㉑ x2	 ㉘ x1	 ㉙ x1
 ⑳ x1	 ㉑ x1	 ㉒ x1	 ㉘ x1	 Hardware	


1

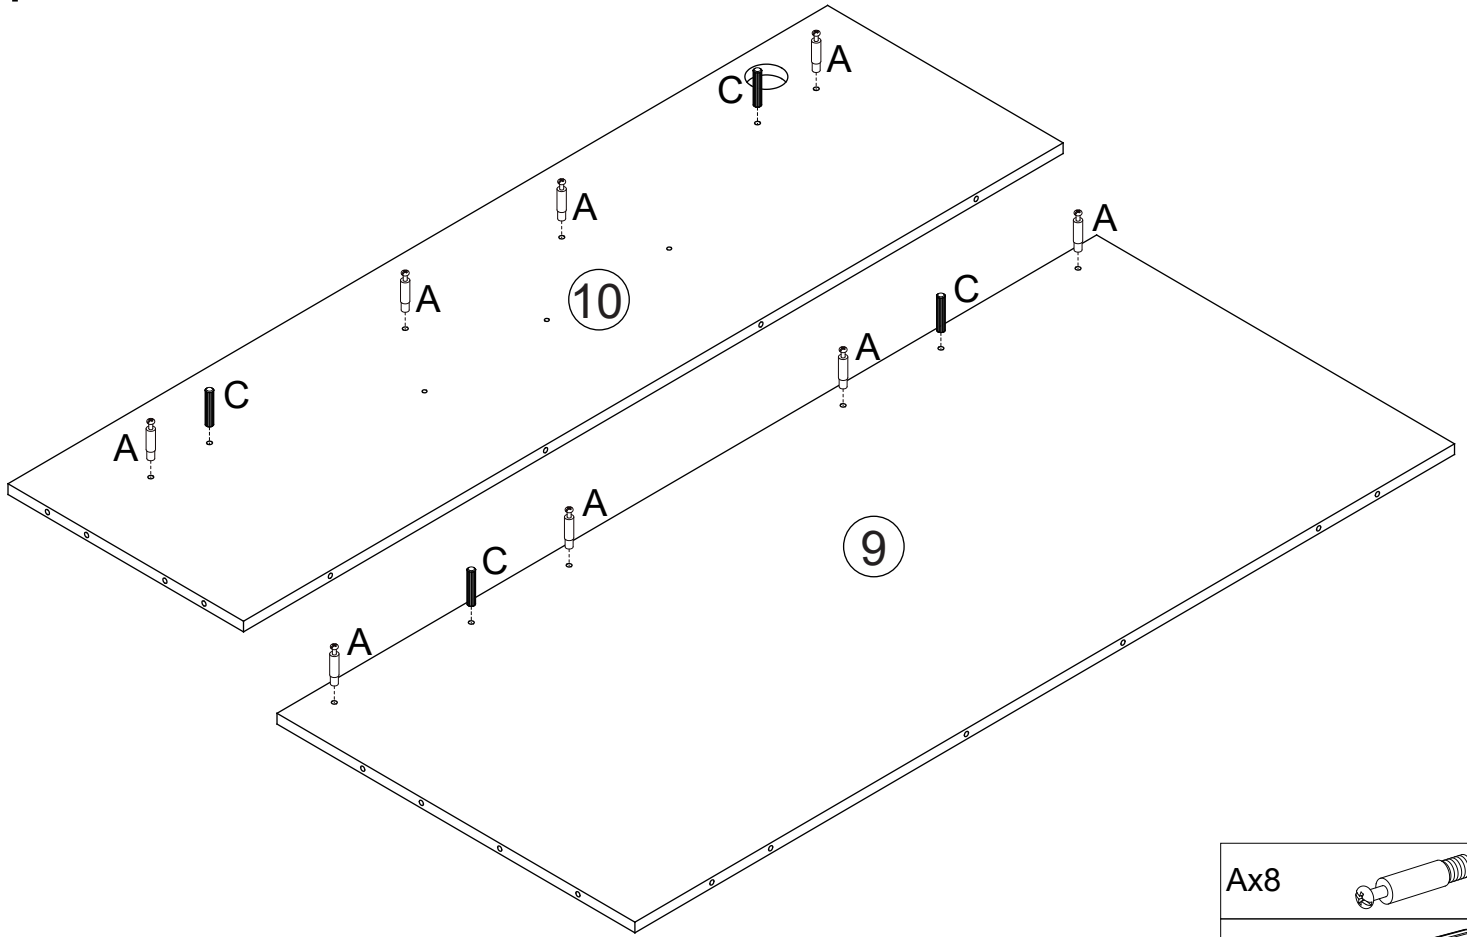


- Ax8 
- Cx4 

2

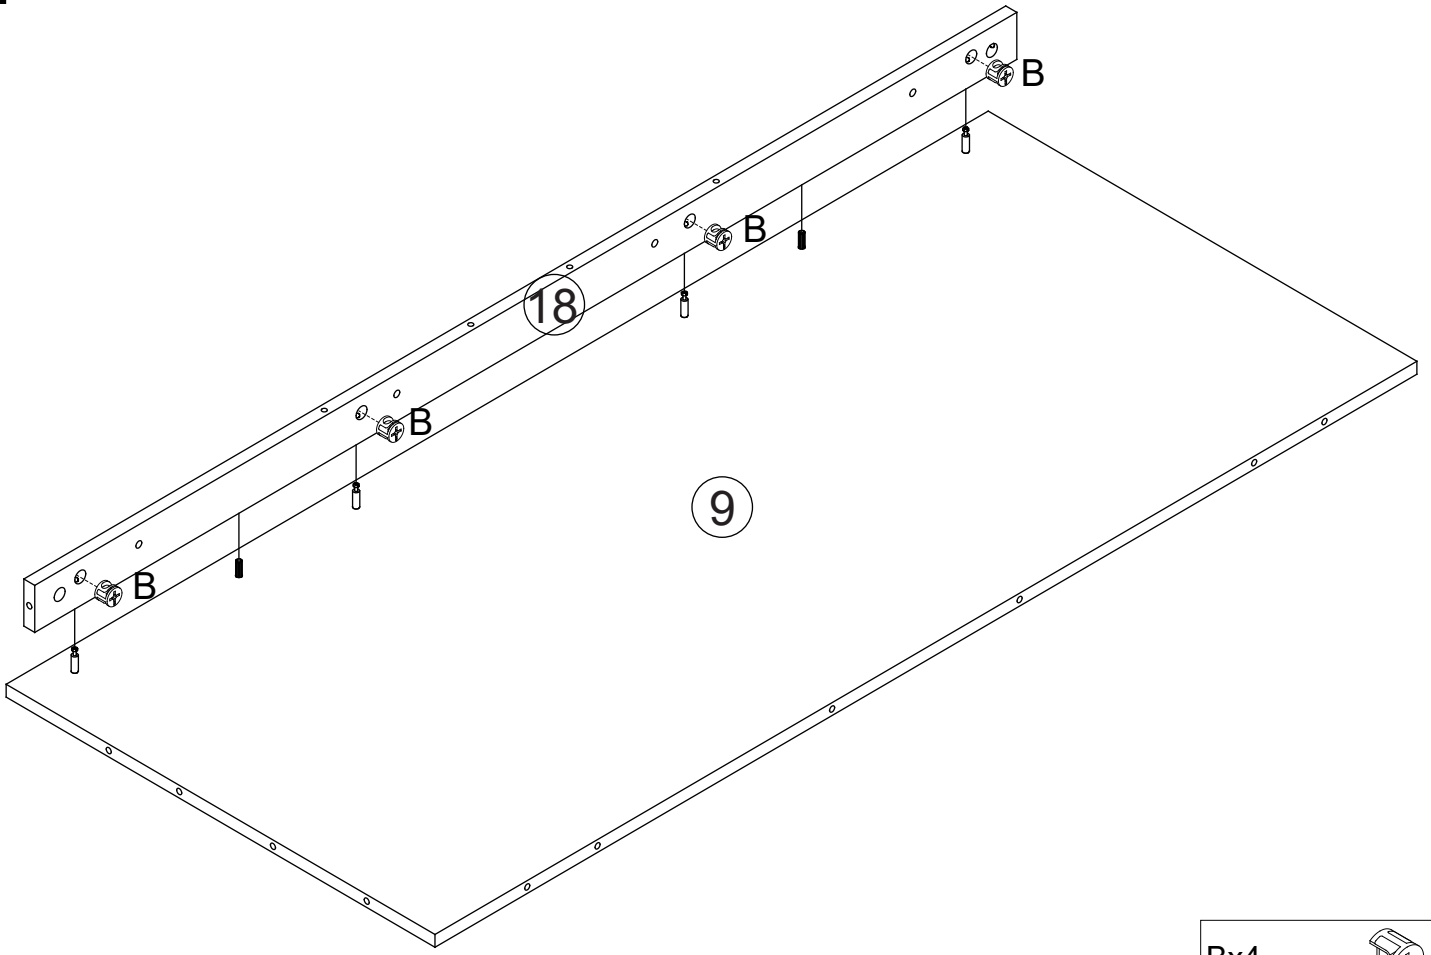

- Bx4 


3

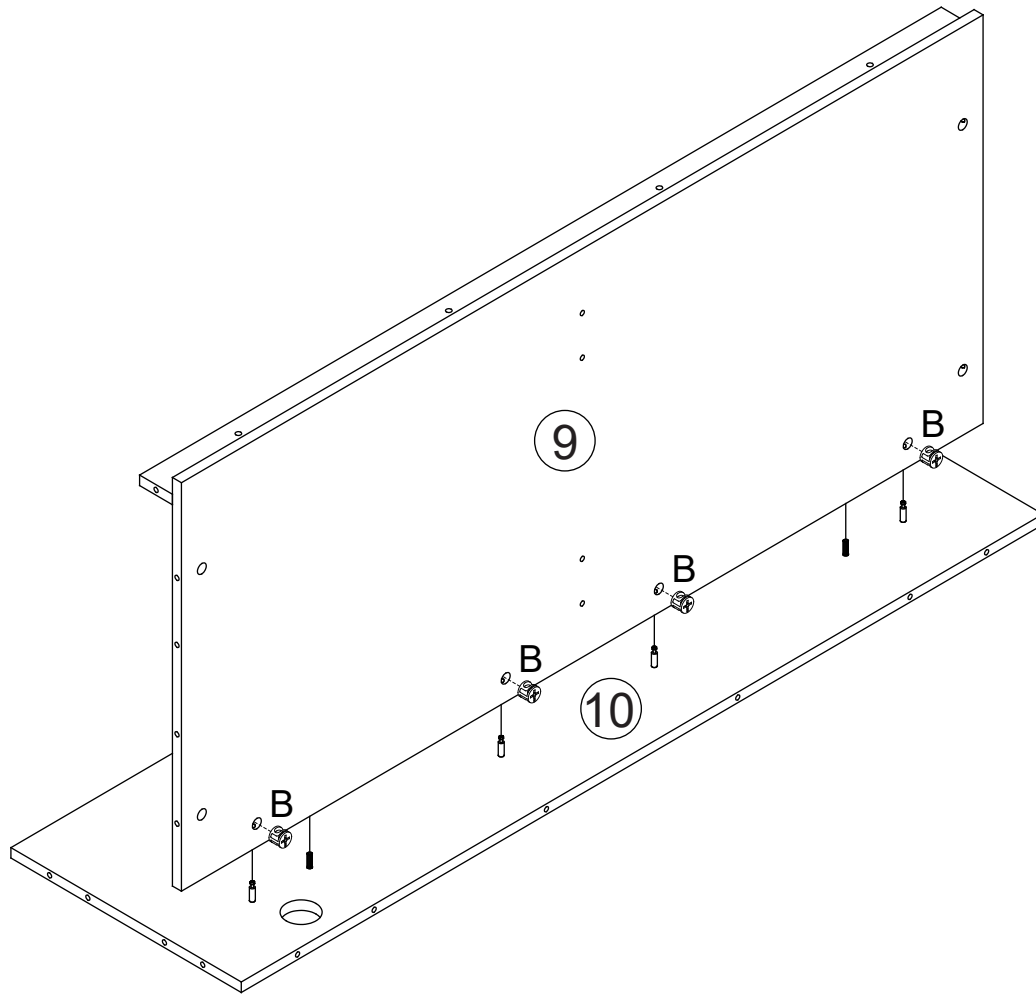

Bx4




4

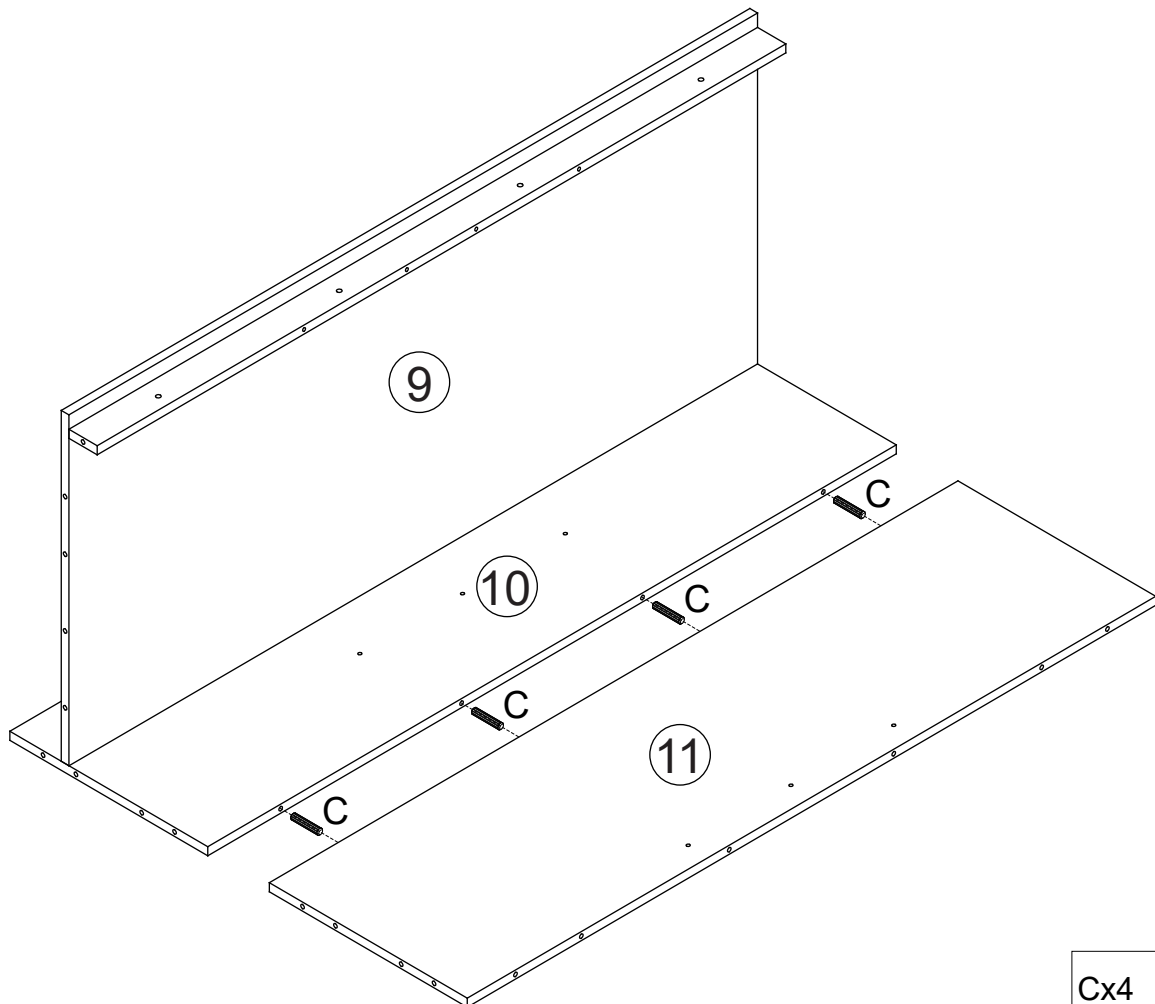



Cx4






5

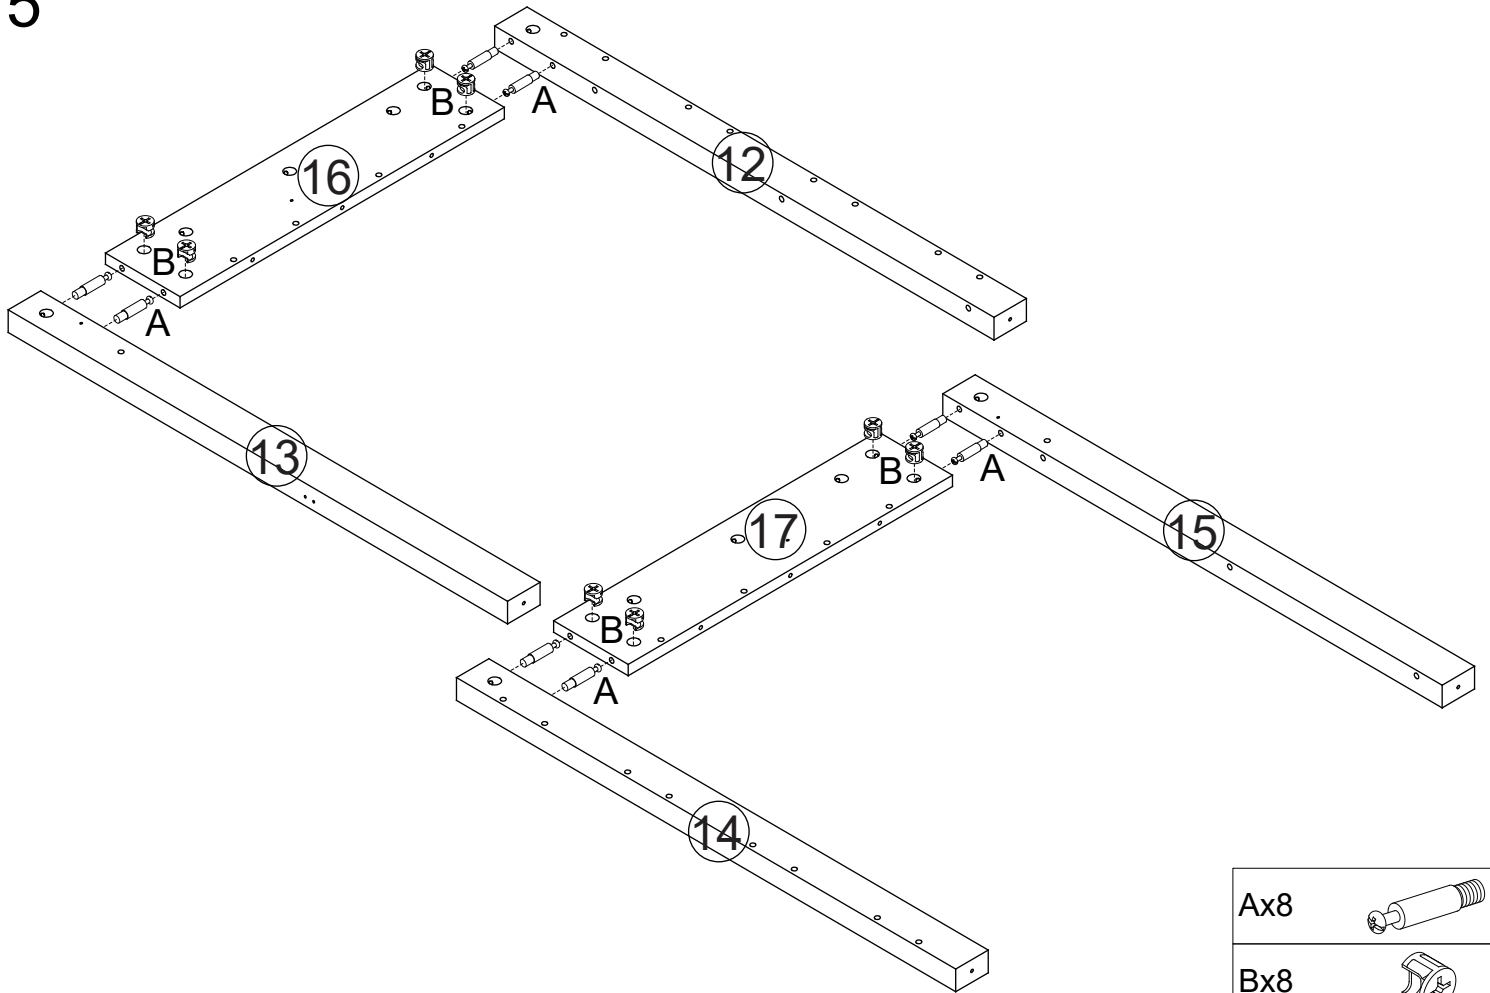


Ax8	
Bx8	

6

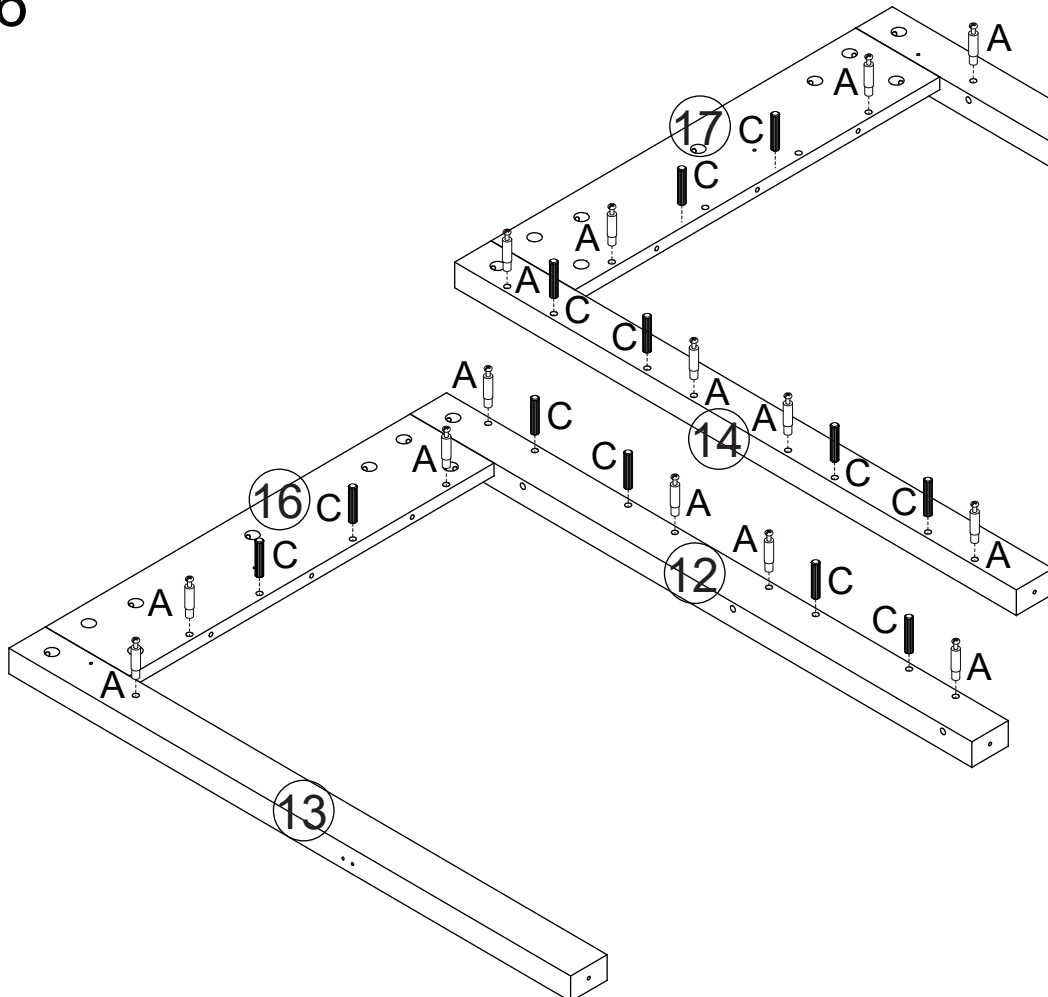




Ax14	
Cx12	


7

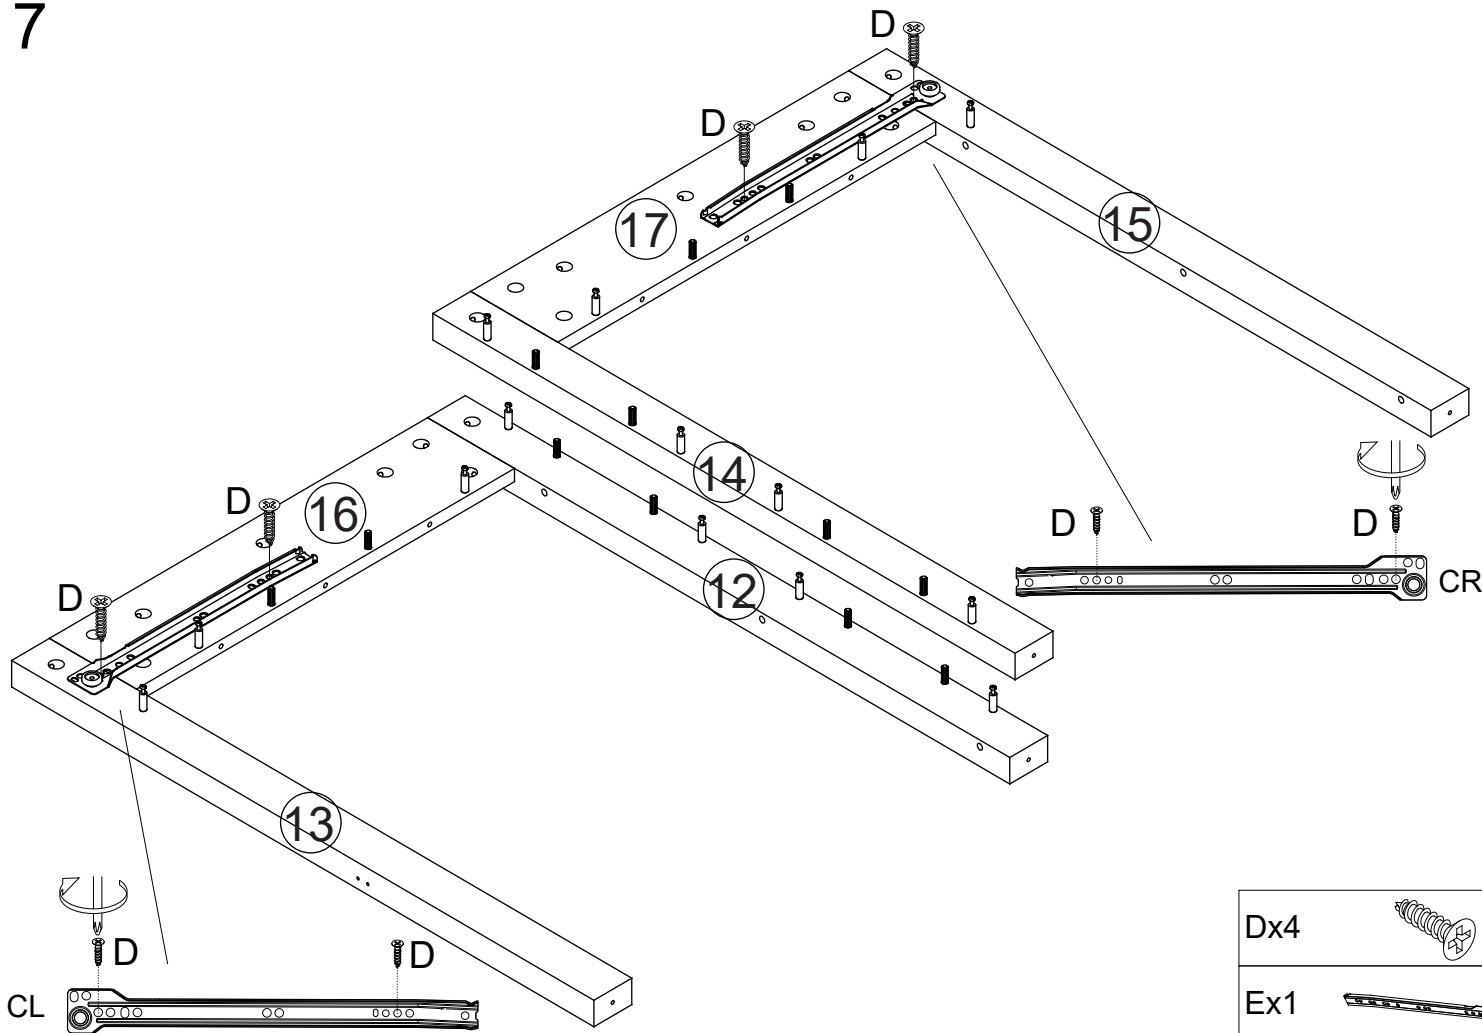


8

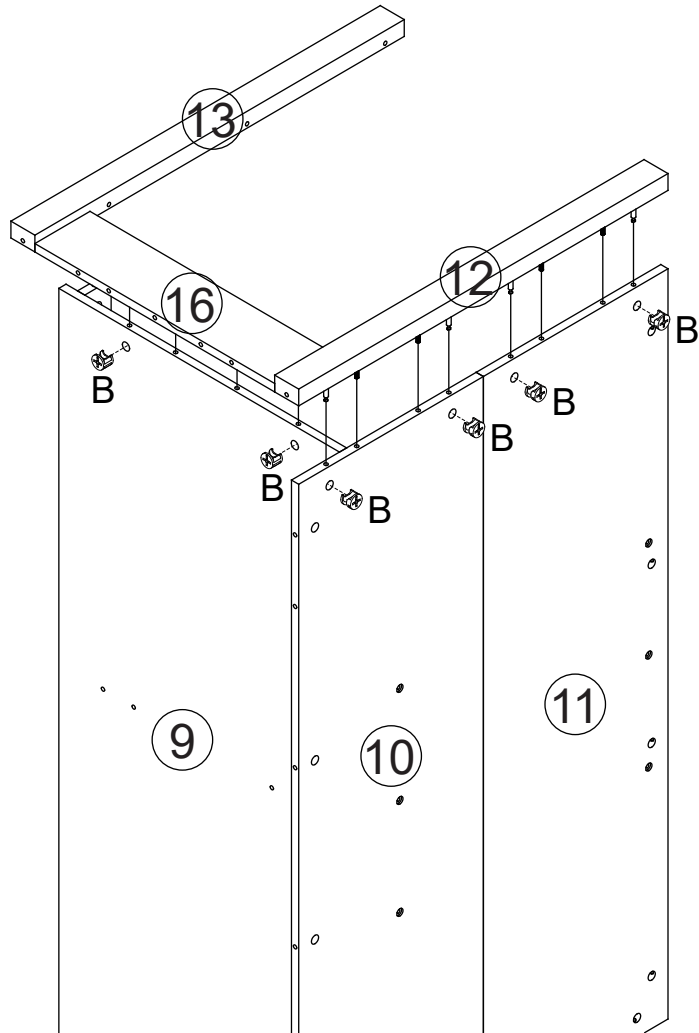

Dx4	
Ex1	

Bx7	
-----	---


9

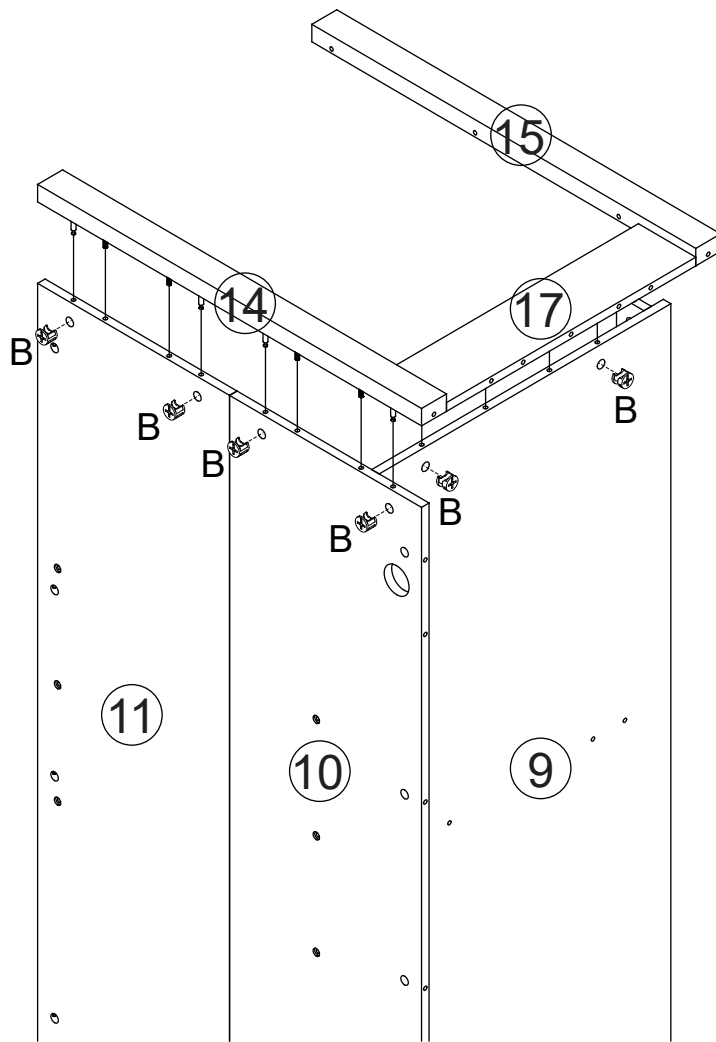


Bx7



10

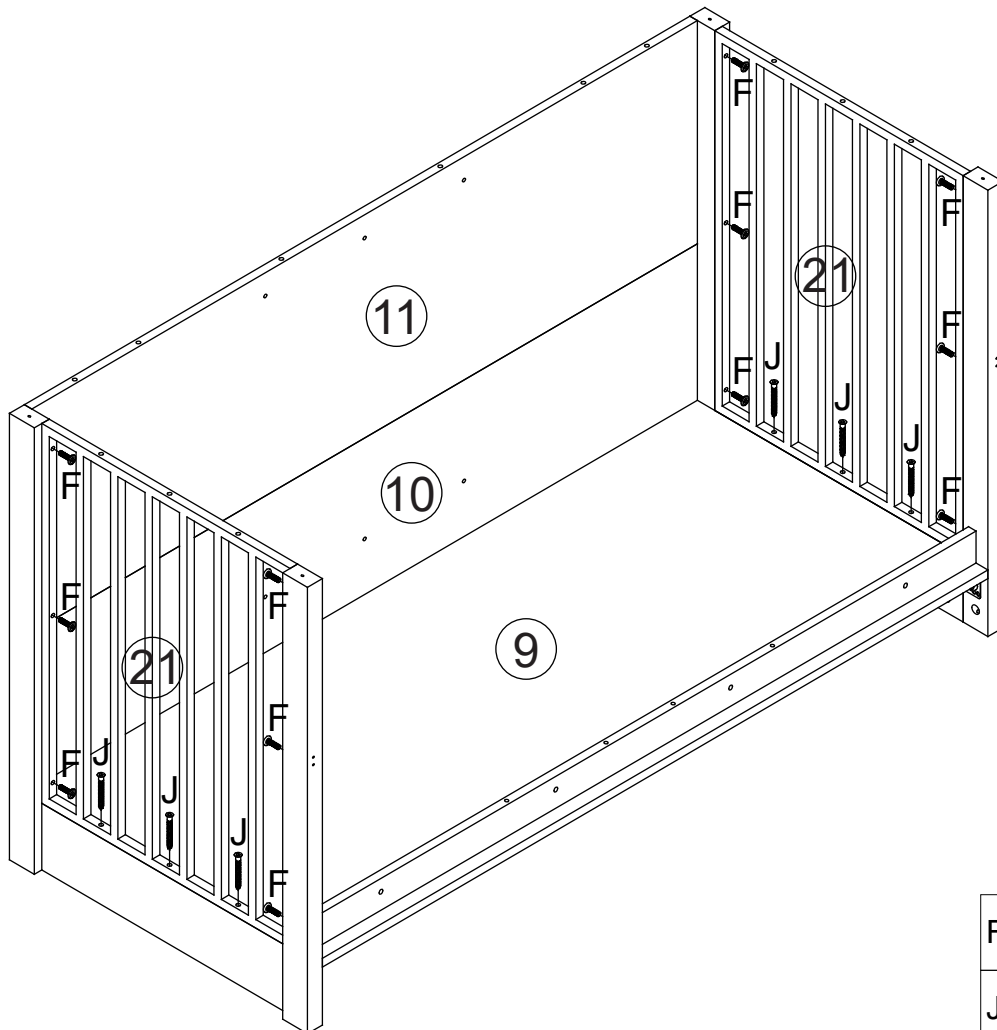


Fx12




Jx6






11

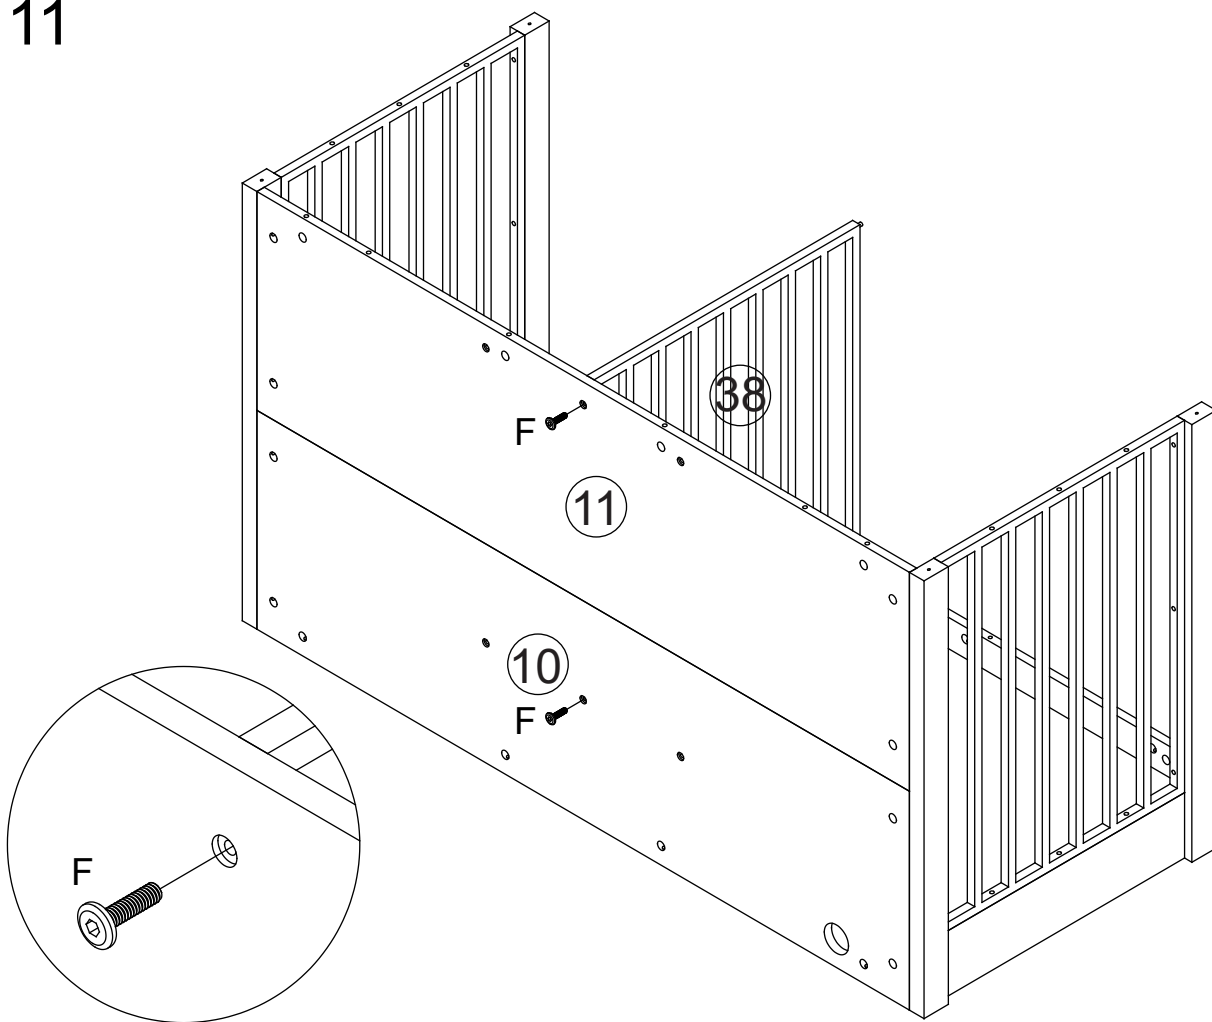

Fx2




12

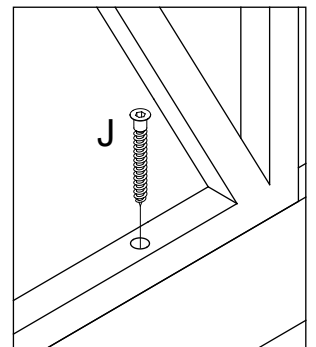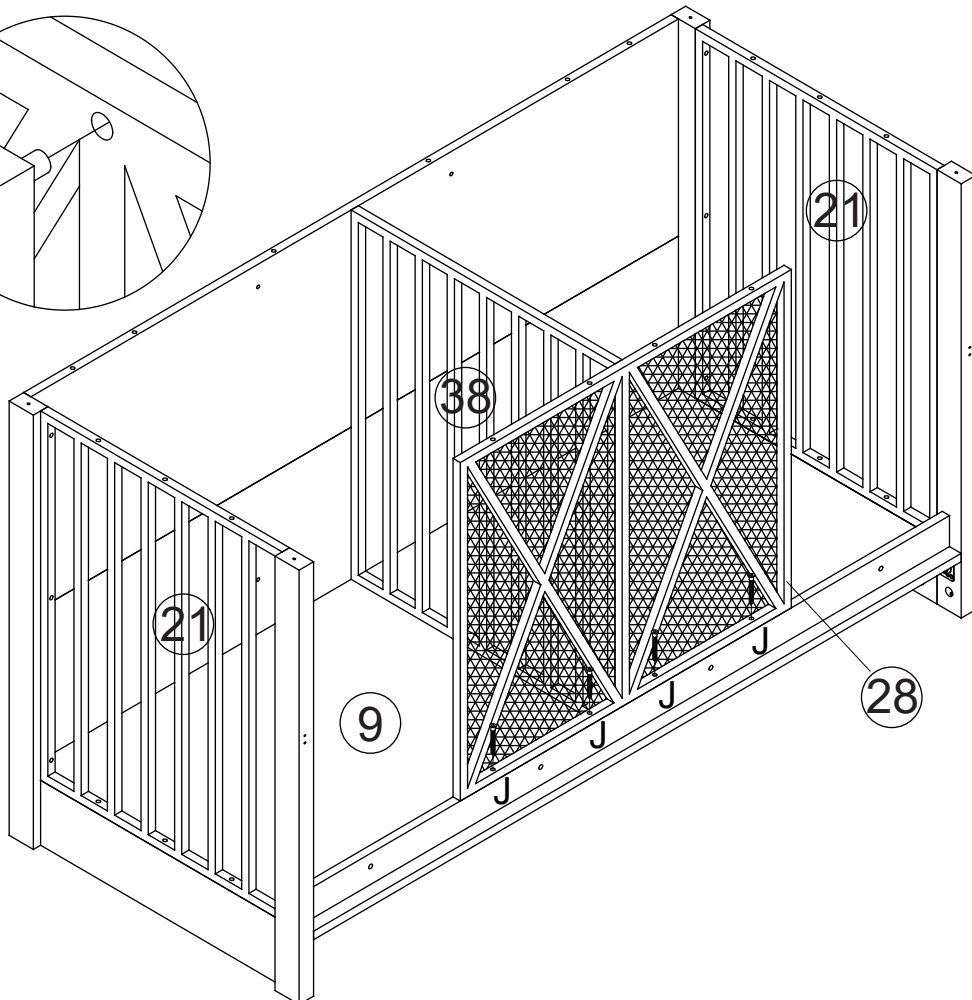
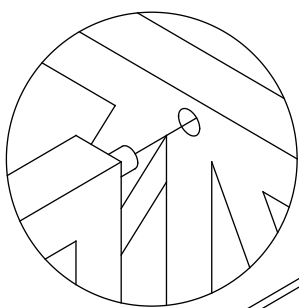


Jx4




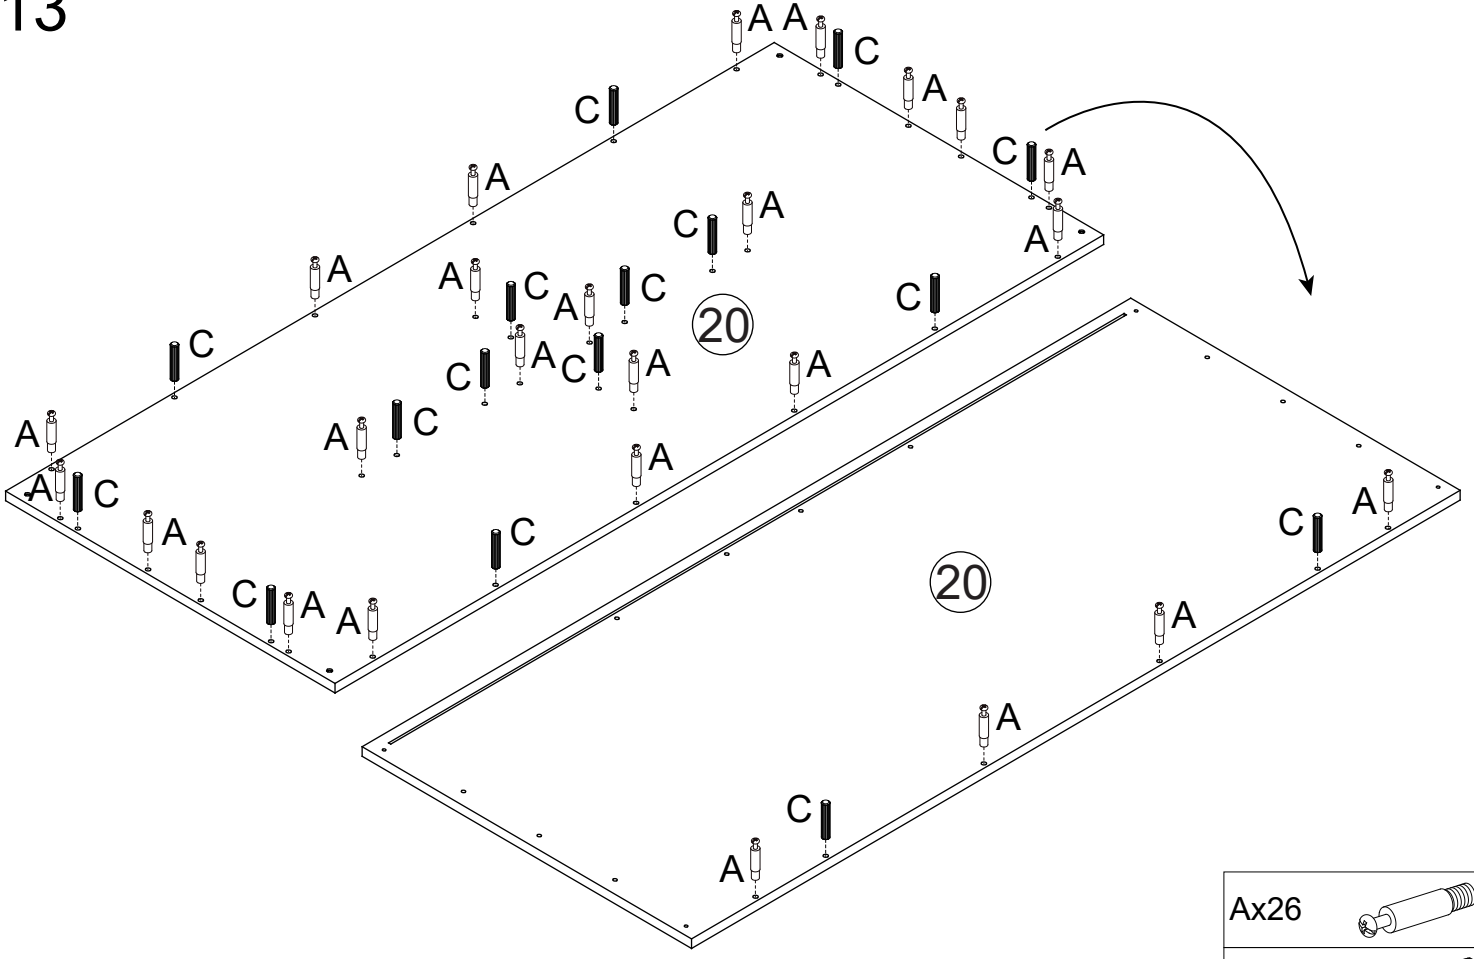

13




- Ax26 
- Cx16 

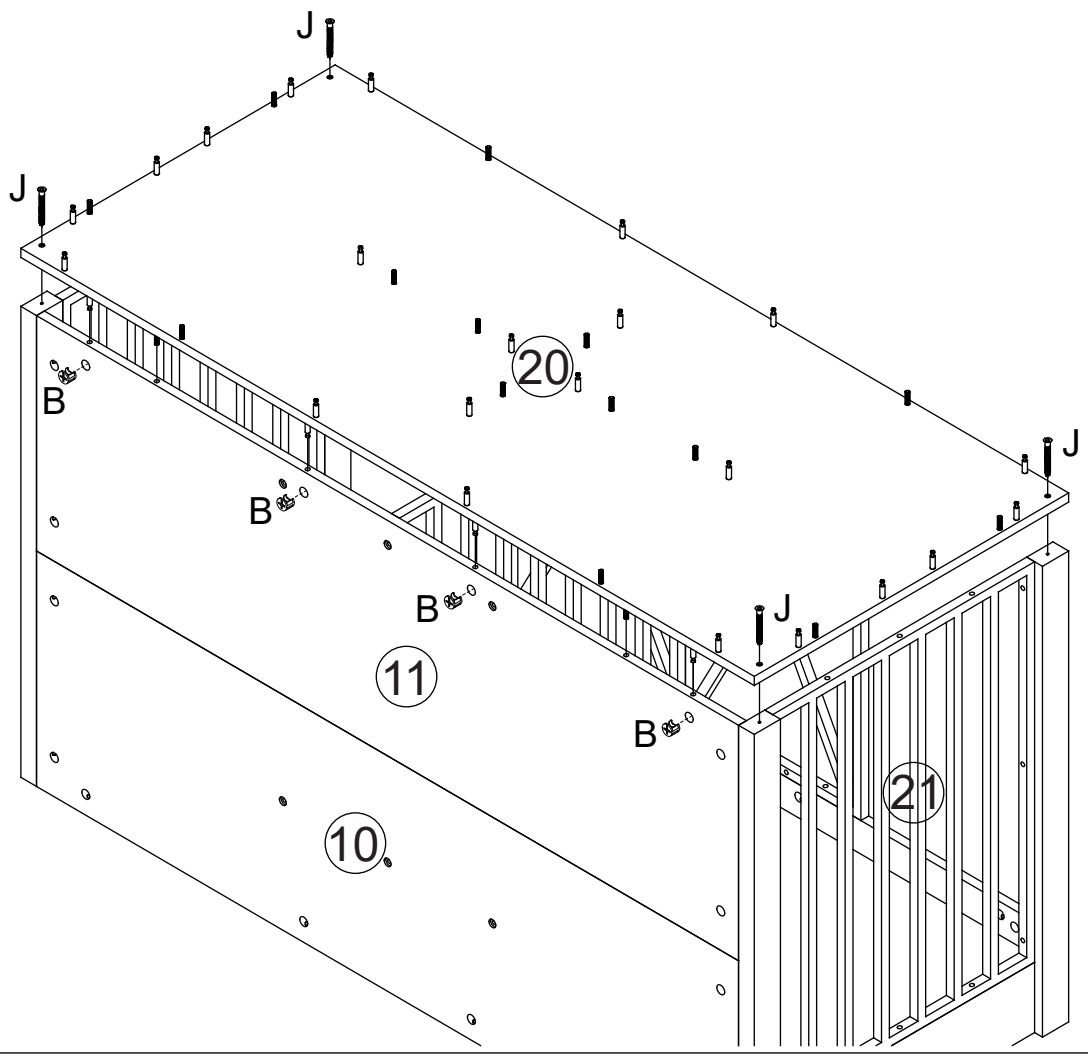14






- Bx4 
- Jx4 

15

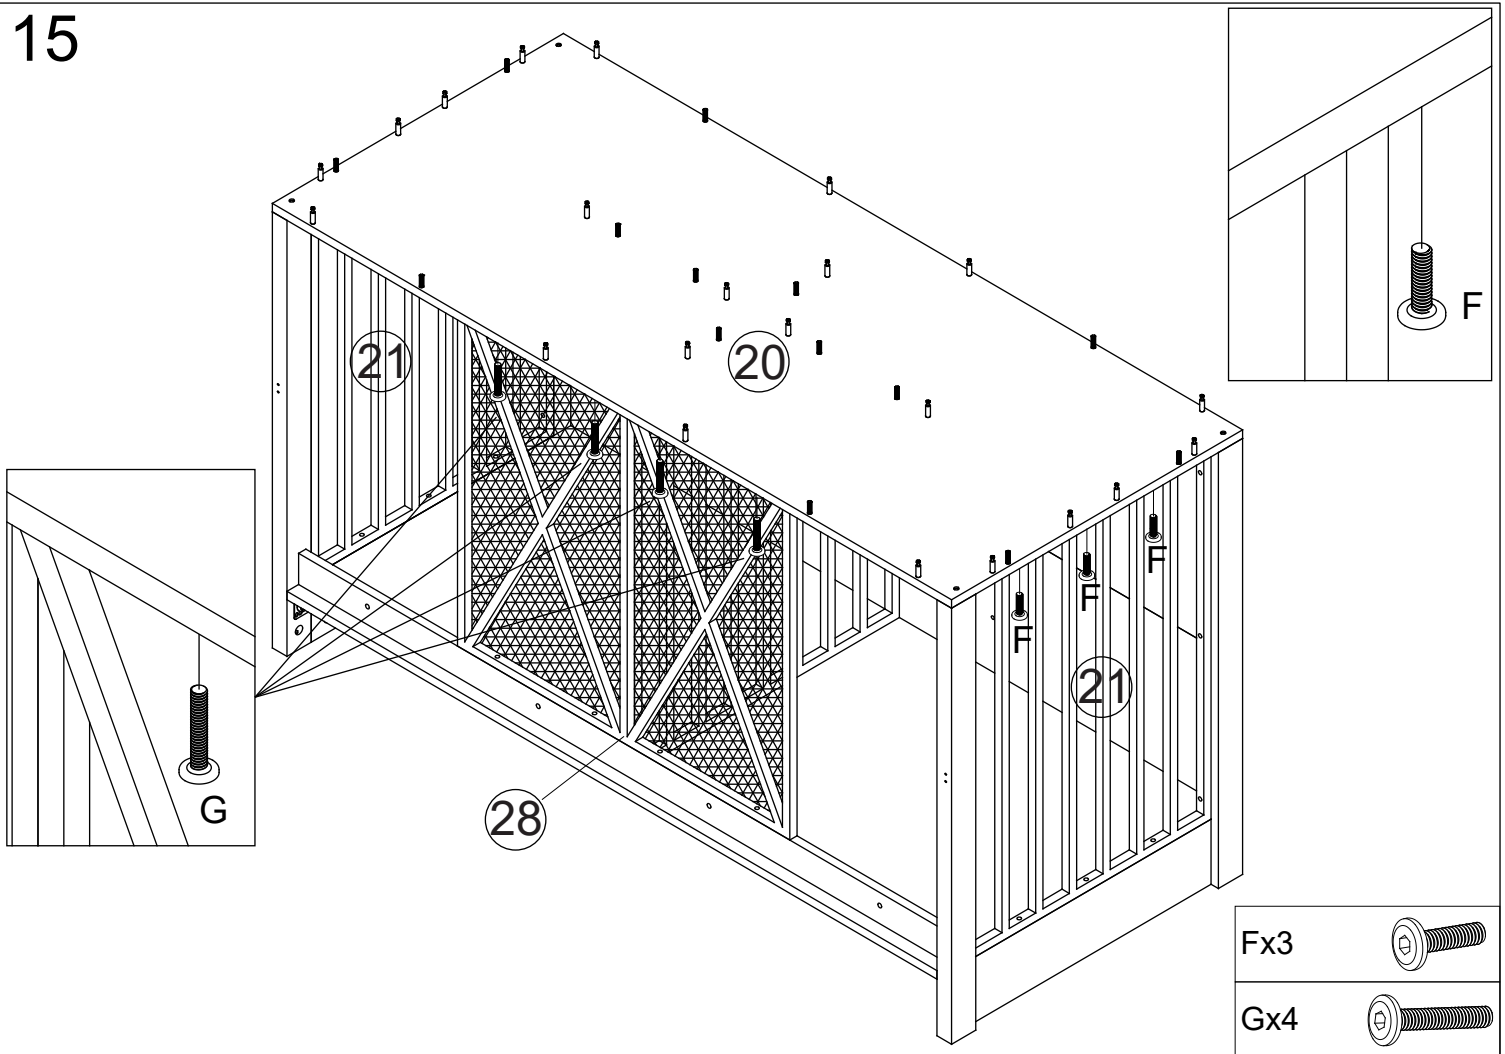




16

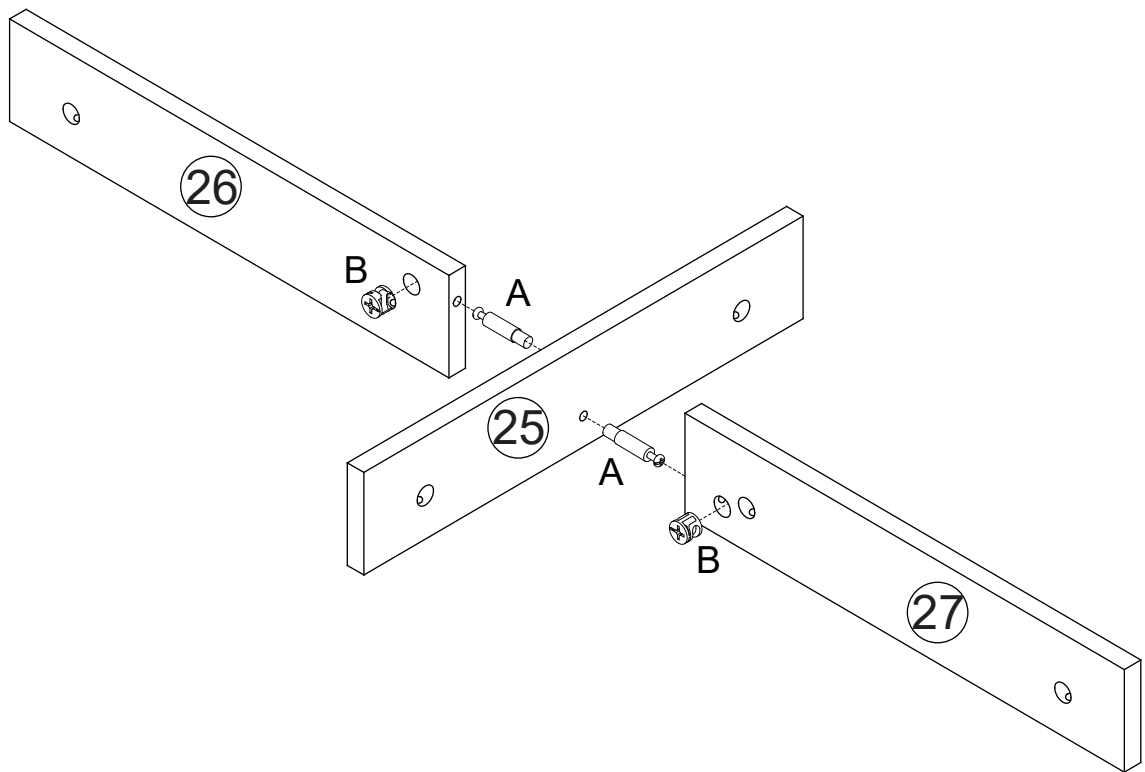


- | | |
|-----|---|
| Ax2 |  |
| Bx2 |  |



17

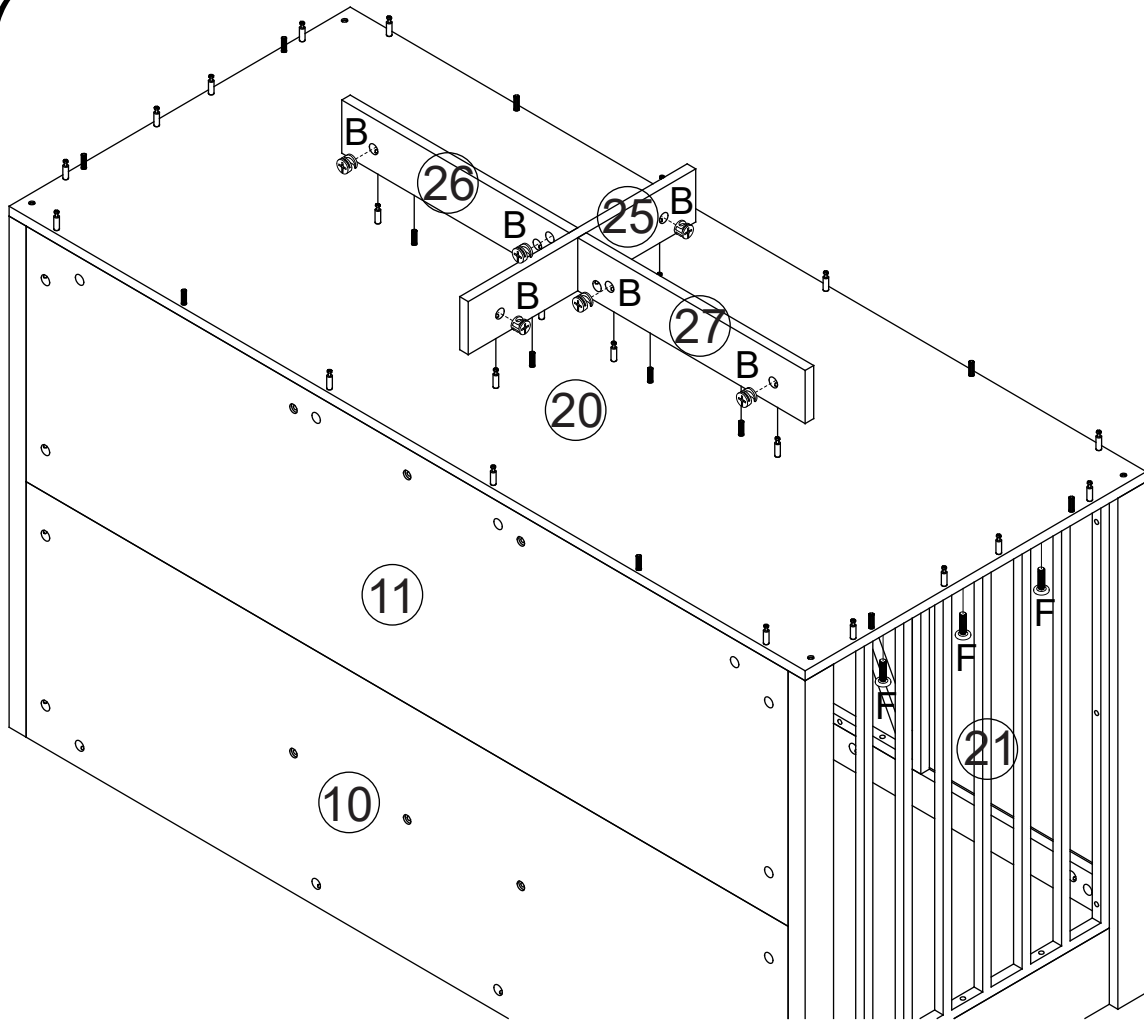


Fx3	
Bx6	

18

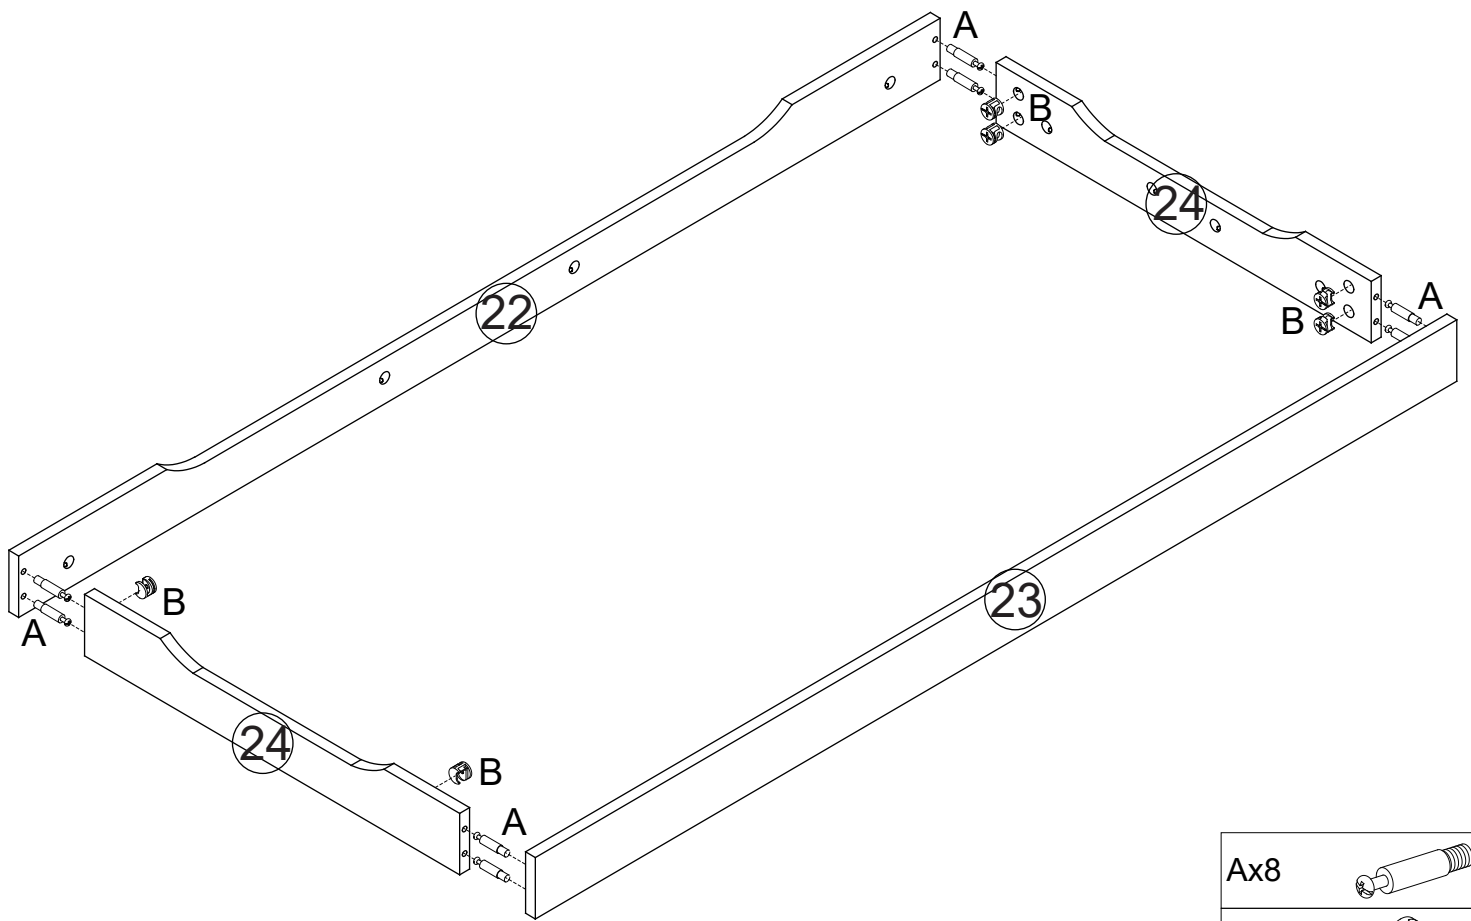

Ax8	
Bx8	


19

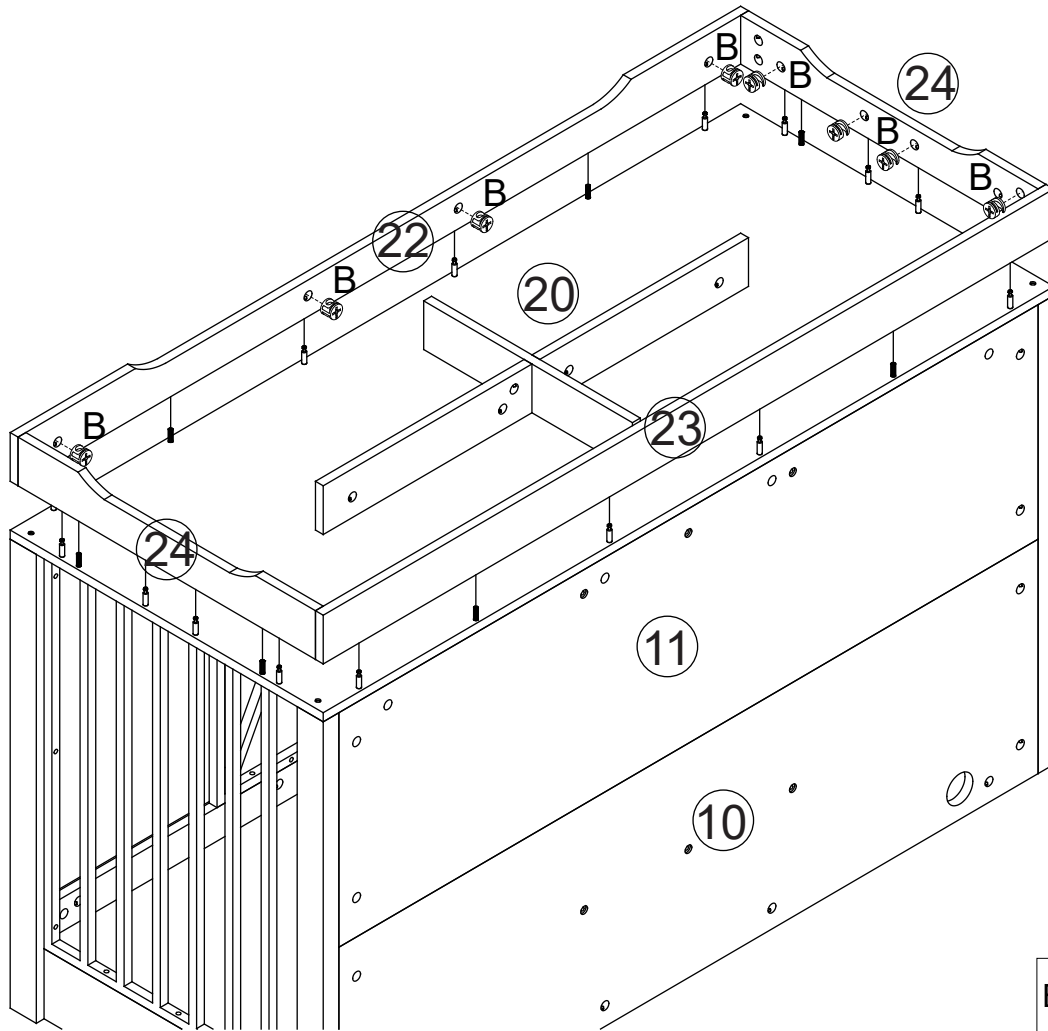


Bx16



20

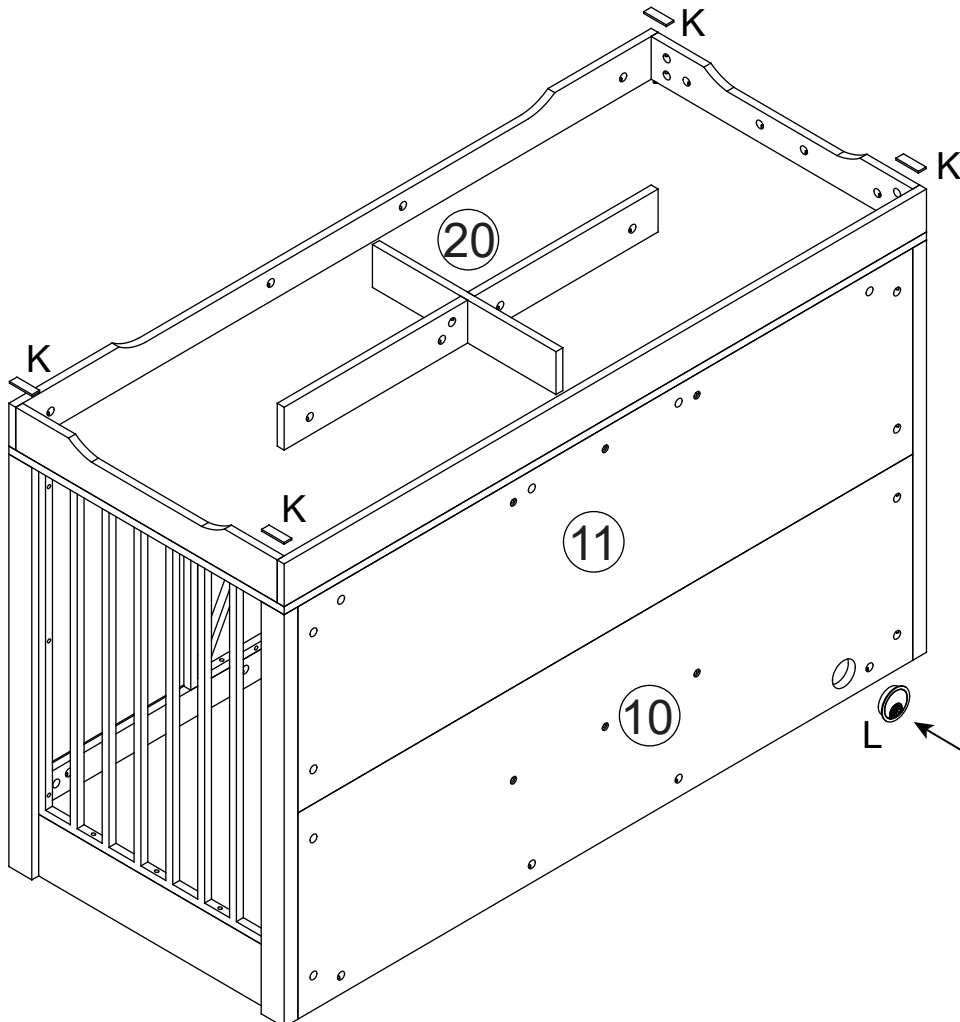


Kx4




Lx1




21

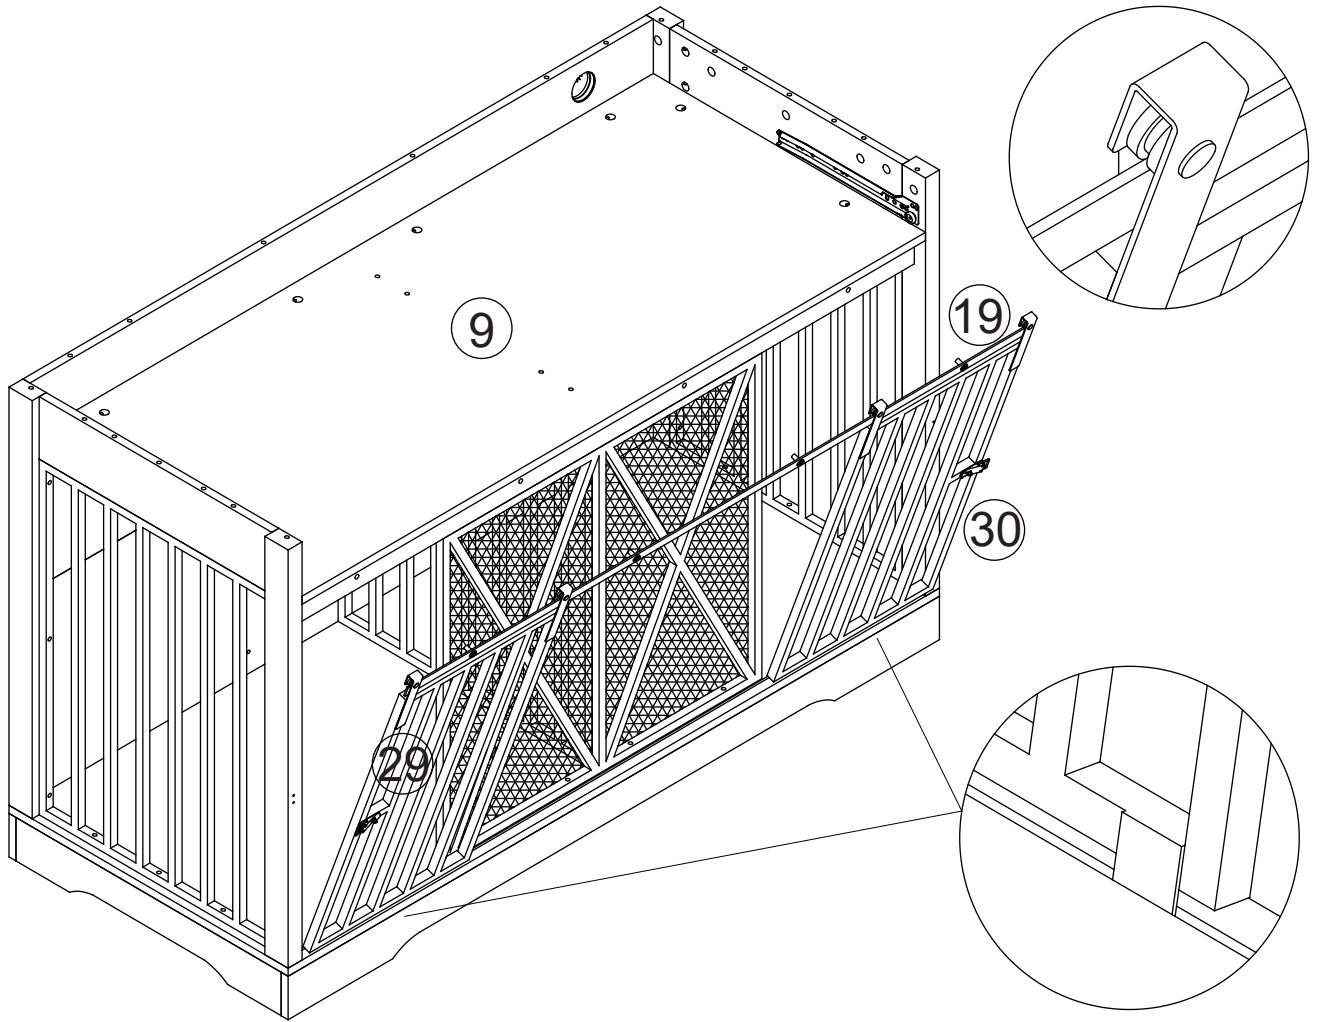


22

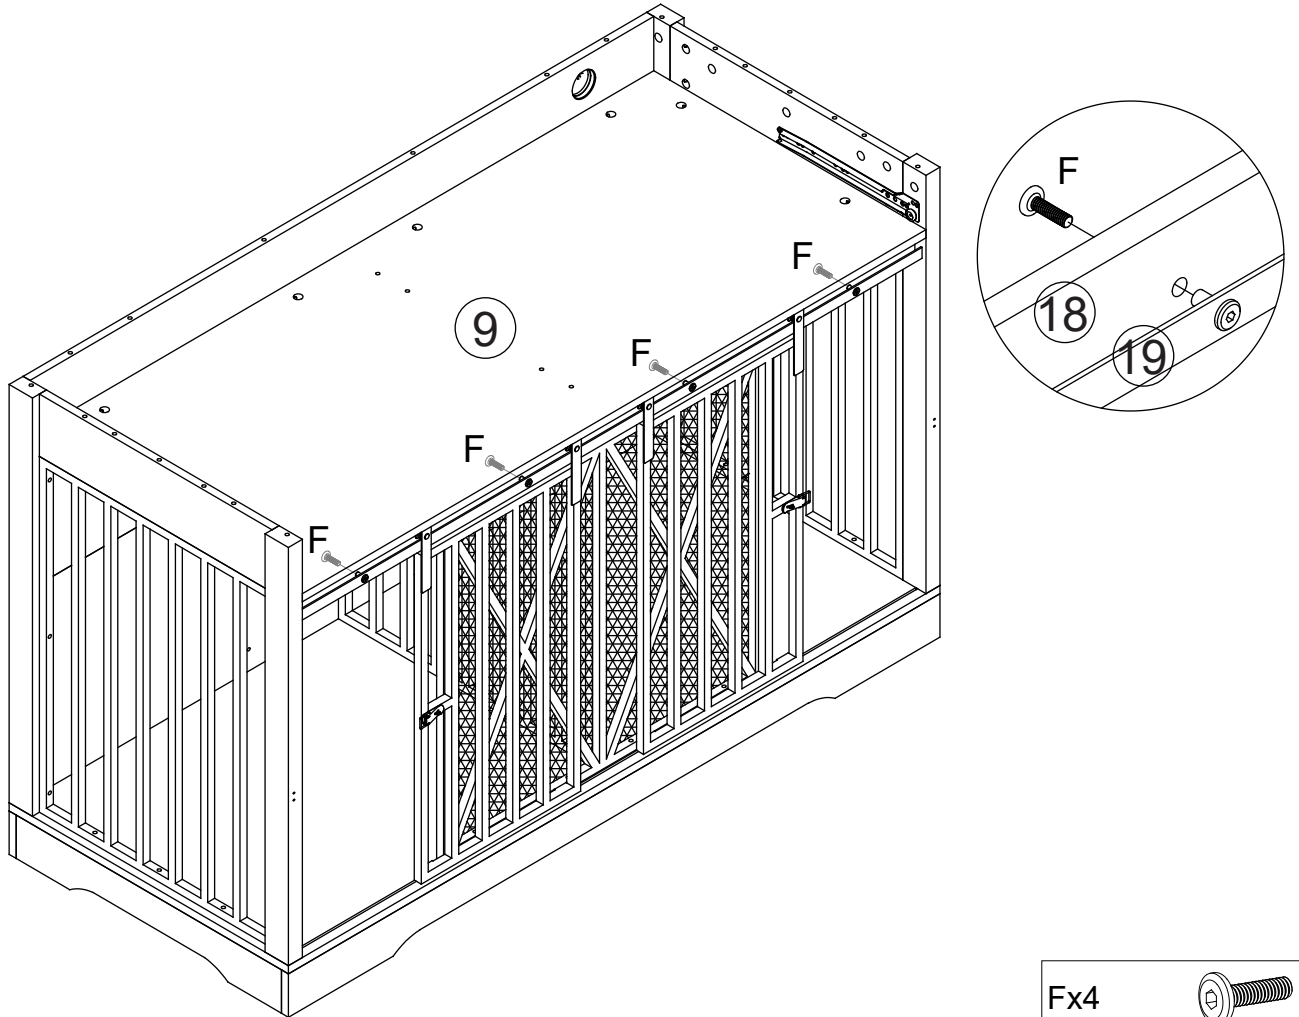


Fx4



23

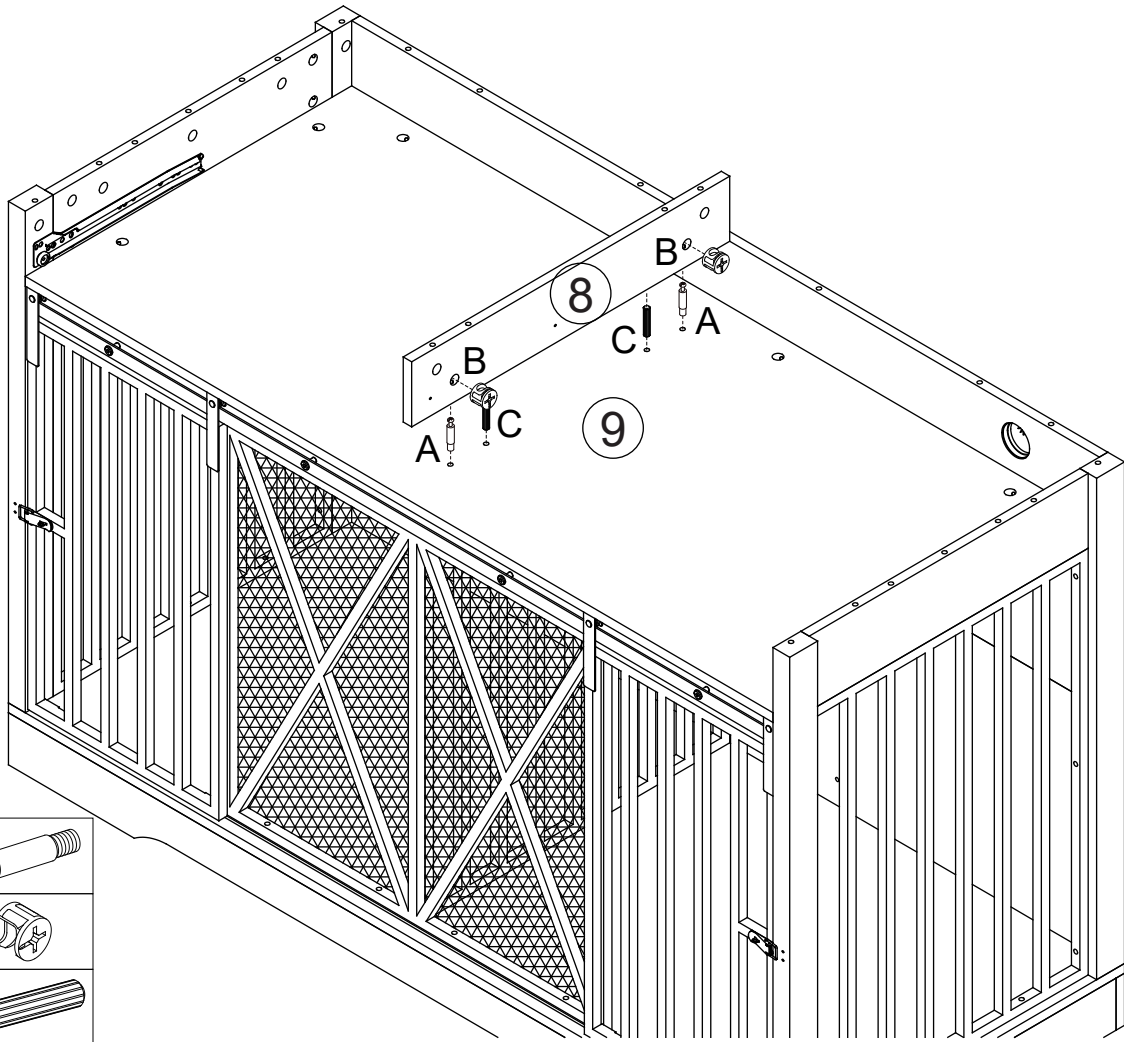


Ax2




Bx2




Cx2



24

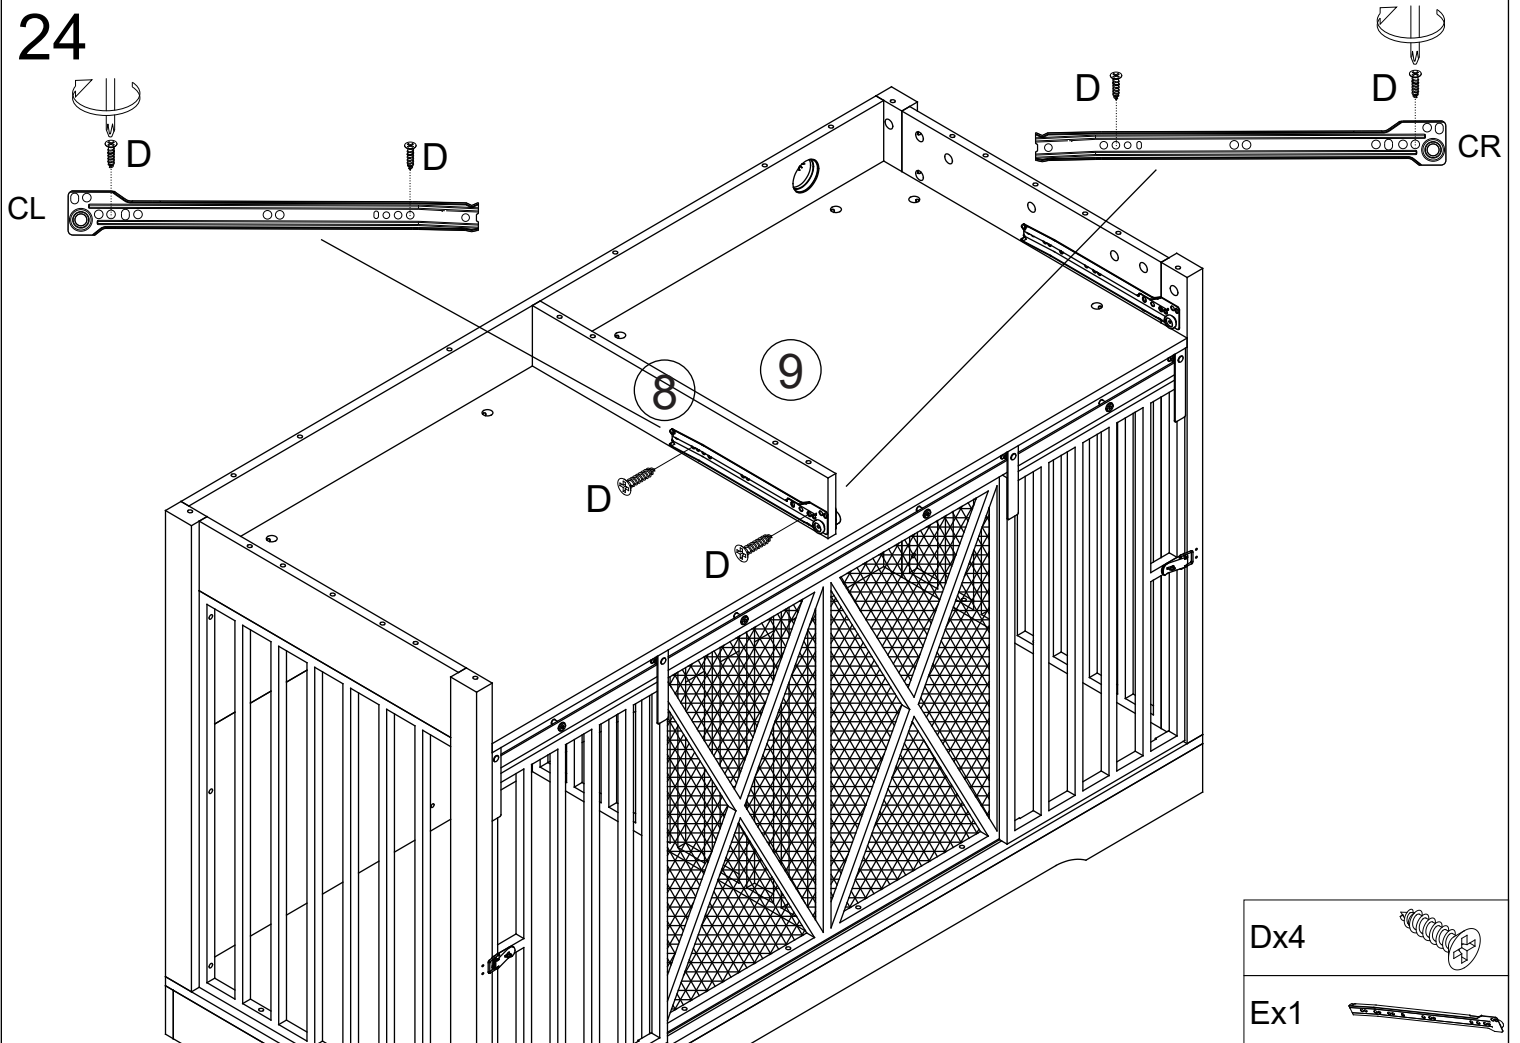

CL




D

D

D

CR


Dx4





Ex1





25

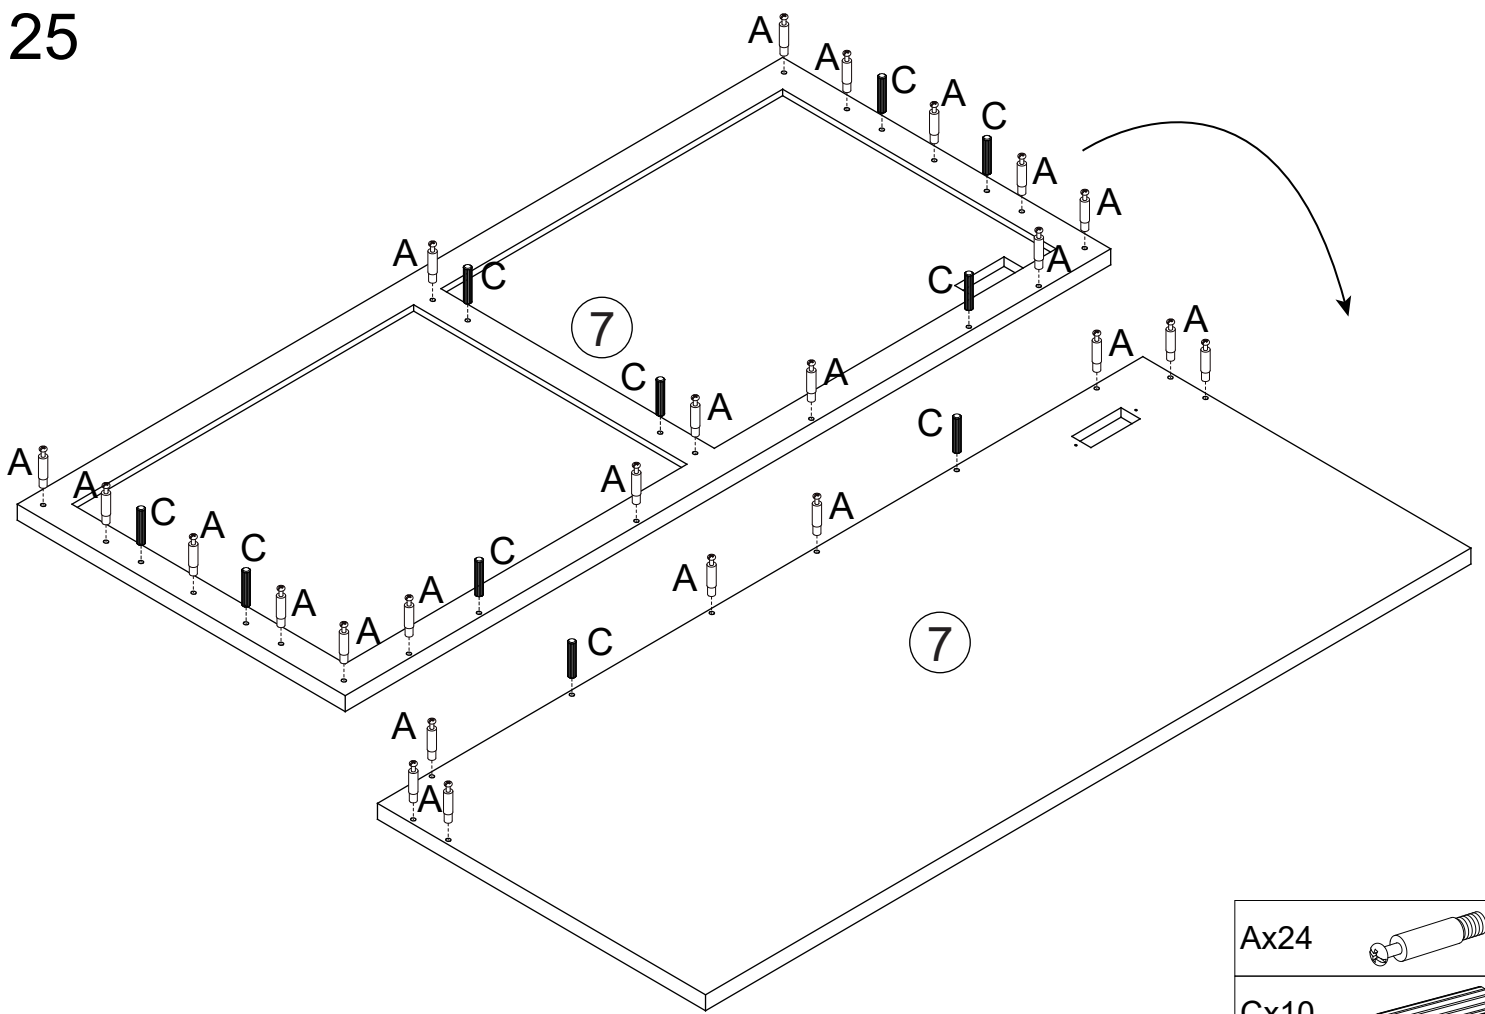


Ax24	
Cx10	

26

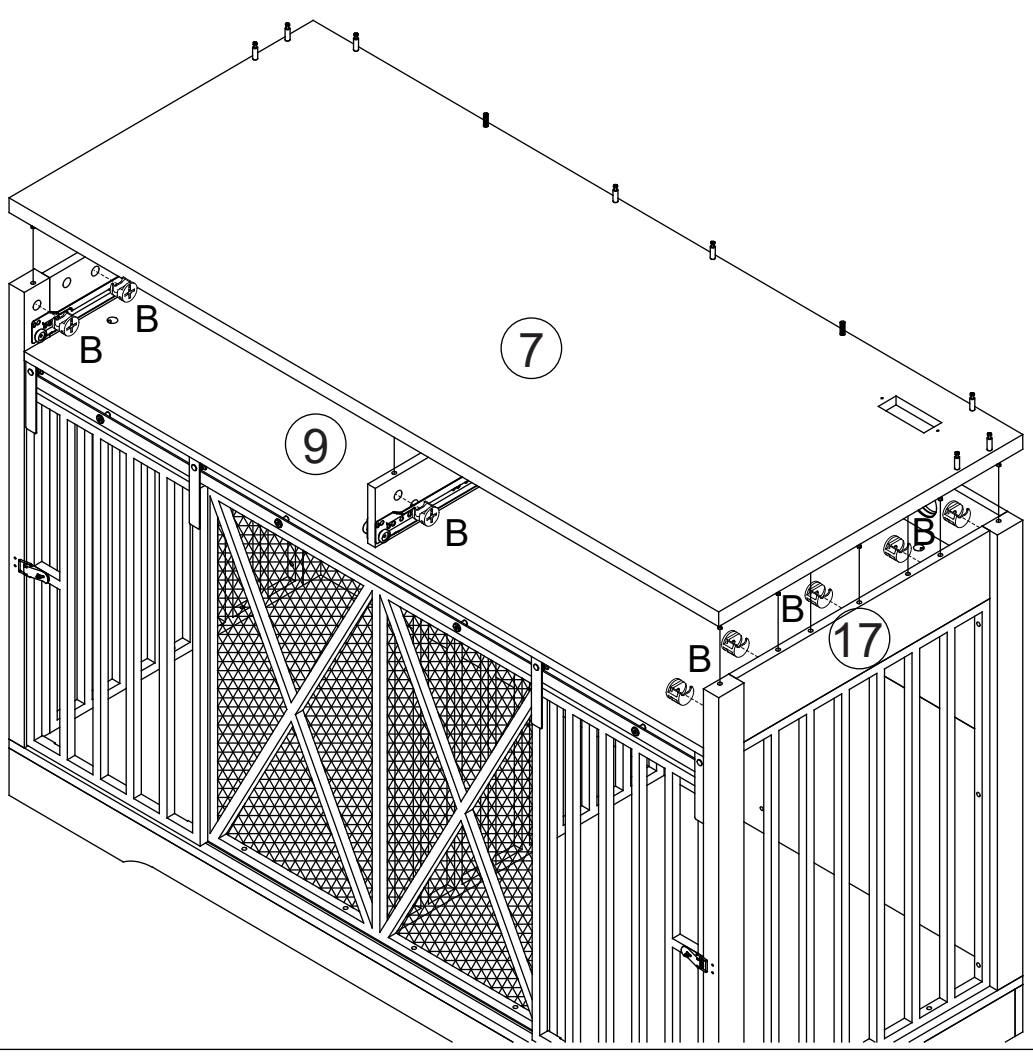


Bx16	
------	---

27

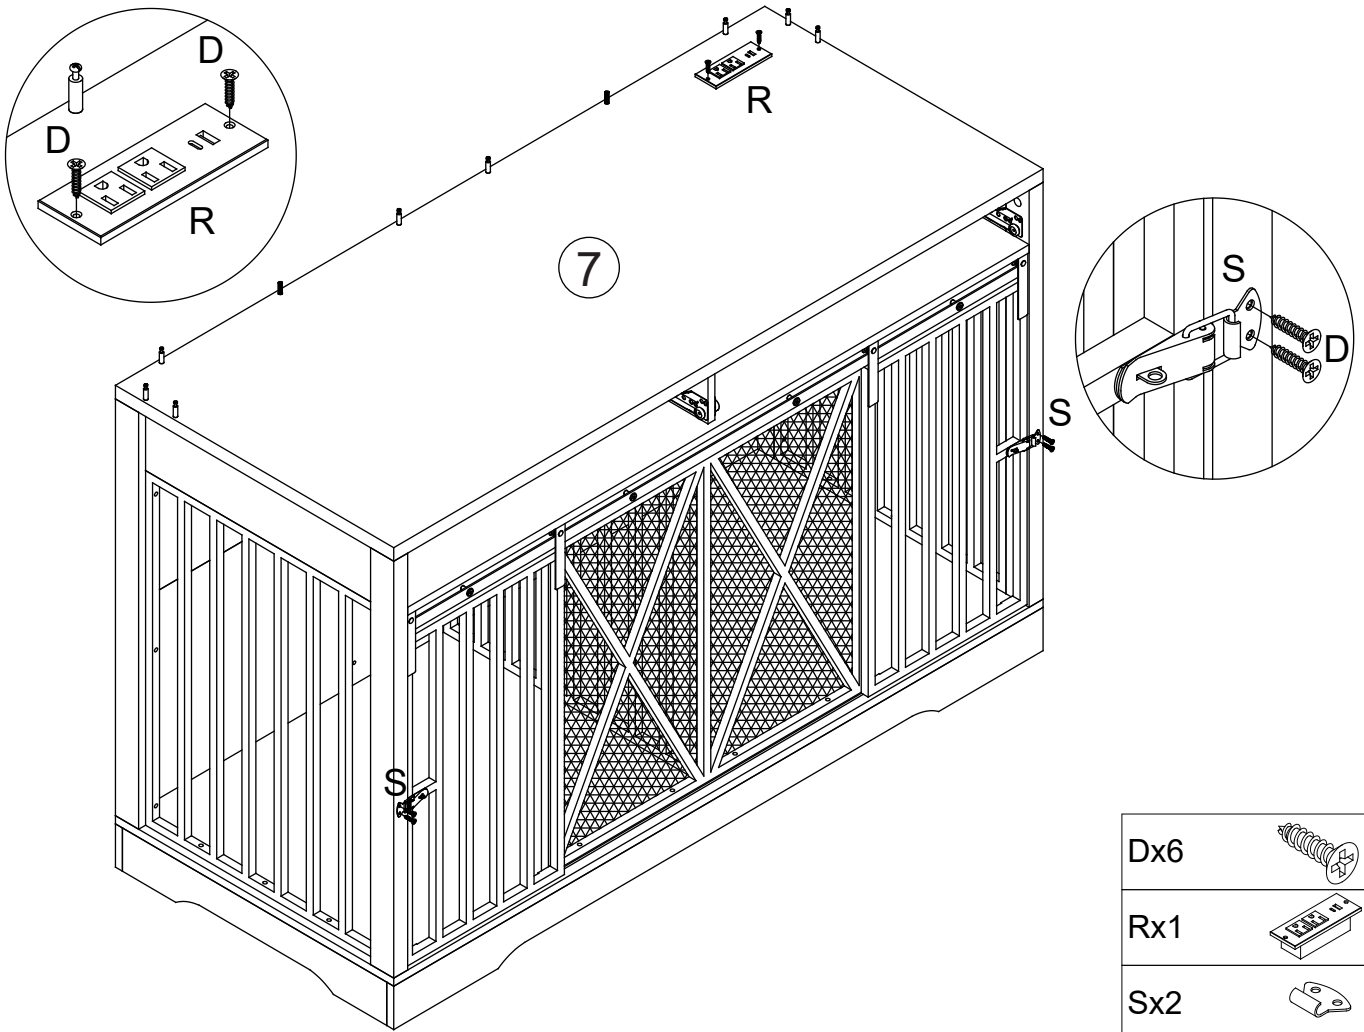


Dx6	
Rx1	
Sx2	

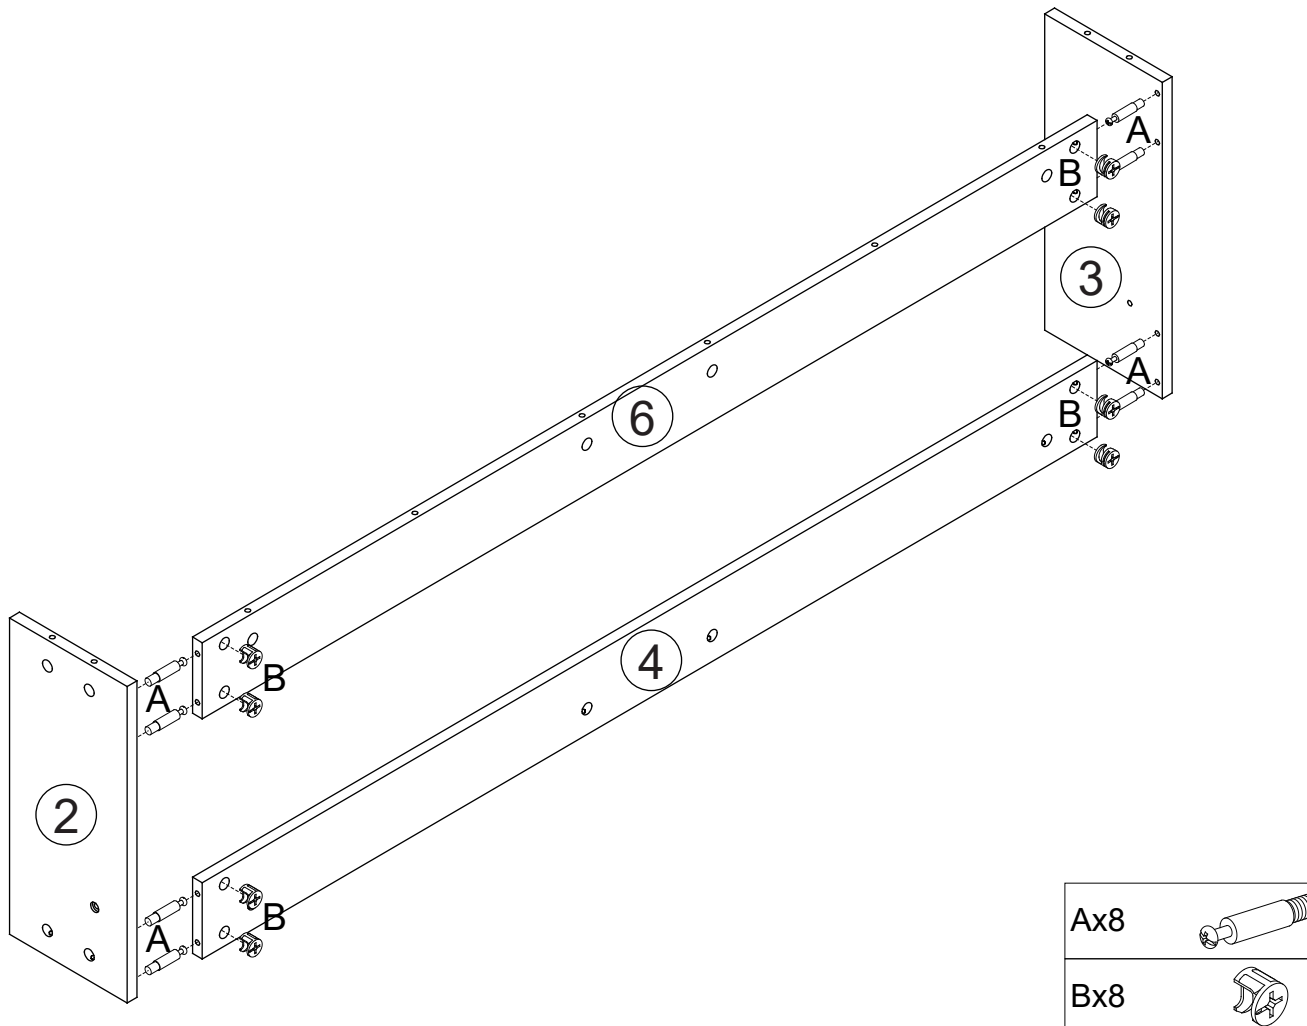


28




Ax8	
Bx8	


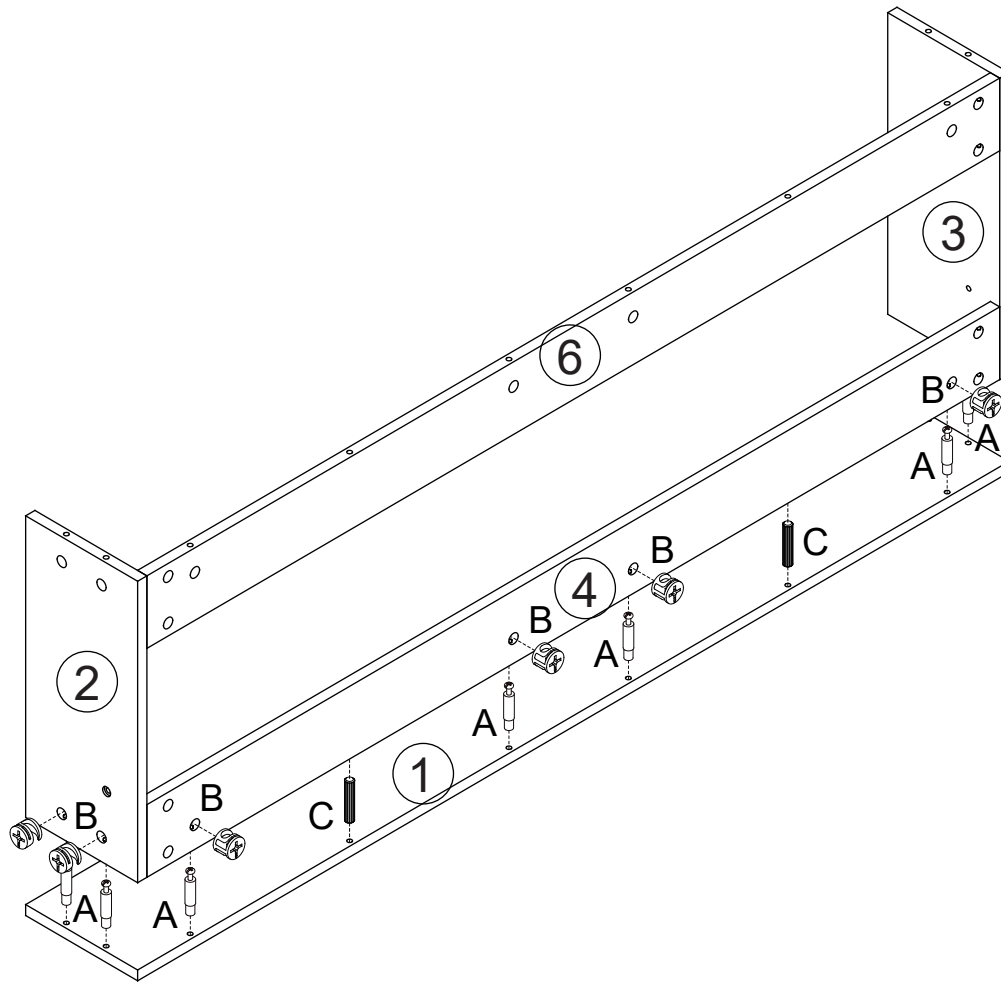
29




Ax8	
Bx8	
Cx2	

30

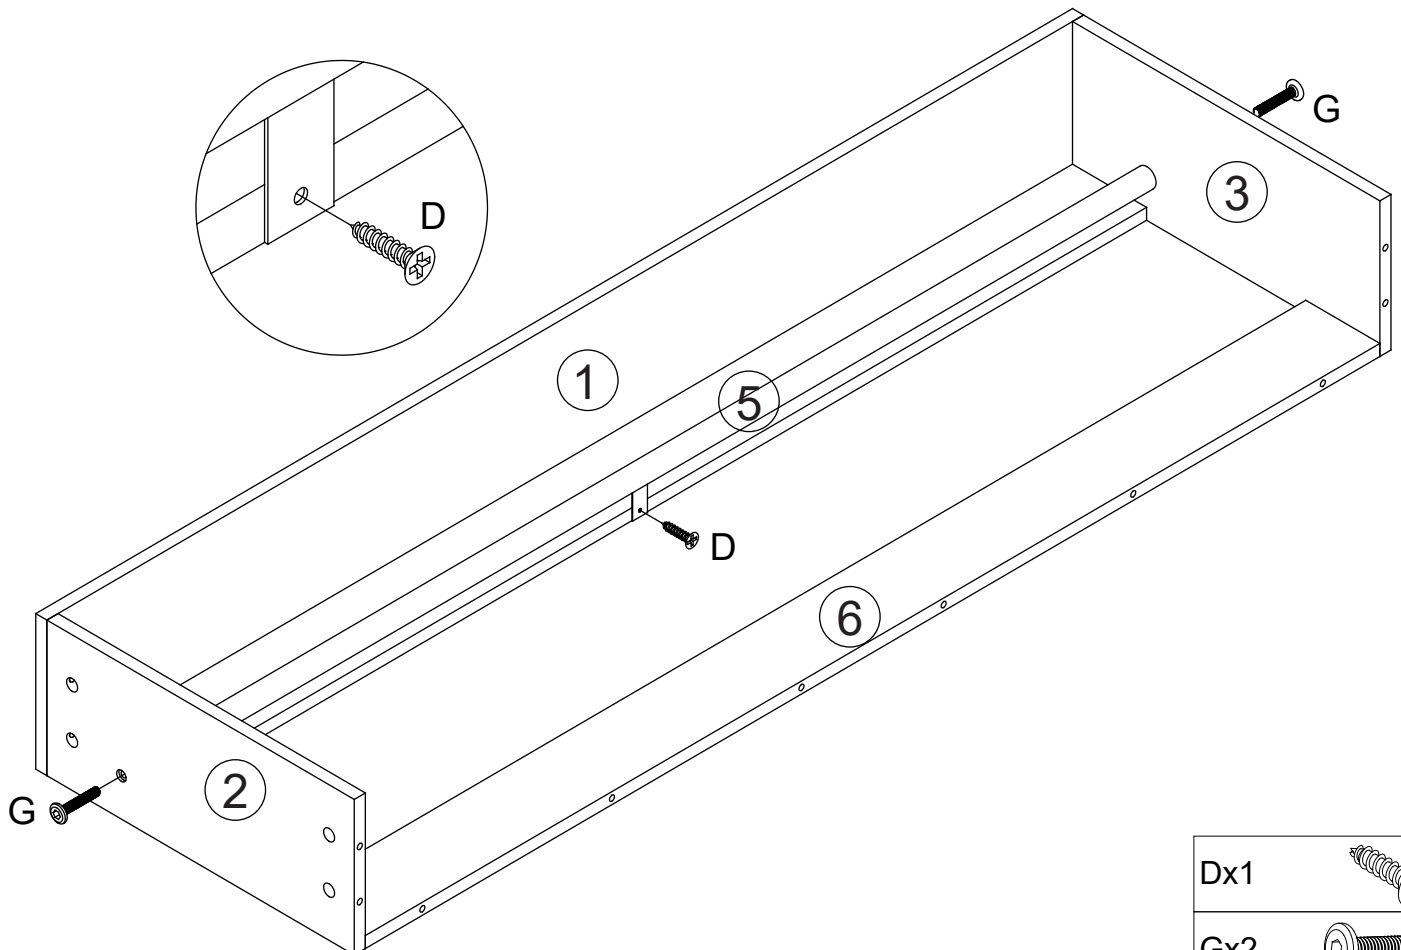

Dx1	
Gx2	


31

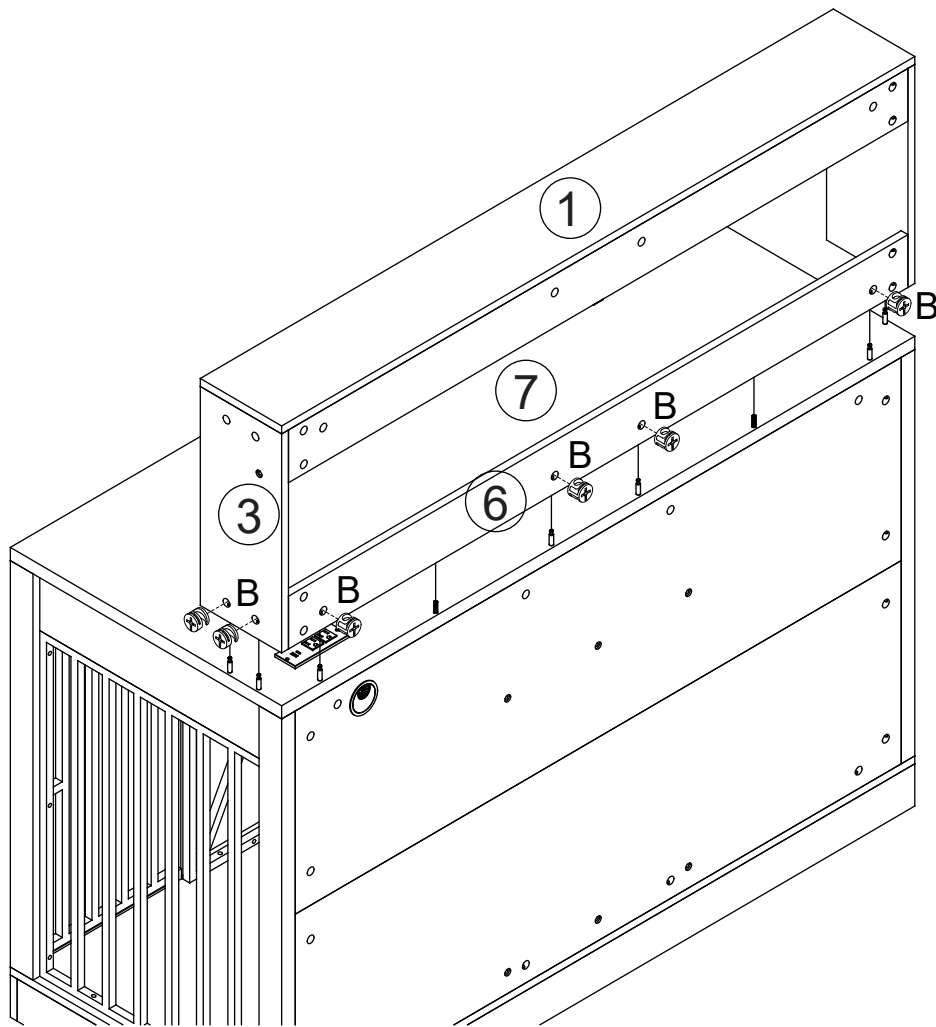


Bx8




32

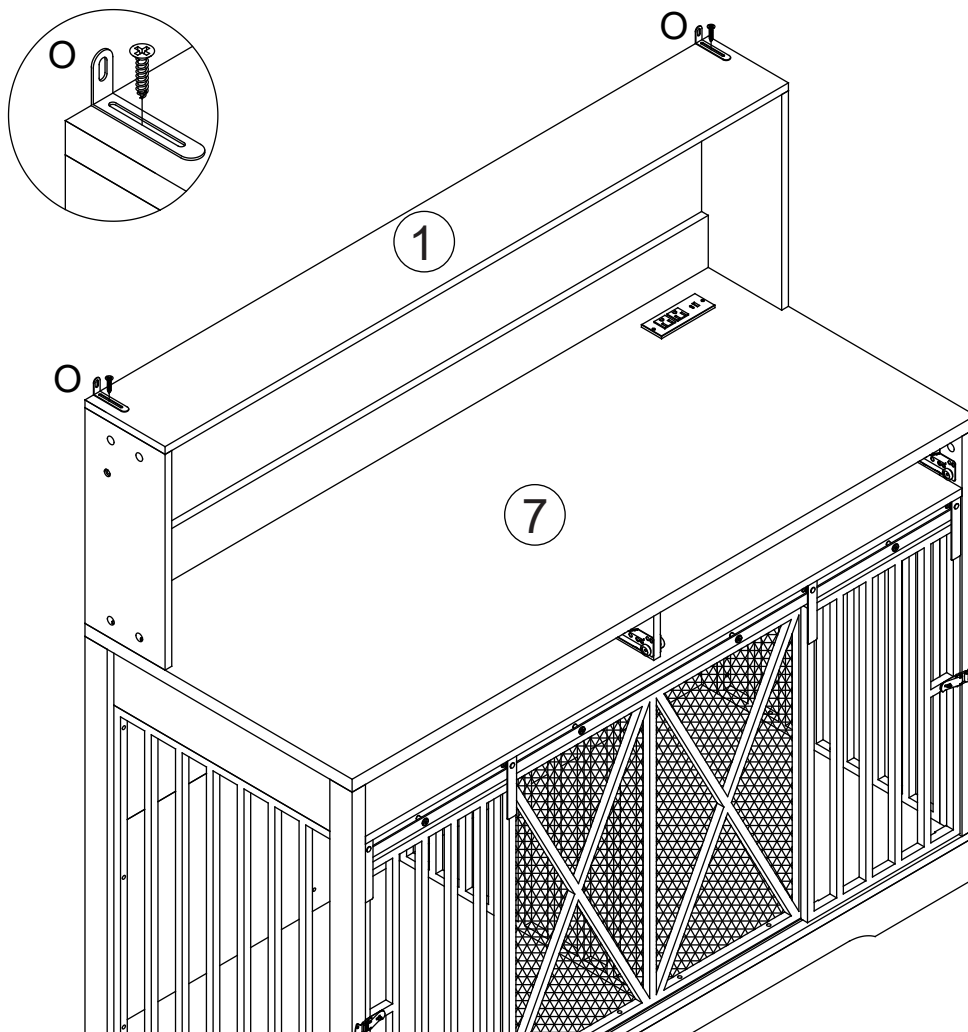


Ox2




33

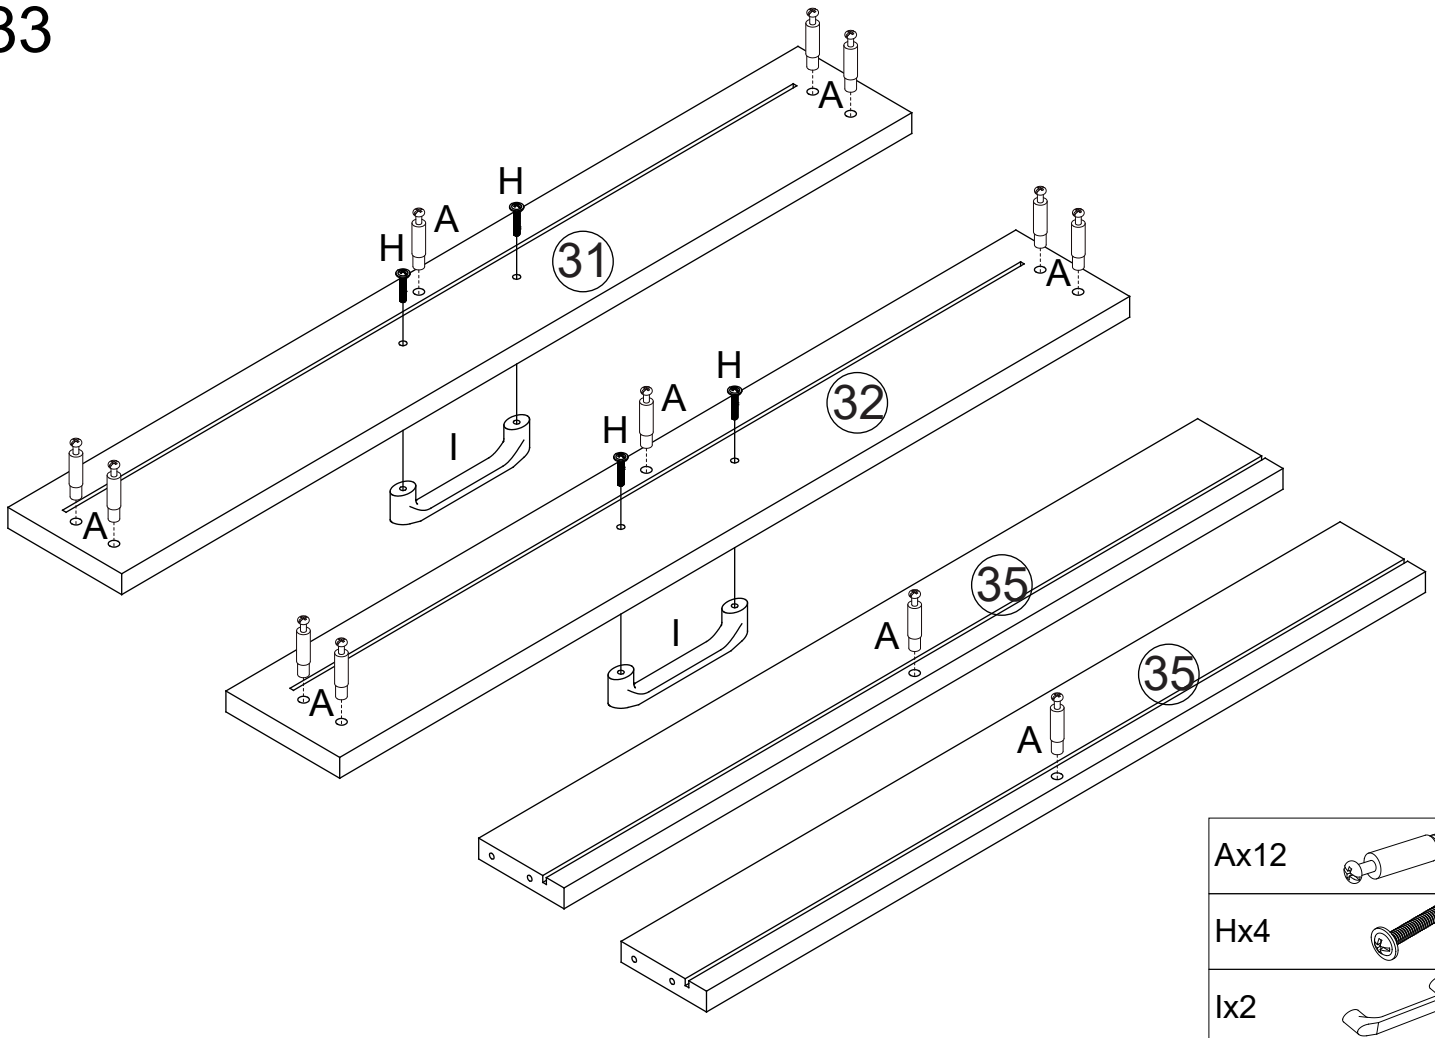

34

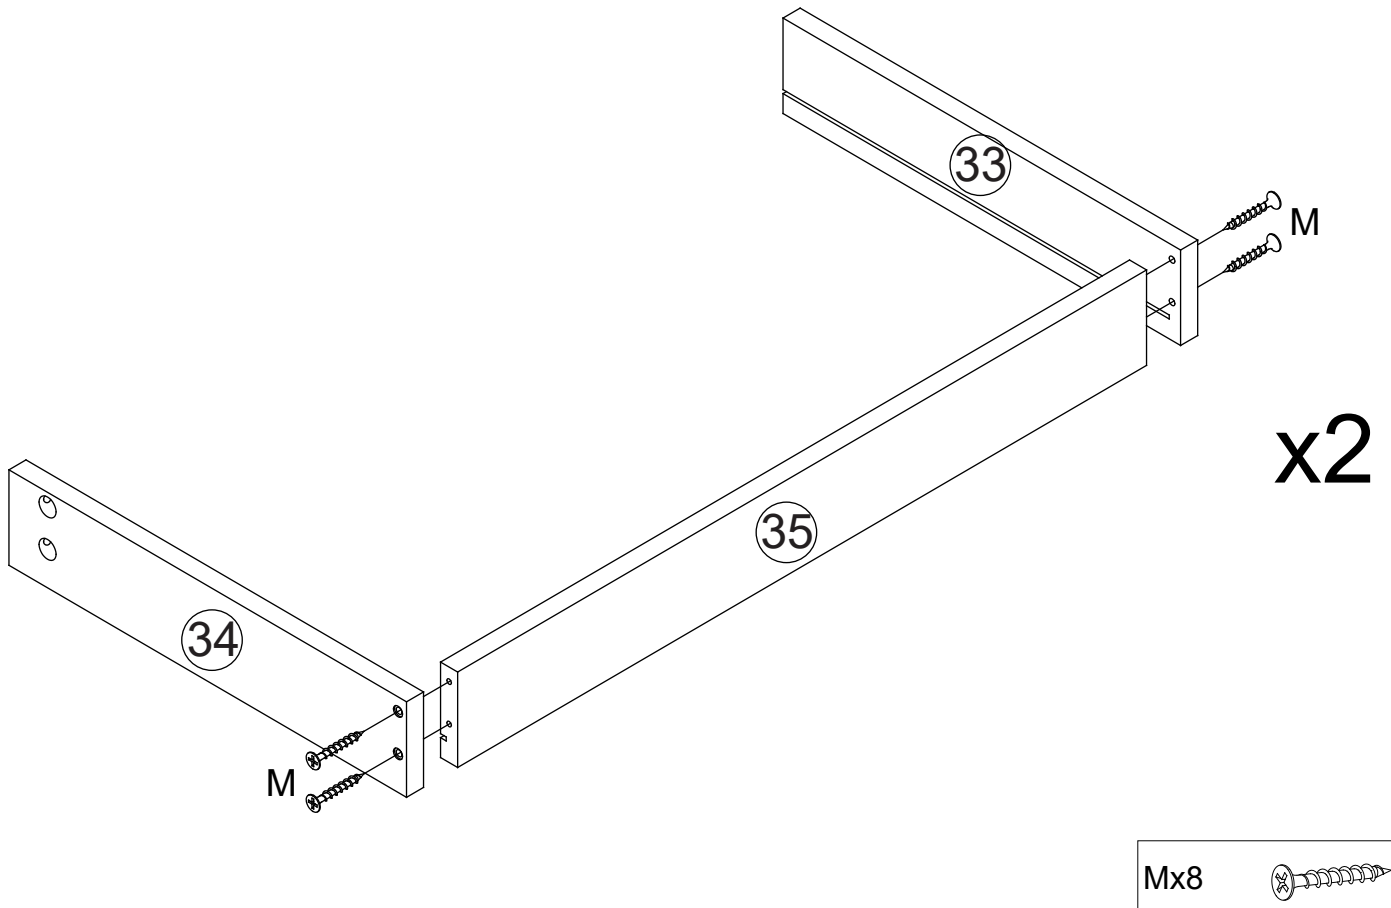

35

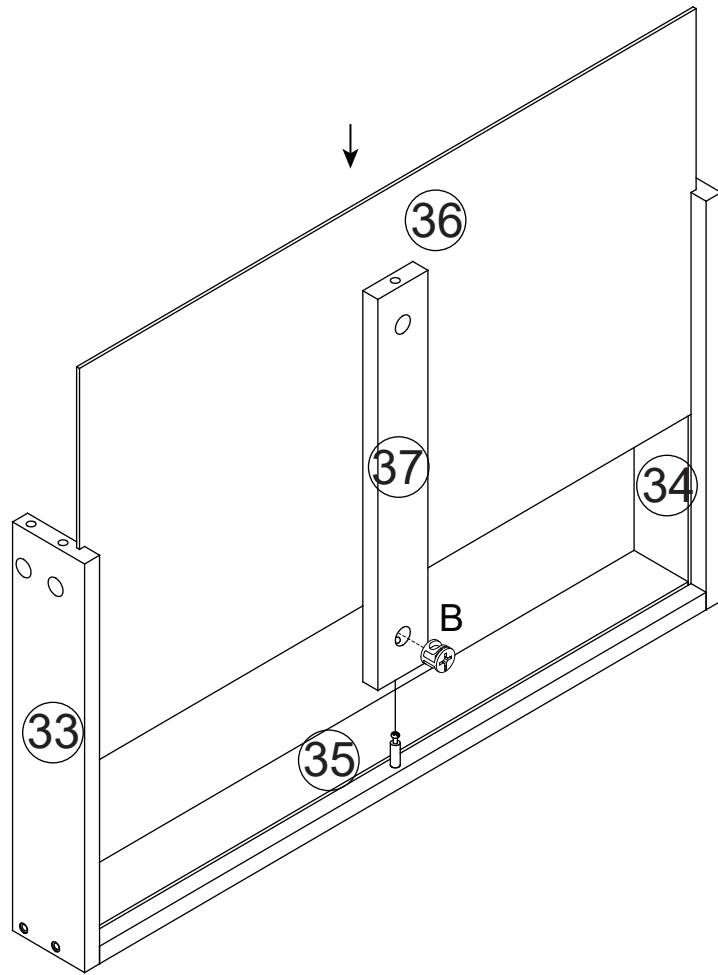


x2

Bx2




36

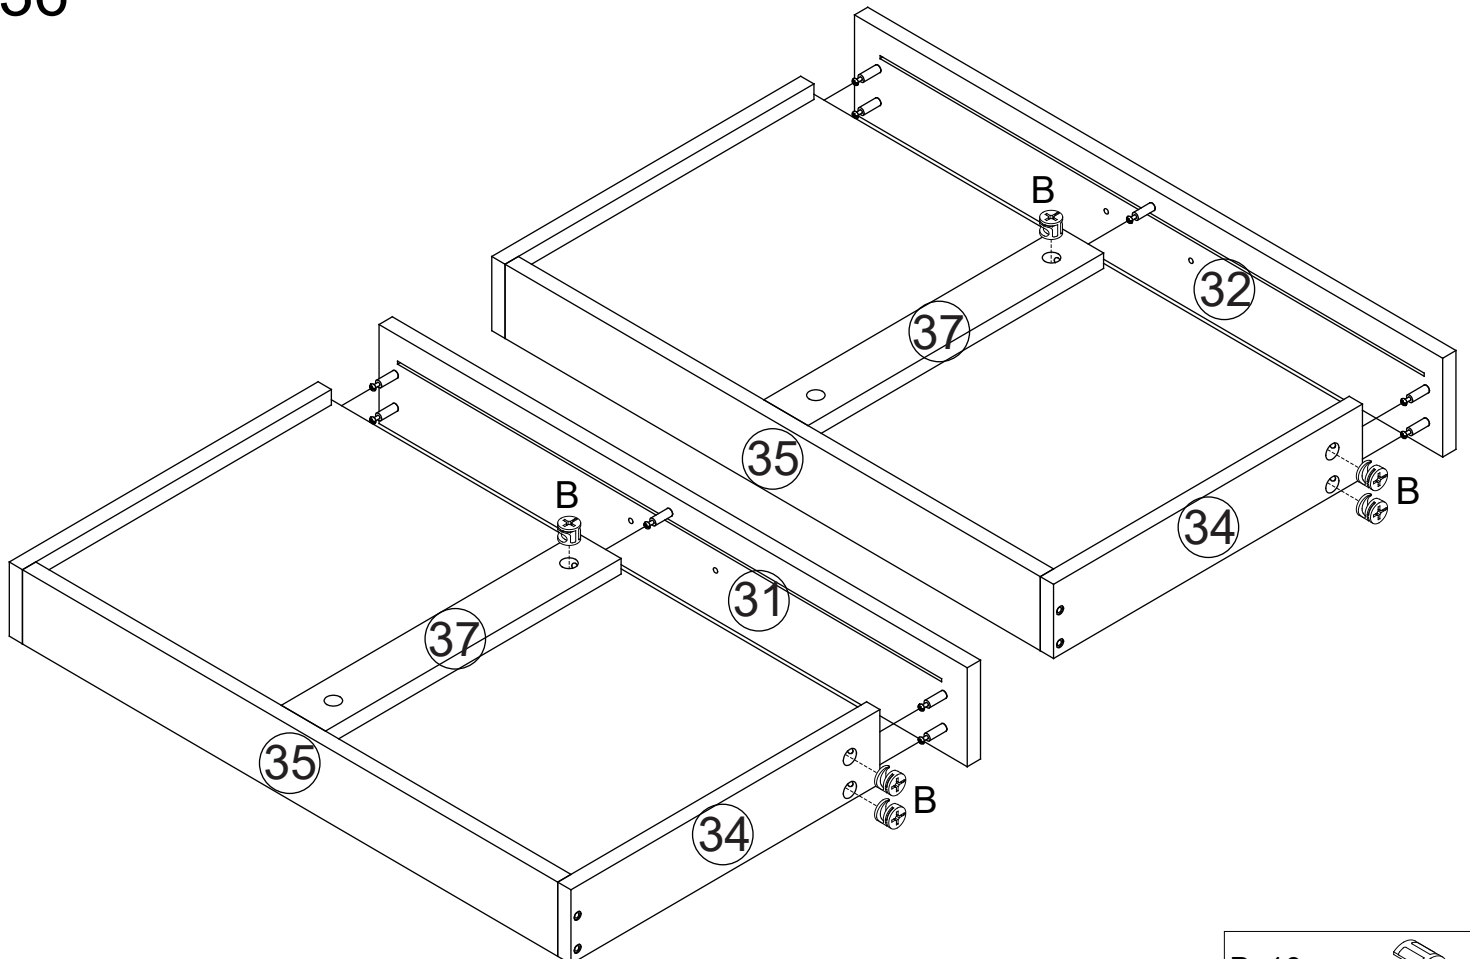

Bx10








37




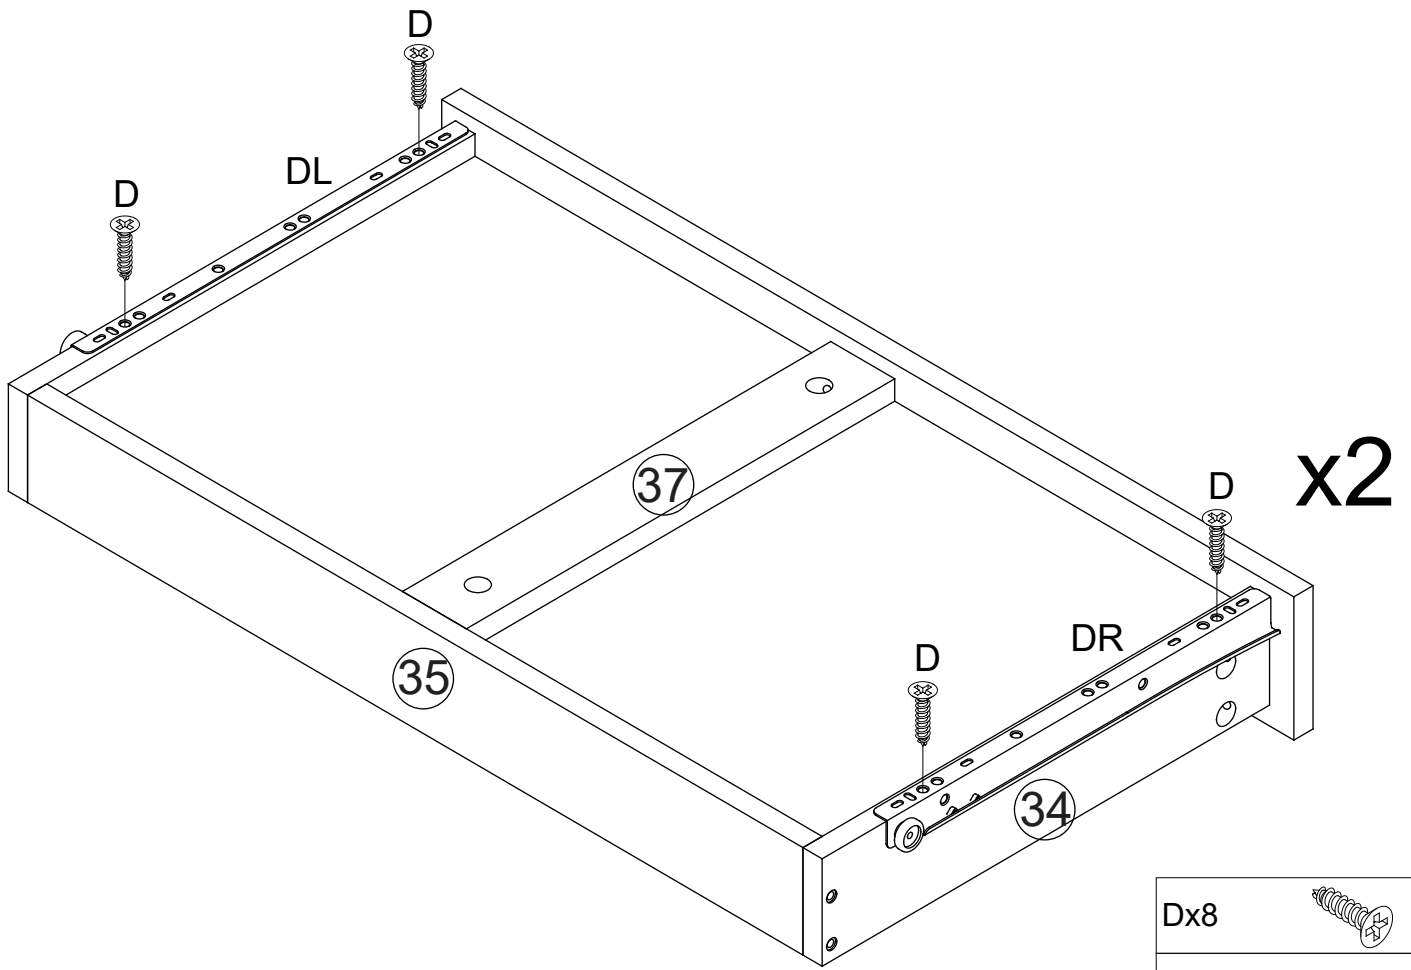


Dx8	
Ex2	

38

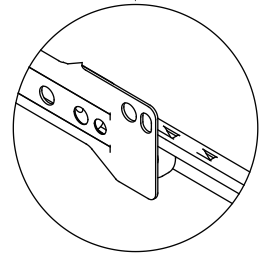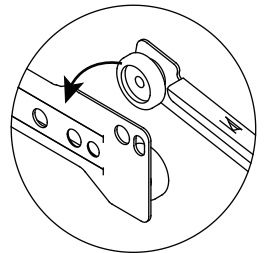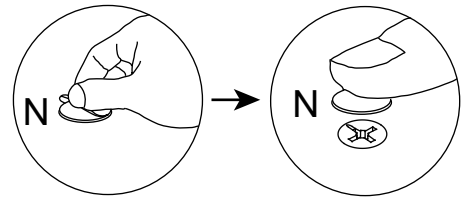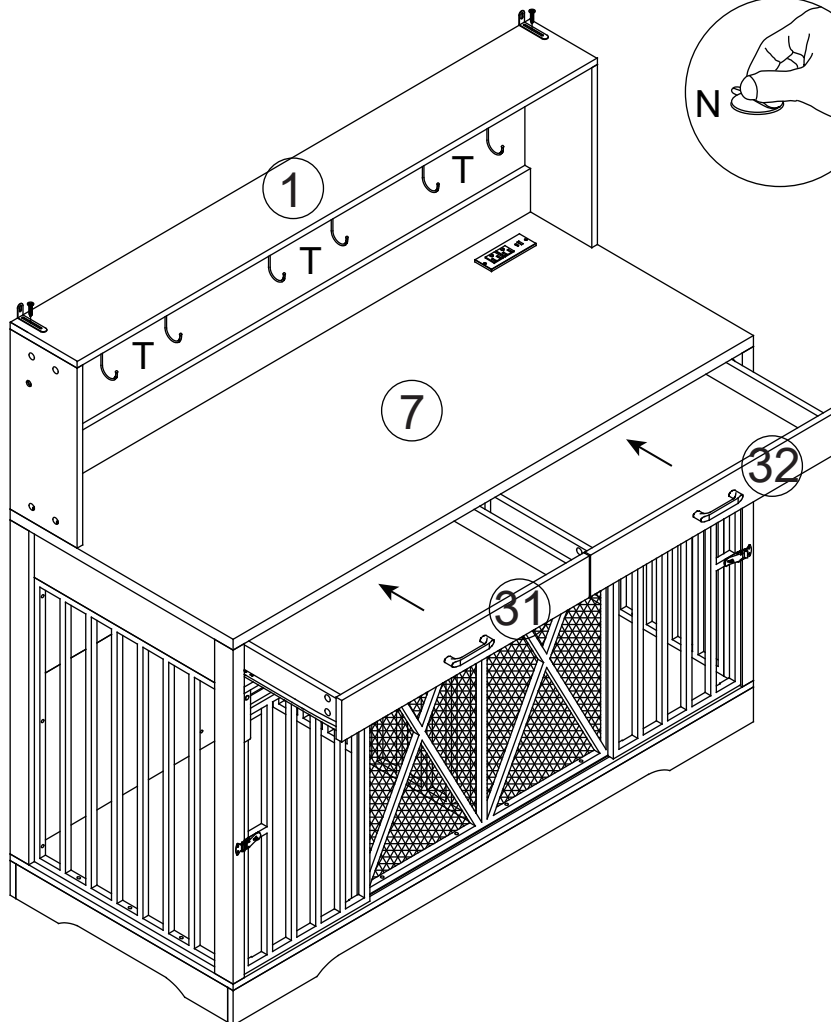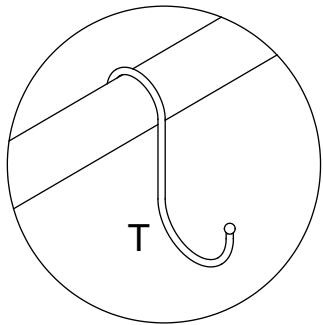

Tx6	
Nx120	

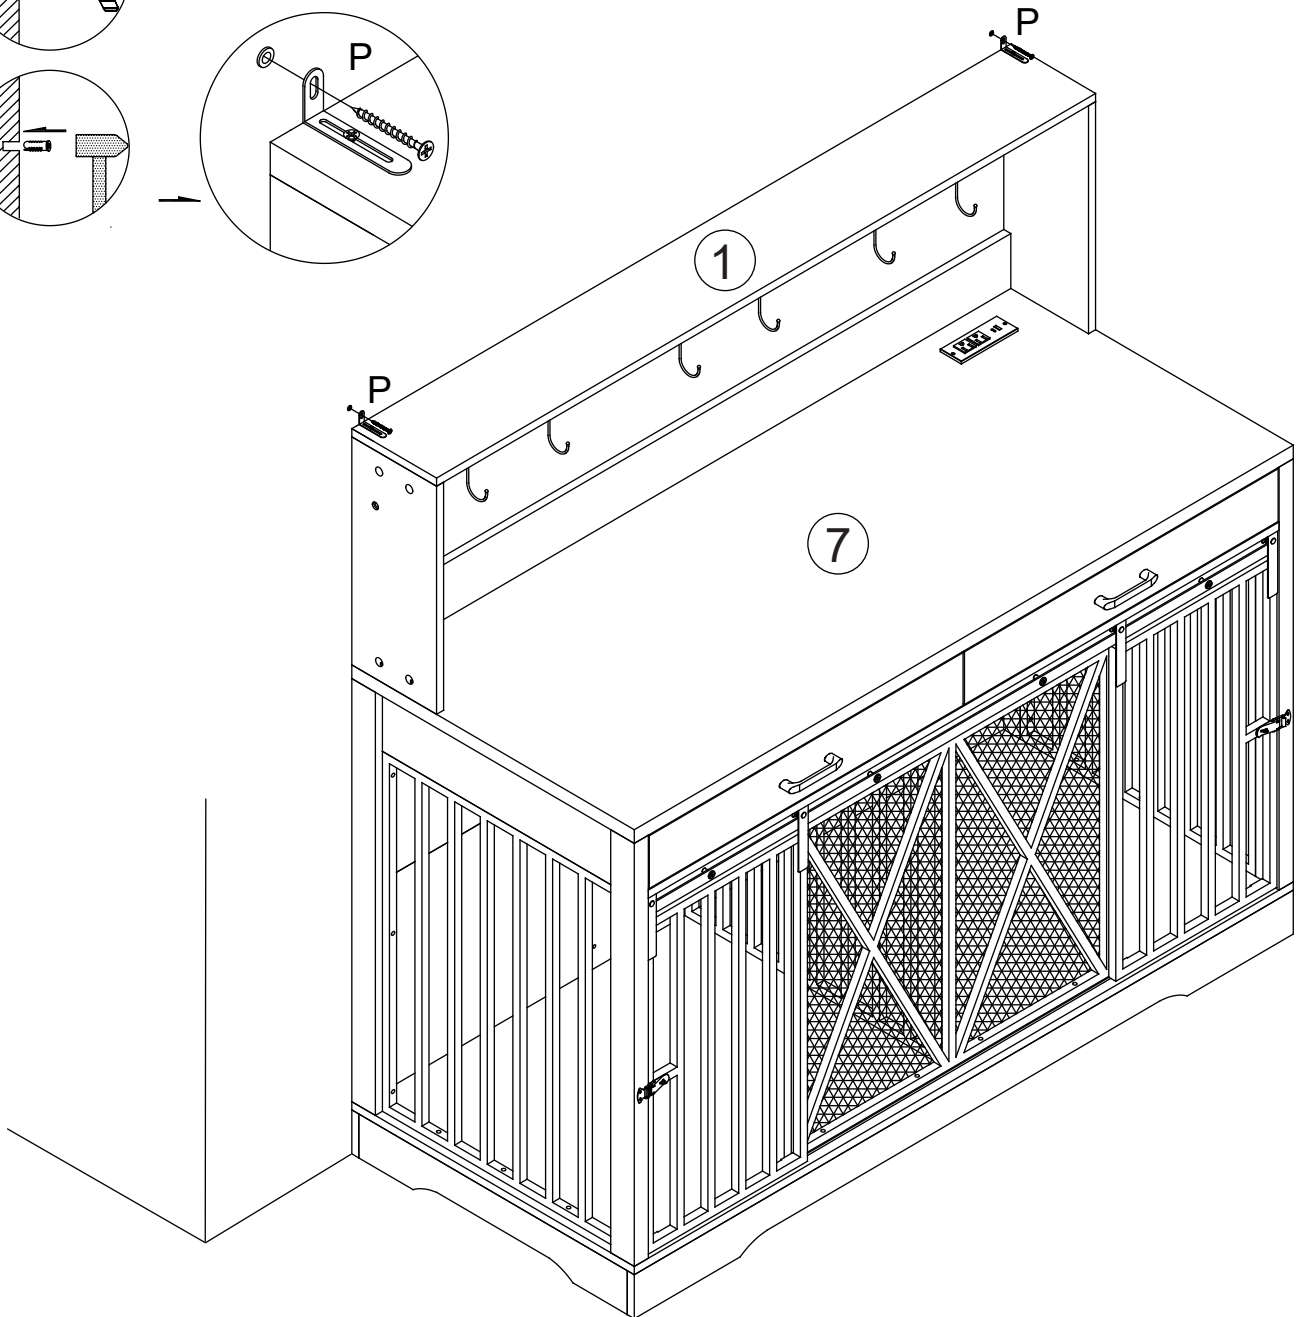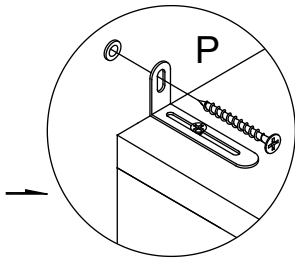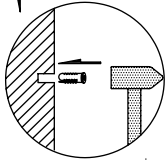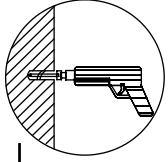

Px2

