


Multi style PET House-M

Assembly Instructions - Please keep for future reference

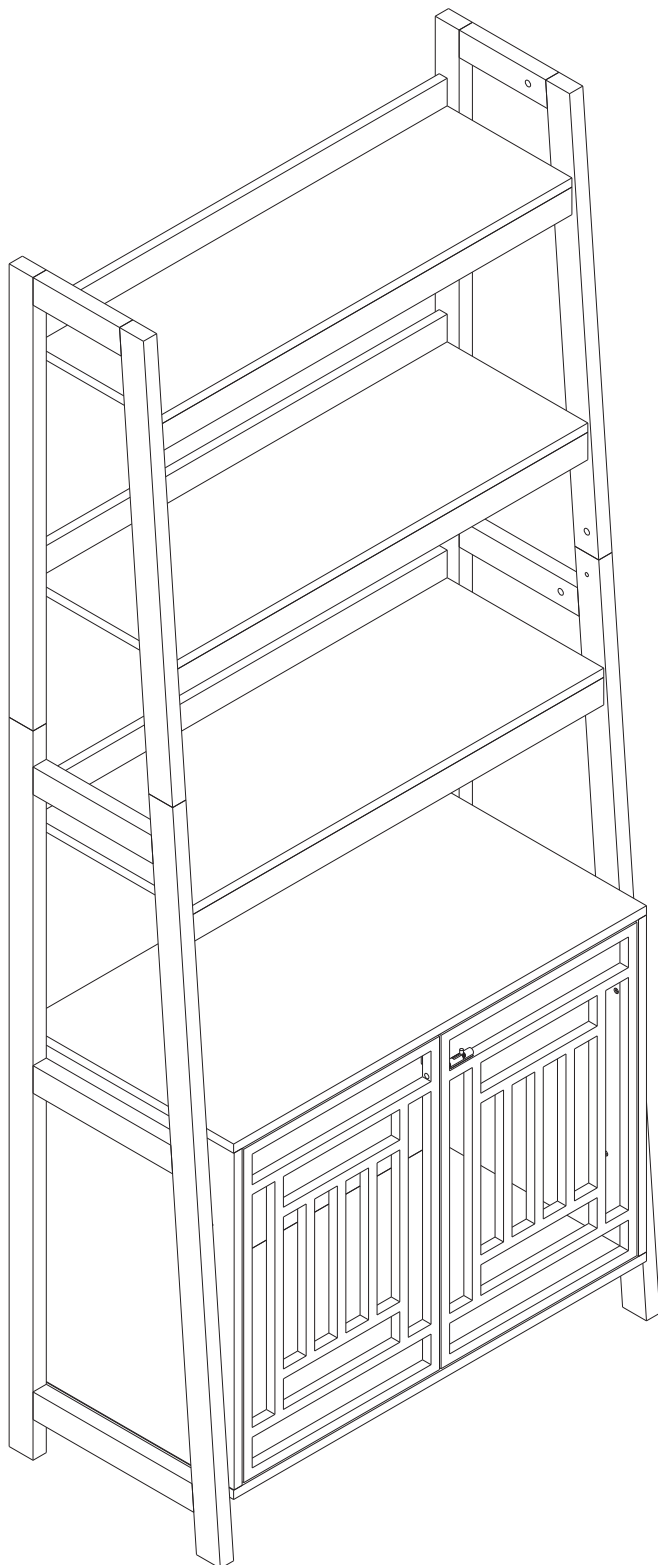

Dimensions

Width-32.60inch

Depth-15.75inch

Height-75.98inch

Important - please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING
In order to help prevent overturning –
please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

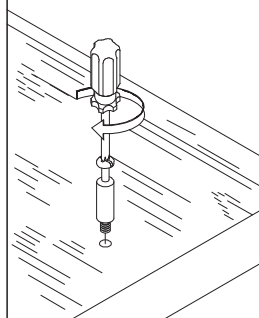

Step 2

Push the male camlock into the entry hole.

2

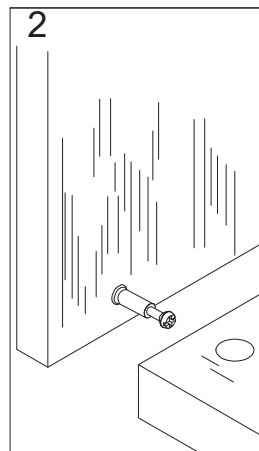


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

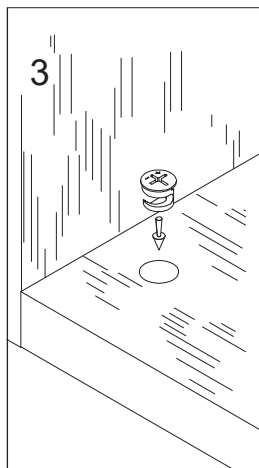


Step 4


Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.


4

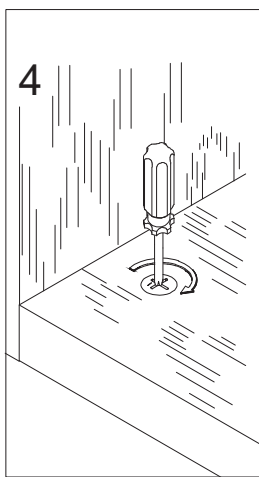

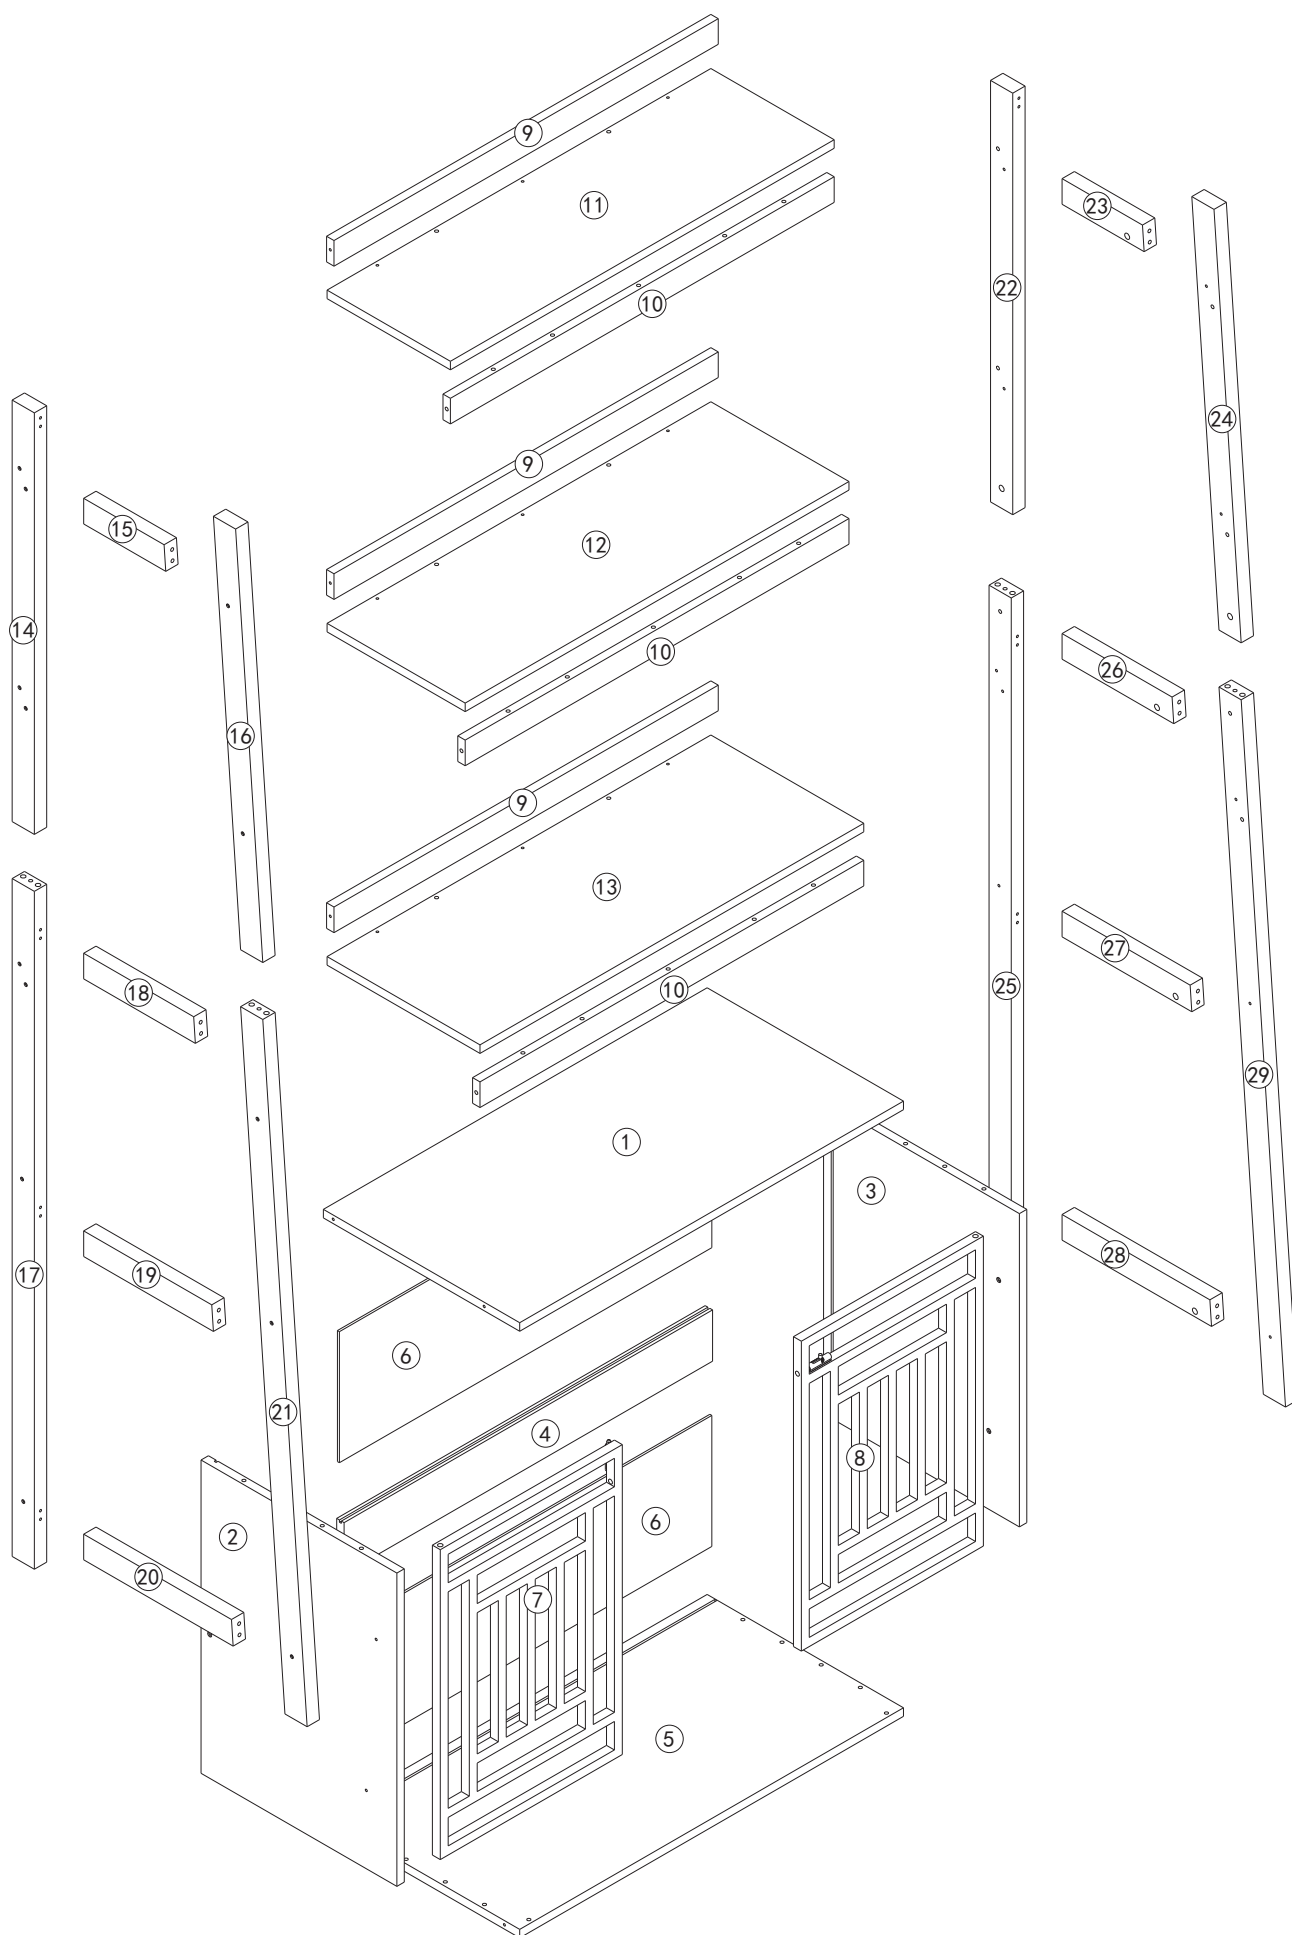


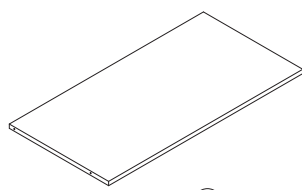


① x1

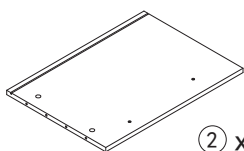


② x1

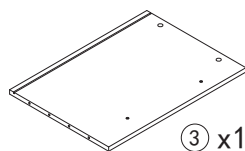


③ x1

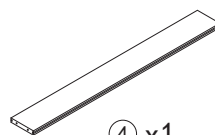


④ x1

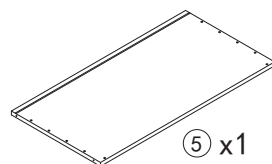


⑤ x1

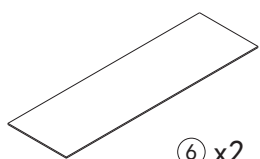


⑥ x2

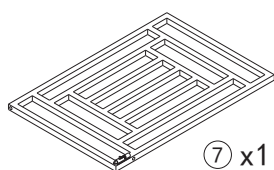


⑦ x1

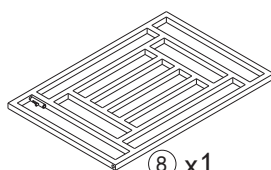


⑧ x1

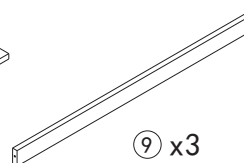


⑨ x3

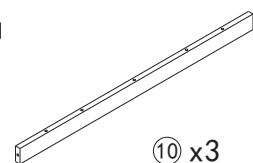


⑩ x3

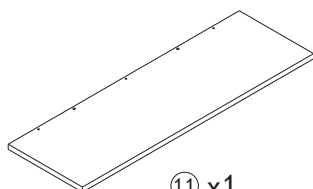


⑪ x1

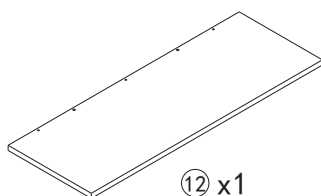

⑫ x1

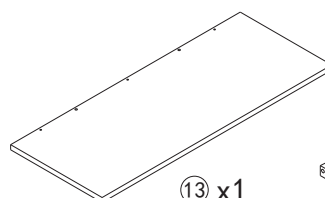


⑬ x1

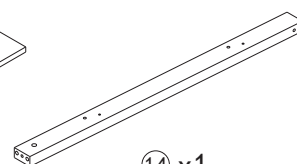


⑭ x1



⑮ x1

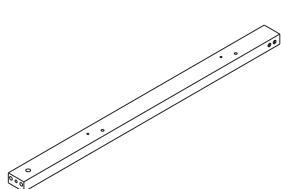

⑯ x1

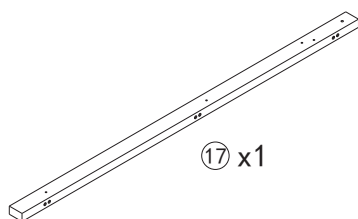


⑰ x1




⑱ x1




⑲ x1



⑳ x1

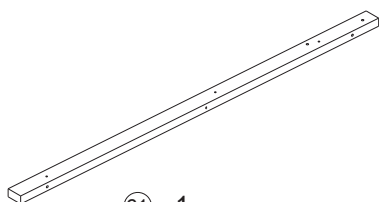


㉑ x1

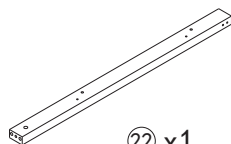


㉒ x1



㉓ x1

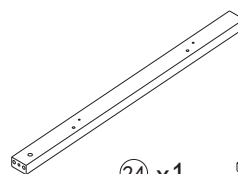


㉔ x1

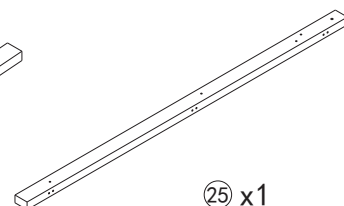


㉕ x1




㉖ x1










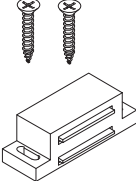



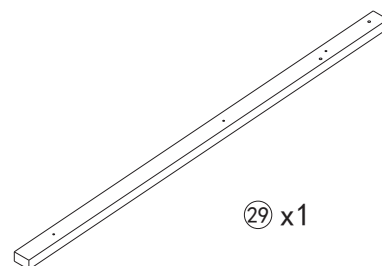

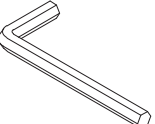





㉗ x1





㉘ x1

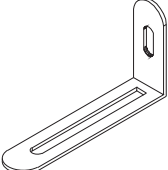


㉙ x1

<p>A M6*35mm</p>  <p>27+2pcs</p>	<p>B Φ15*10mm</p>  <p>31+3pcs</p>	<p>C M8*30mm</p>  <p>28+2pcs</p>	<p>D M4*40mm</p>  <p>19+1pcs</p>
<p>E M6*55mm</p>  <p>4pcs</p>	<p>F</p>  <p>4pcs</p>	<p>G M4*25mm</p>  <p>4pcs</p>	<p>H</p>  <p>2sets</p>
<p>I M4*55mm</p>  <p>16+1pcs</p>	<p>J M5*40mm</p>  <p>26+2pcs</p>	<p>K</p>  <p>4pcs</p>	<p>L</p>  <p>2pcs</p>
<p>M M4*12mm</p>  <p>2pcs</p>	<p>N</p>  <p>1pc</p>	<p>O</p>  <p>2pcs</p>	<p>P</p>  <p>8sets</p>
<p>Q</p>  <p>38+3pcs</p>	<p>R M8*50mm</p>  <p>8pcs</p>	<p>S</p>  <p>4pcs</p>	


"B" Hardware installation example

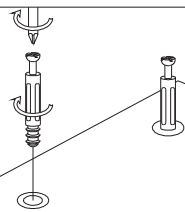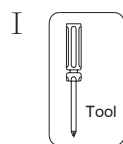


II

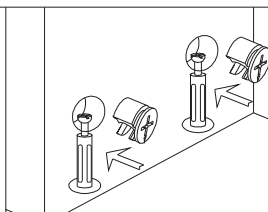

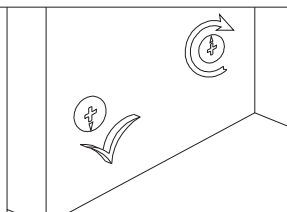

III

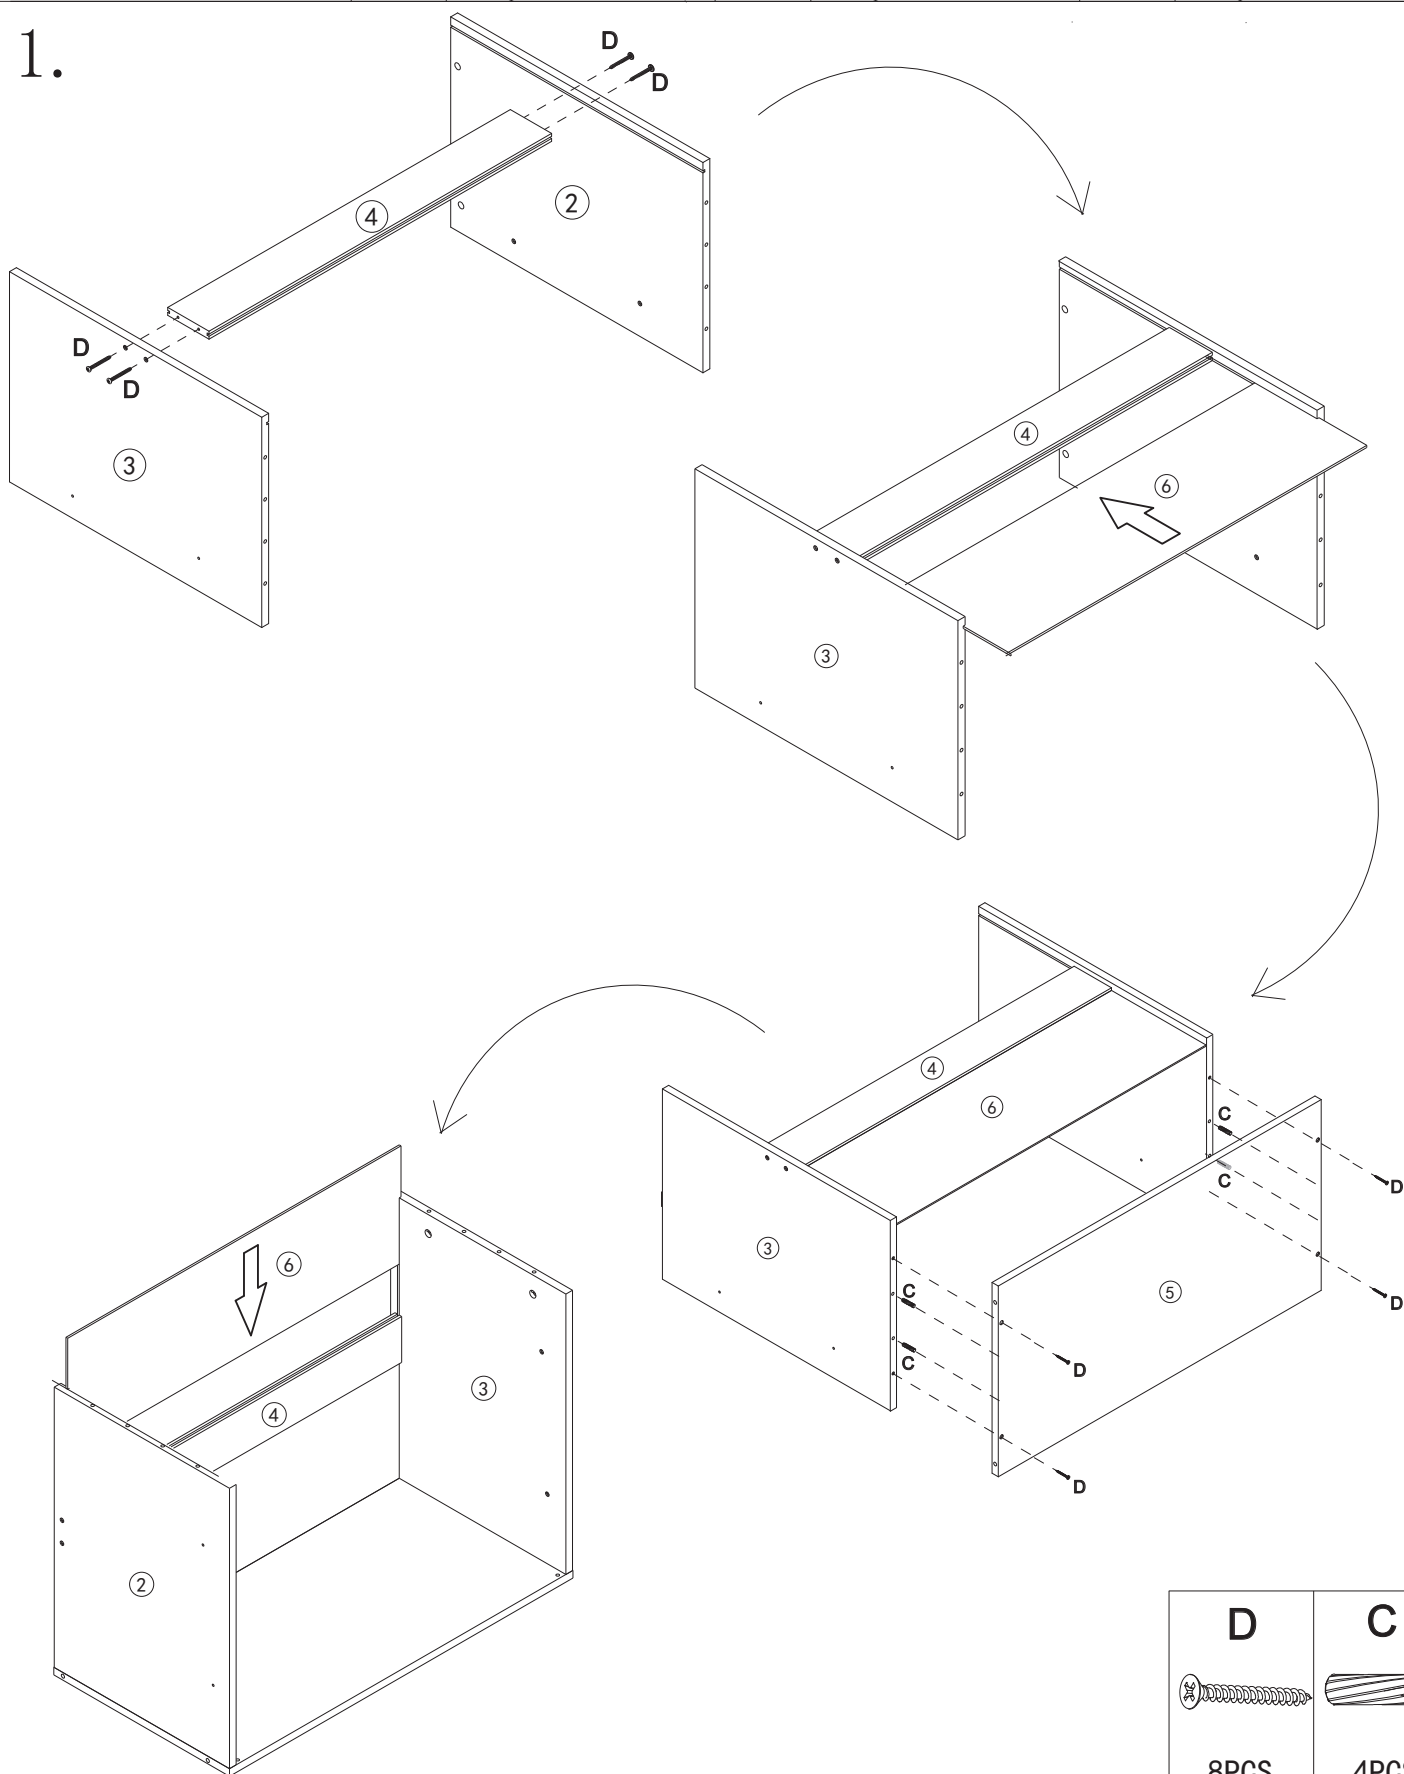


1.





D	C
	
8PCS	4PCS

2.

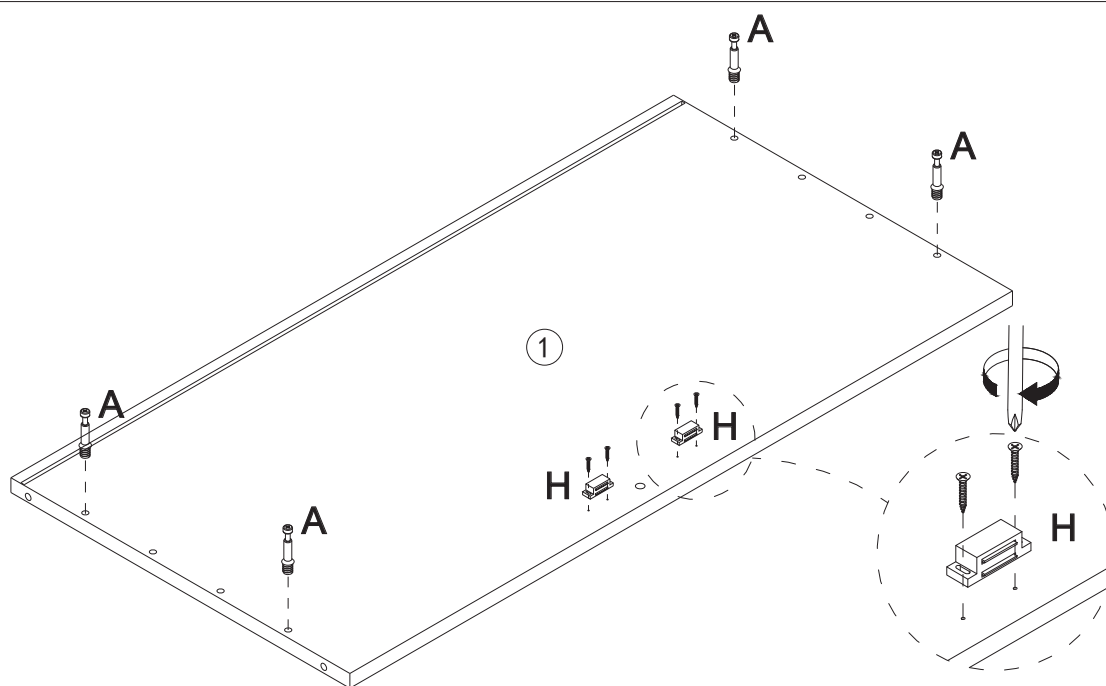


H	A
2SETS	4PCS

3.

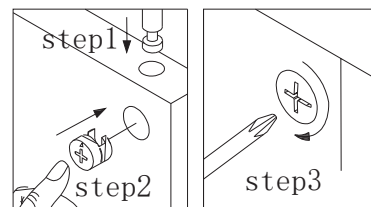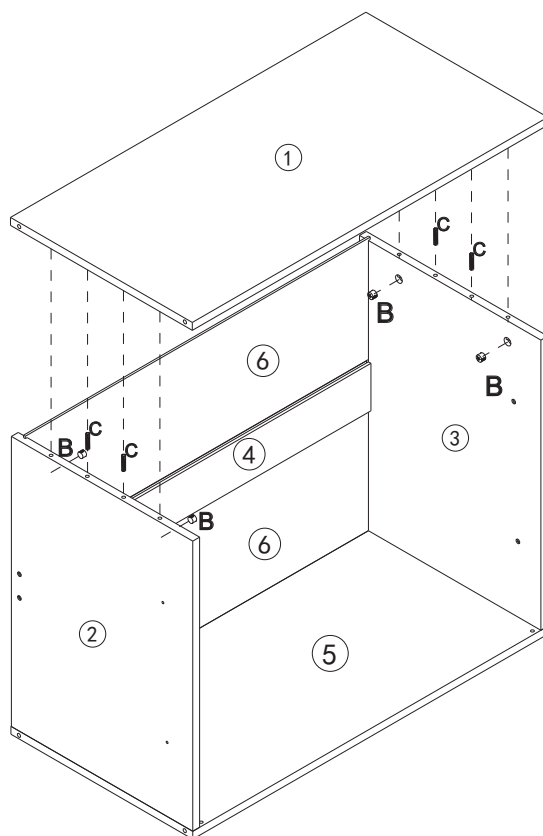


C	B
4PCS	4PCS

4.

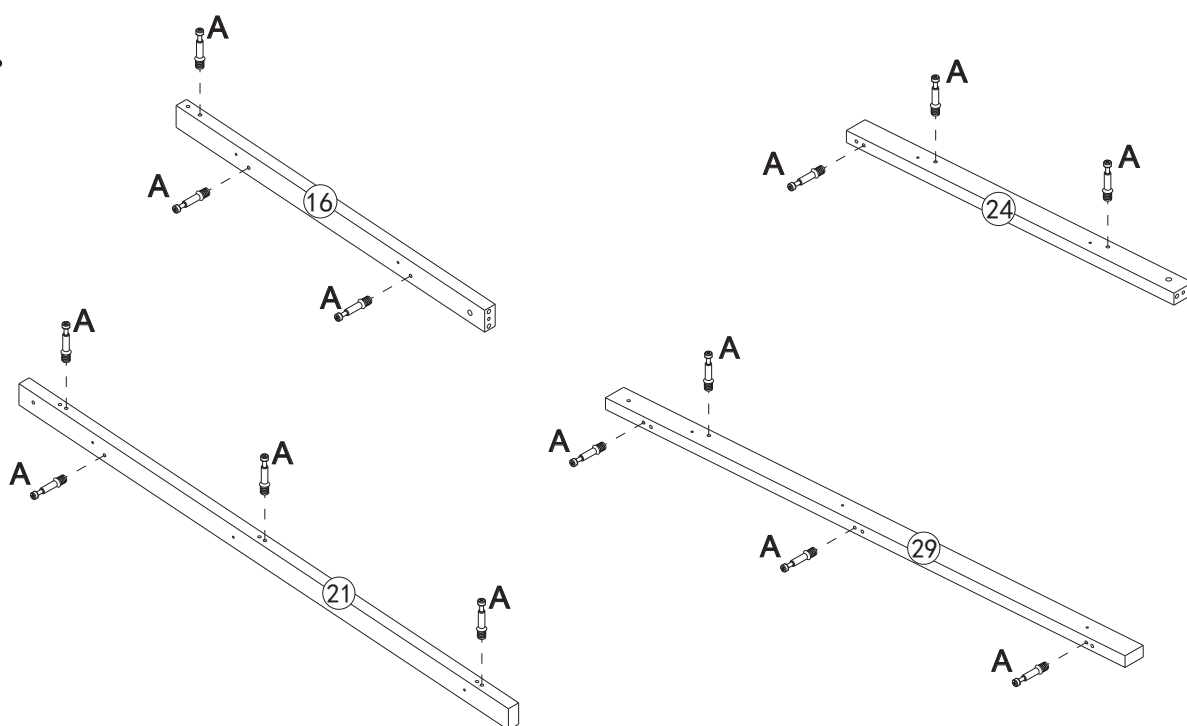



A
14PCS

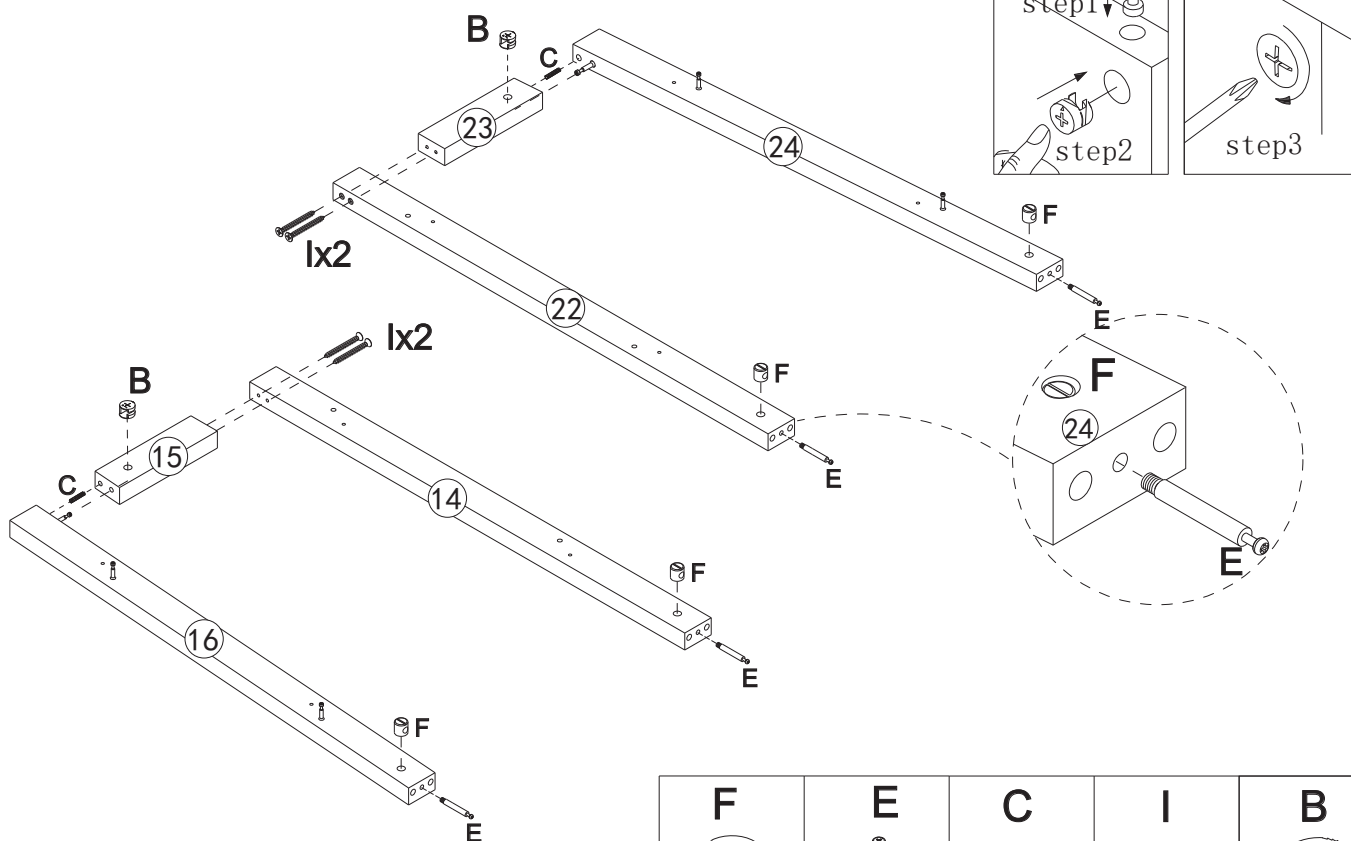


5.






F	E	C	I	B
4PCS	4PCS	2PCS	4PCS	2PCS

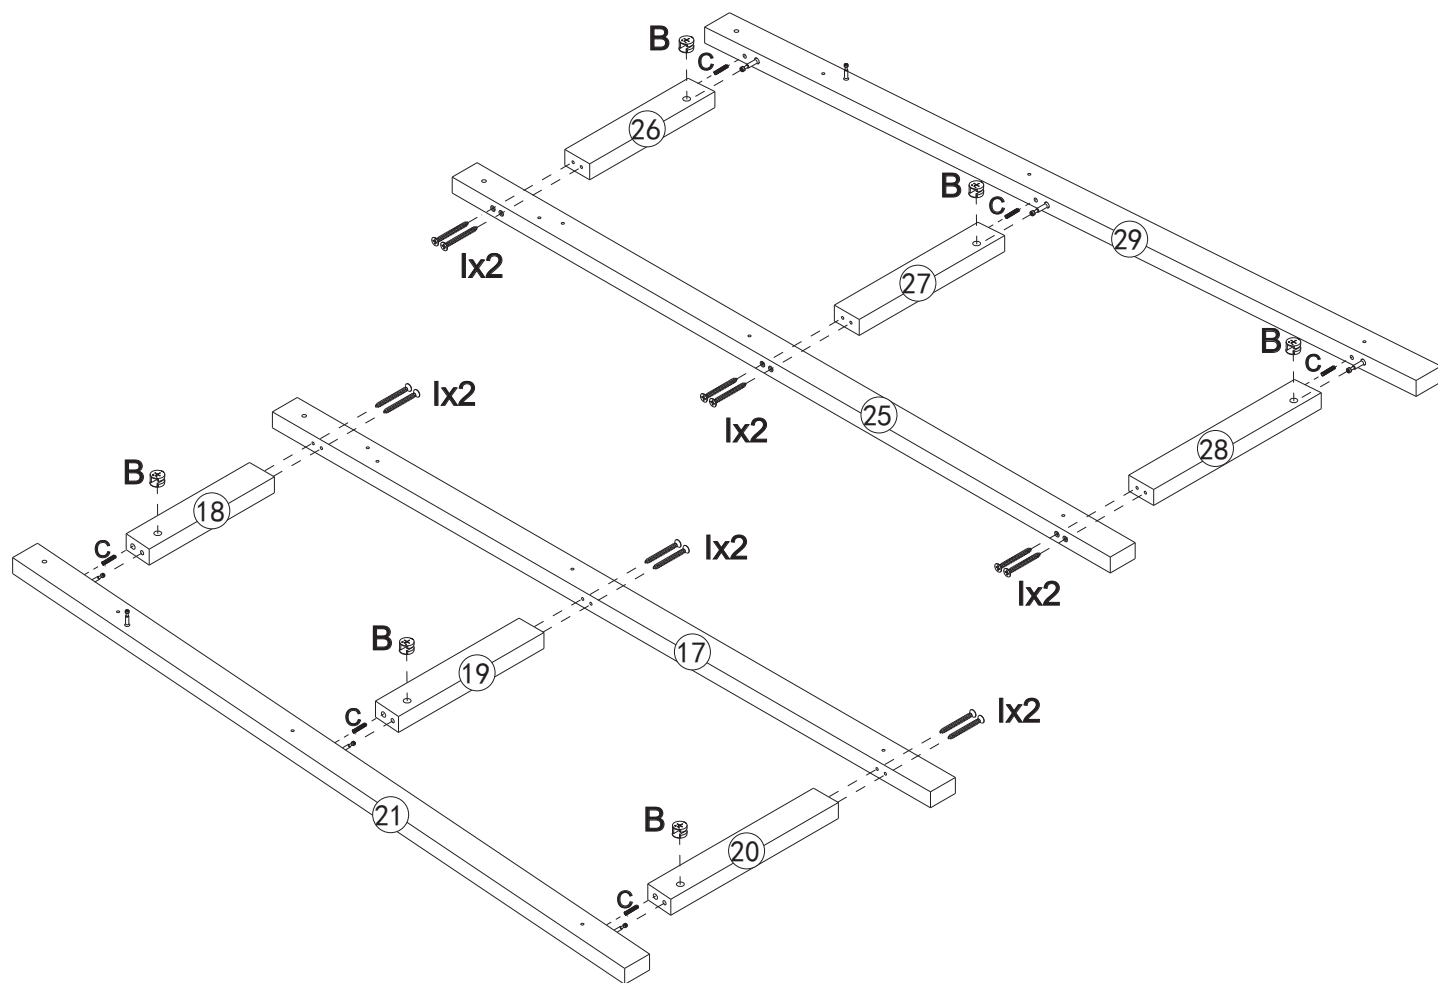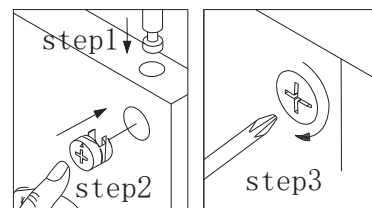6.




C	I	B
		
6PCS	12PCS	6PCS




7.

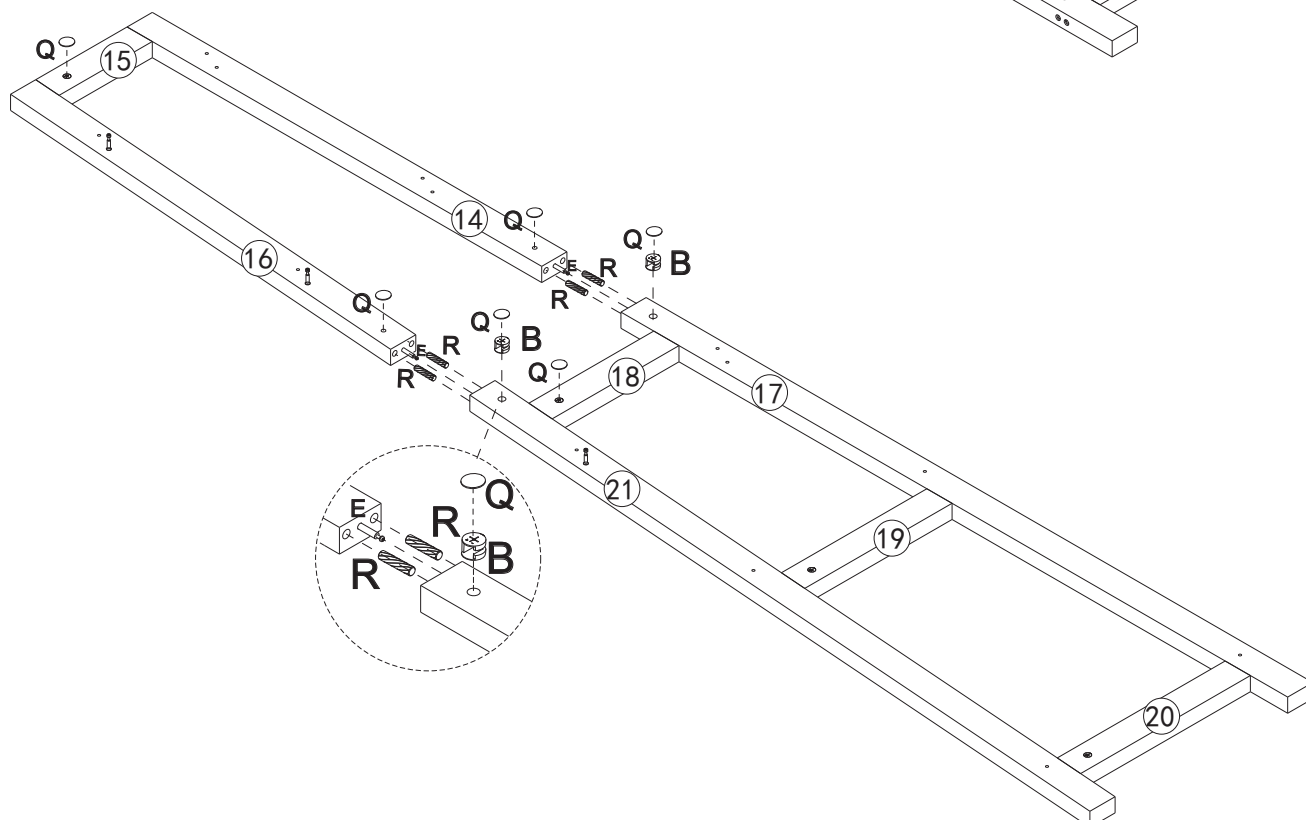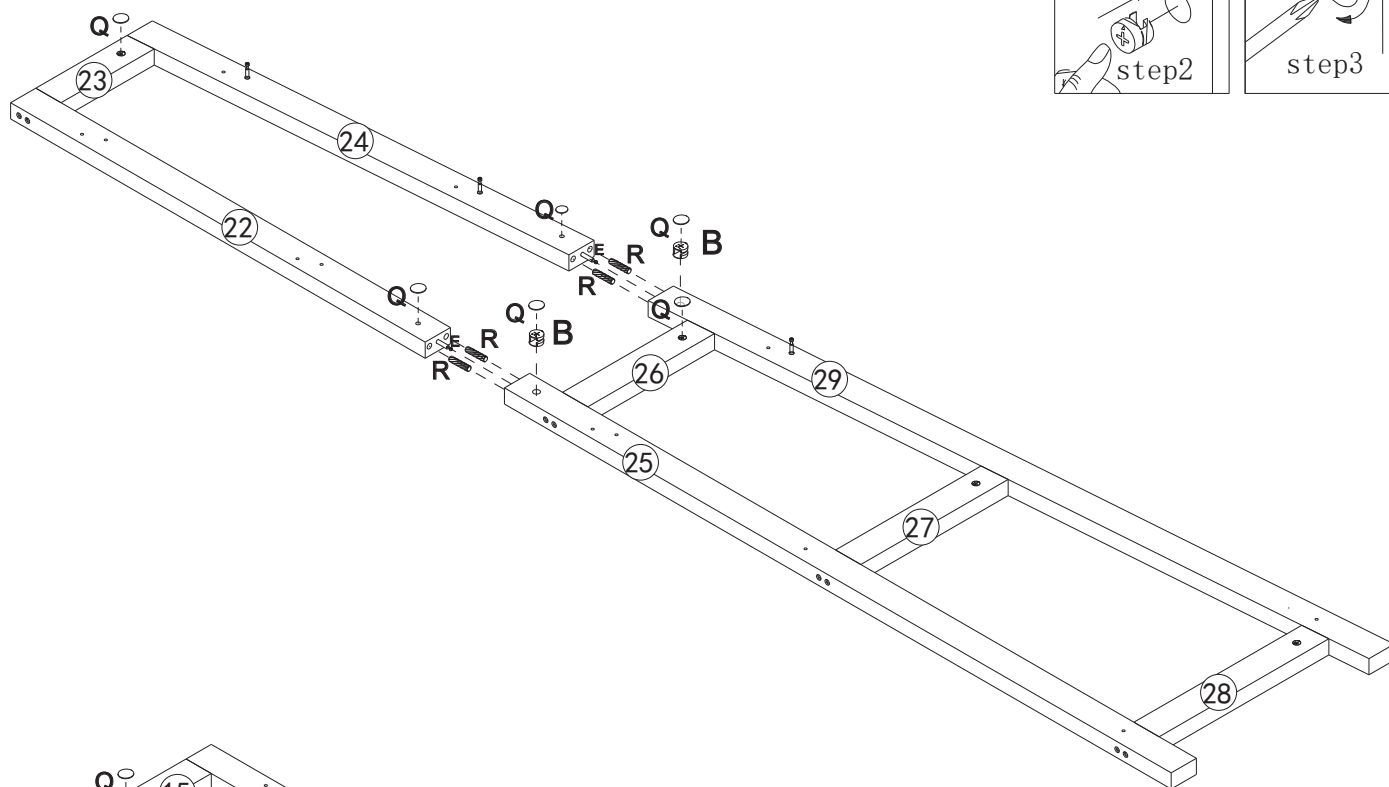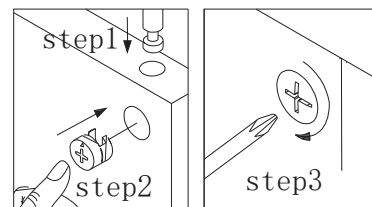


Q	R	B
12PCS	8PCS	4PCS

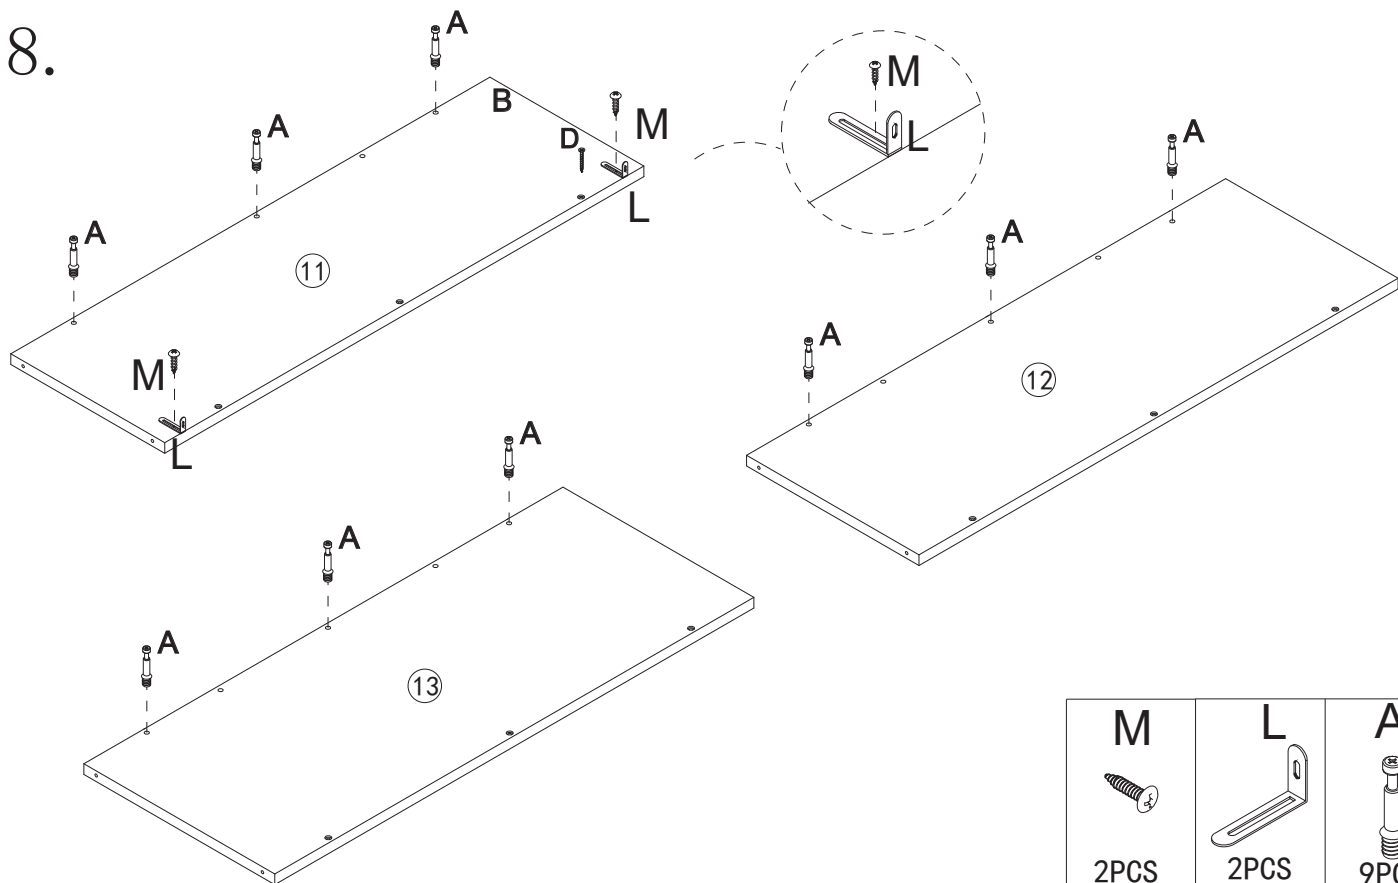


8.





M	L	A
		
2PCS	2PCS	9PCS

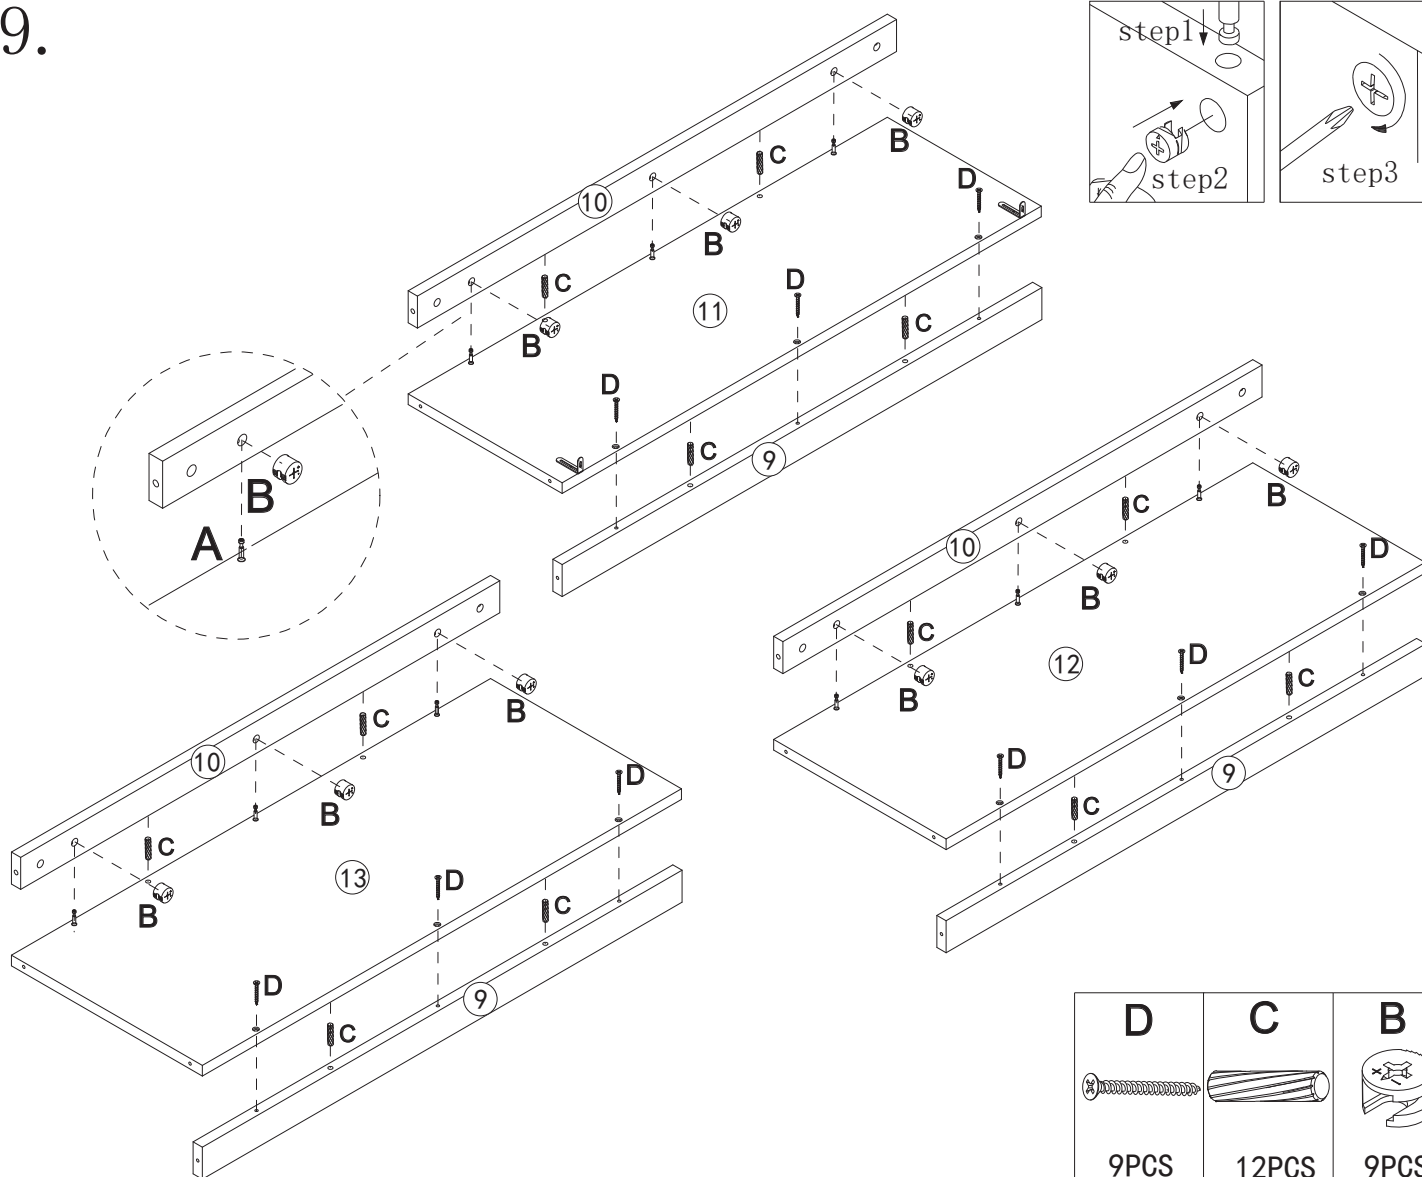9.





D	C	B
		
9PCS	12PCS	9PCS




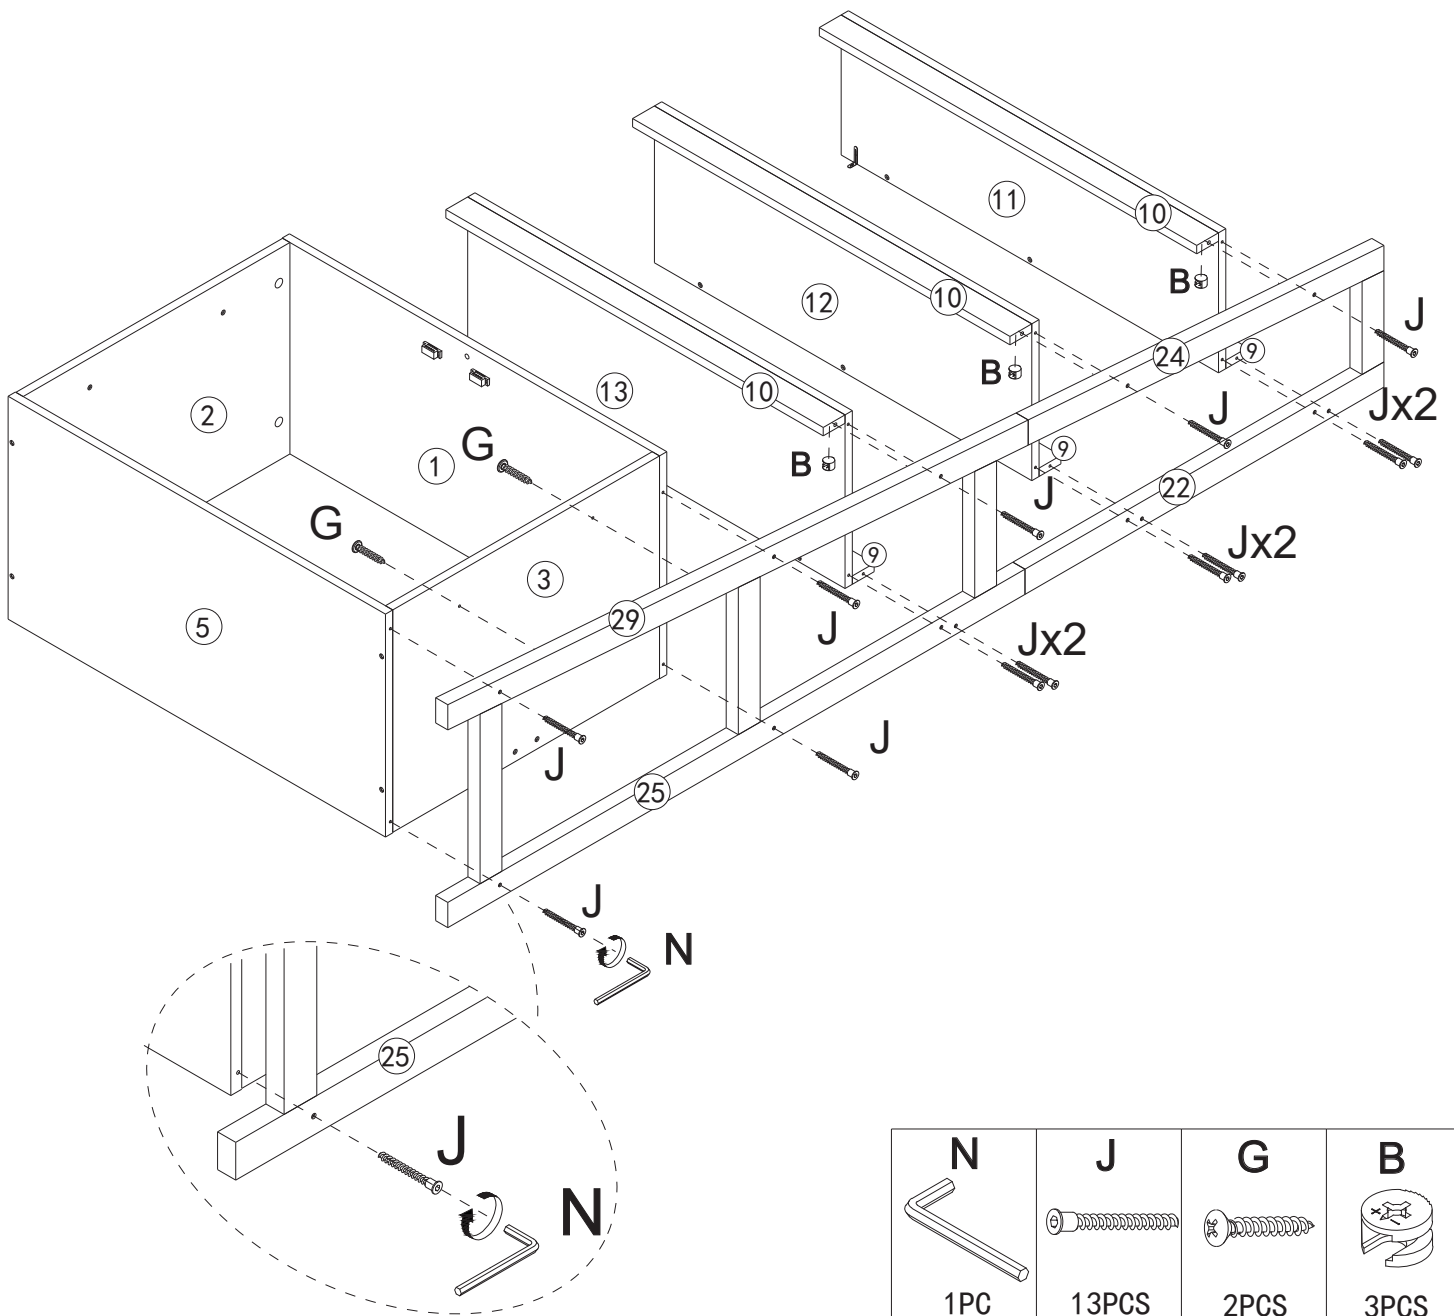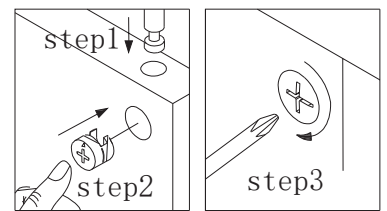

10.

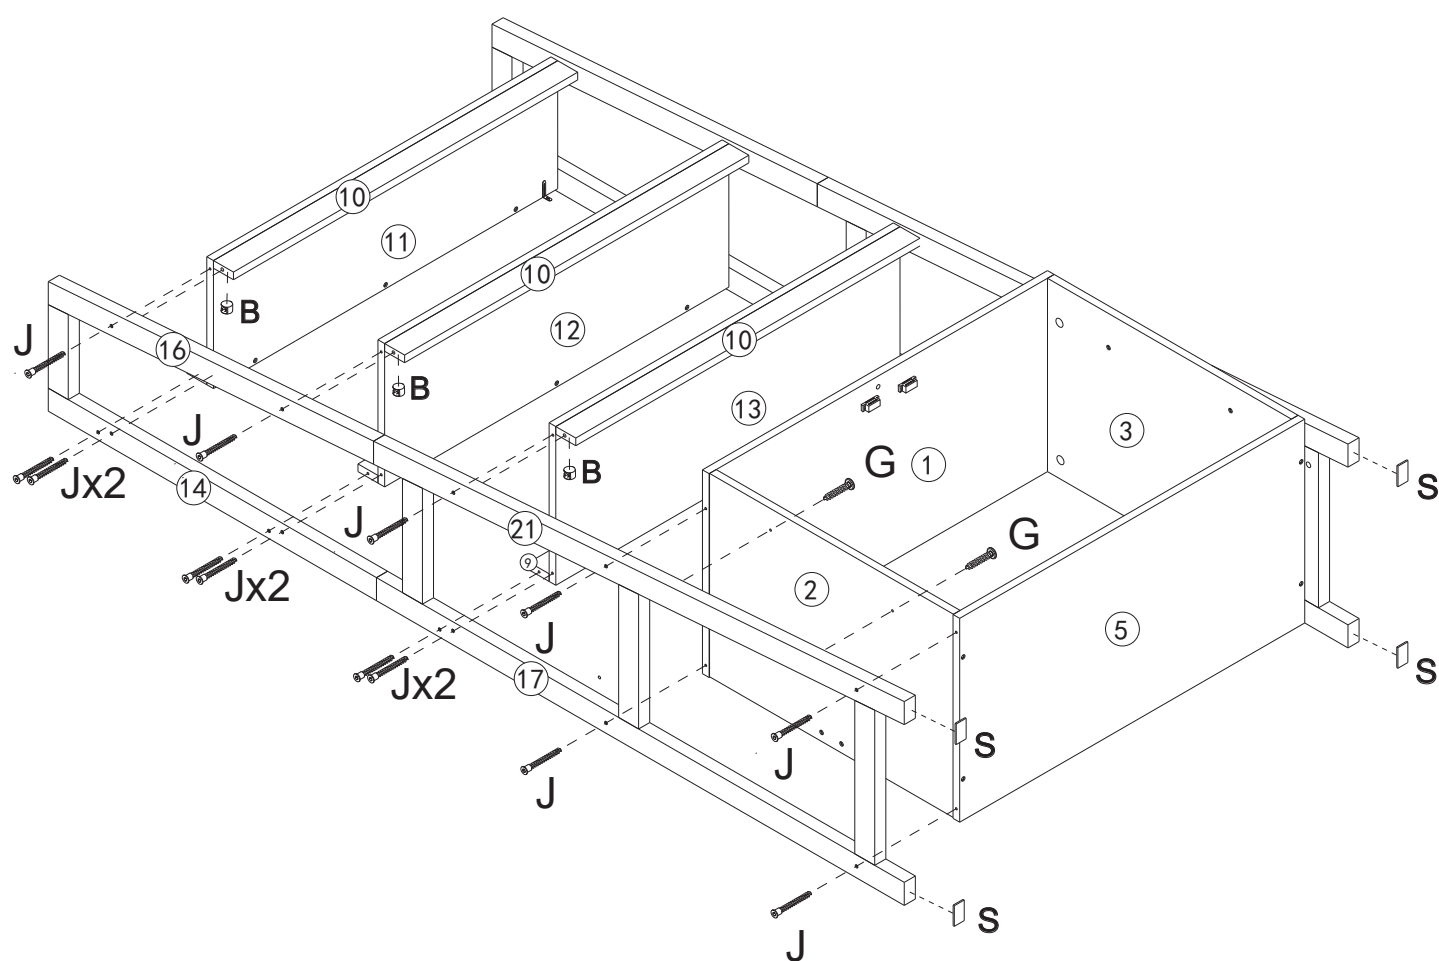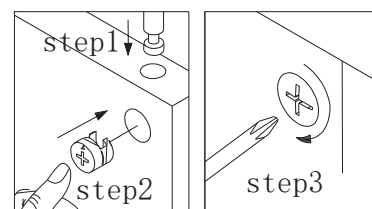


N	J	G	B
1PC	13PCS	2PCS	3PCS



11.




N	S	J	G	B
				
1PC	4PCS	13PCS	2PCS	3PCS


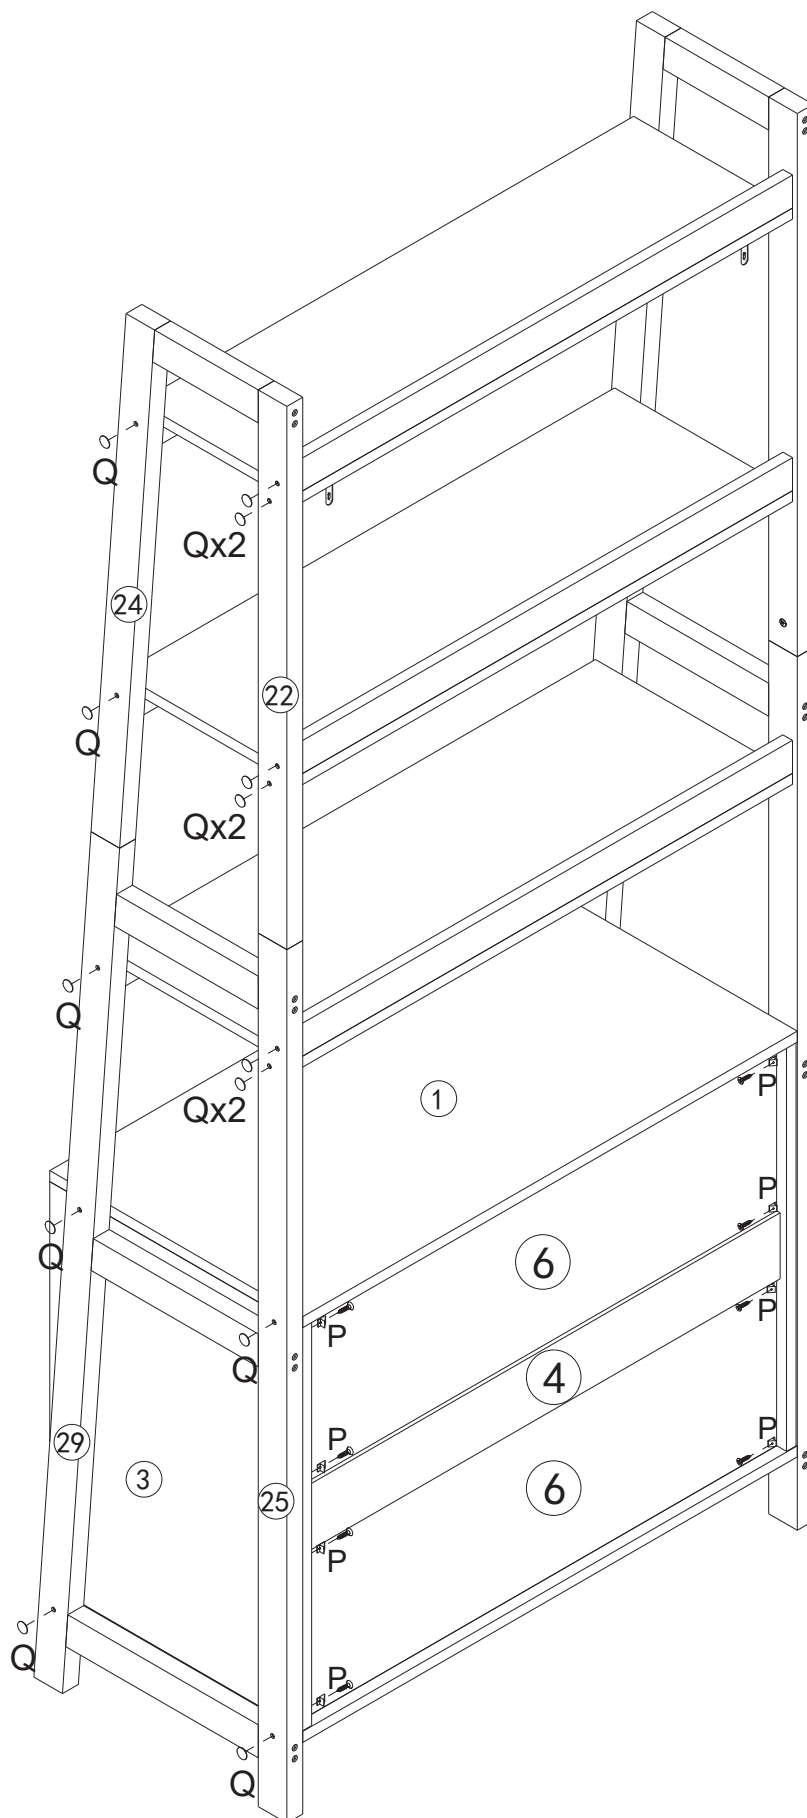


12.



P	Q
	
8SETS	13PCS

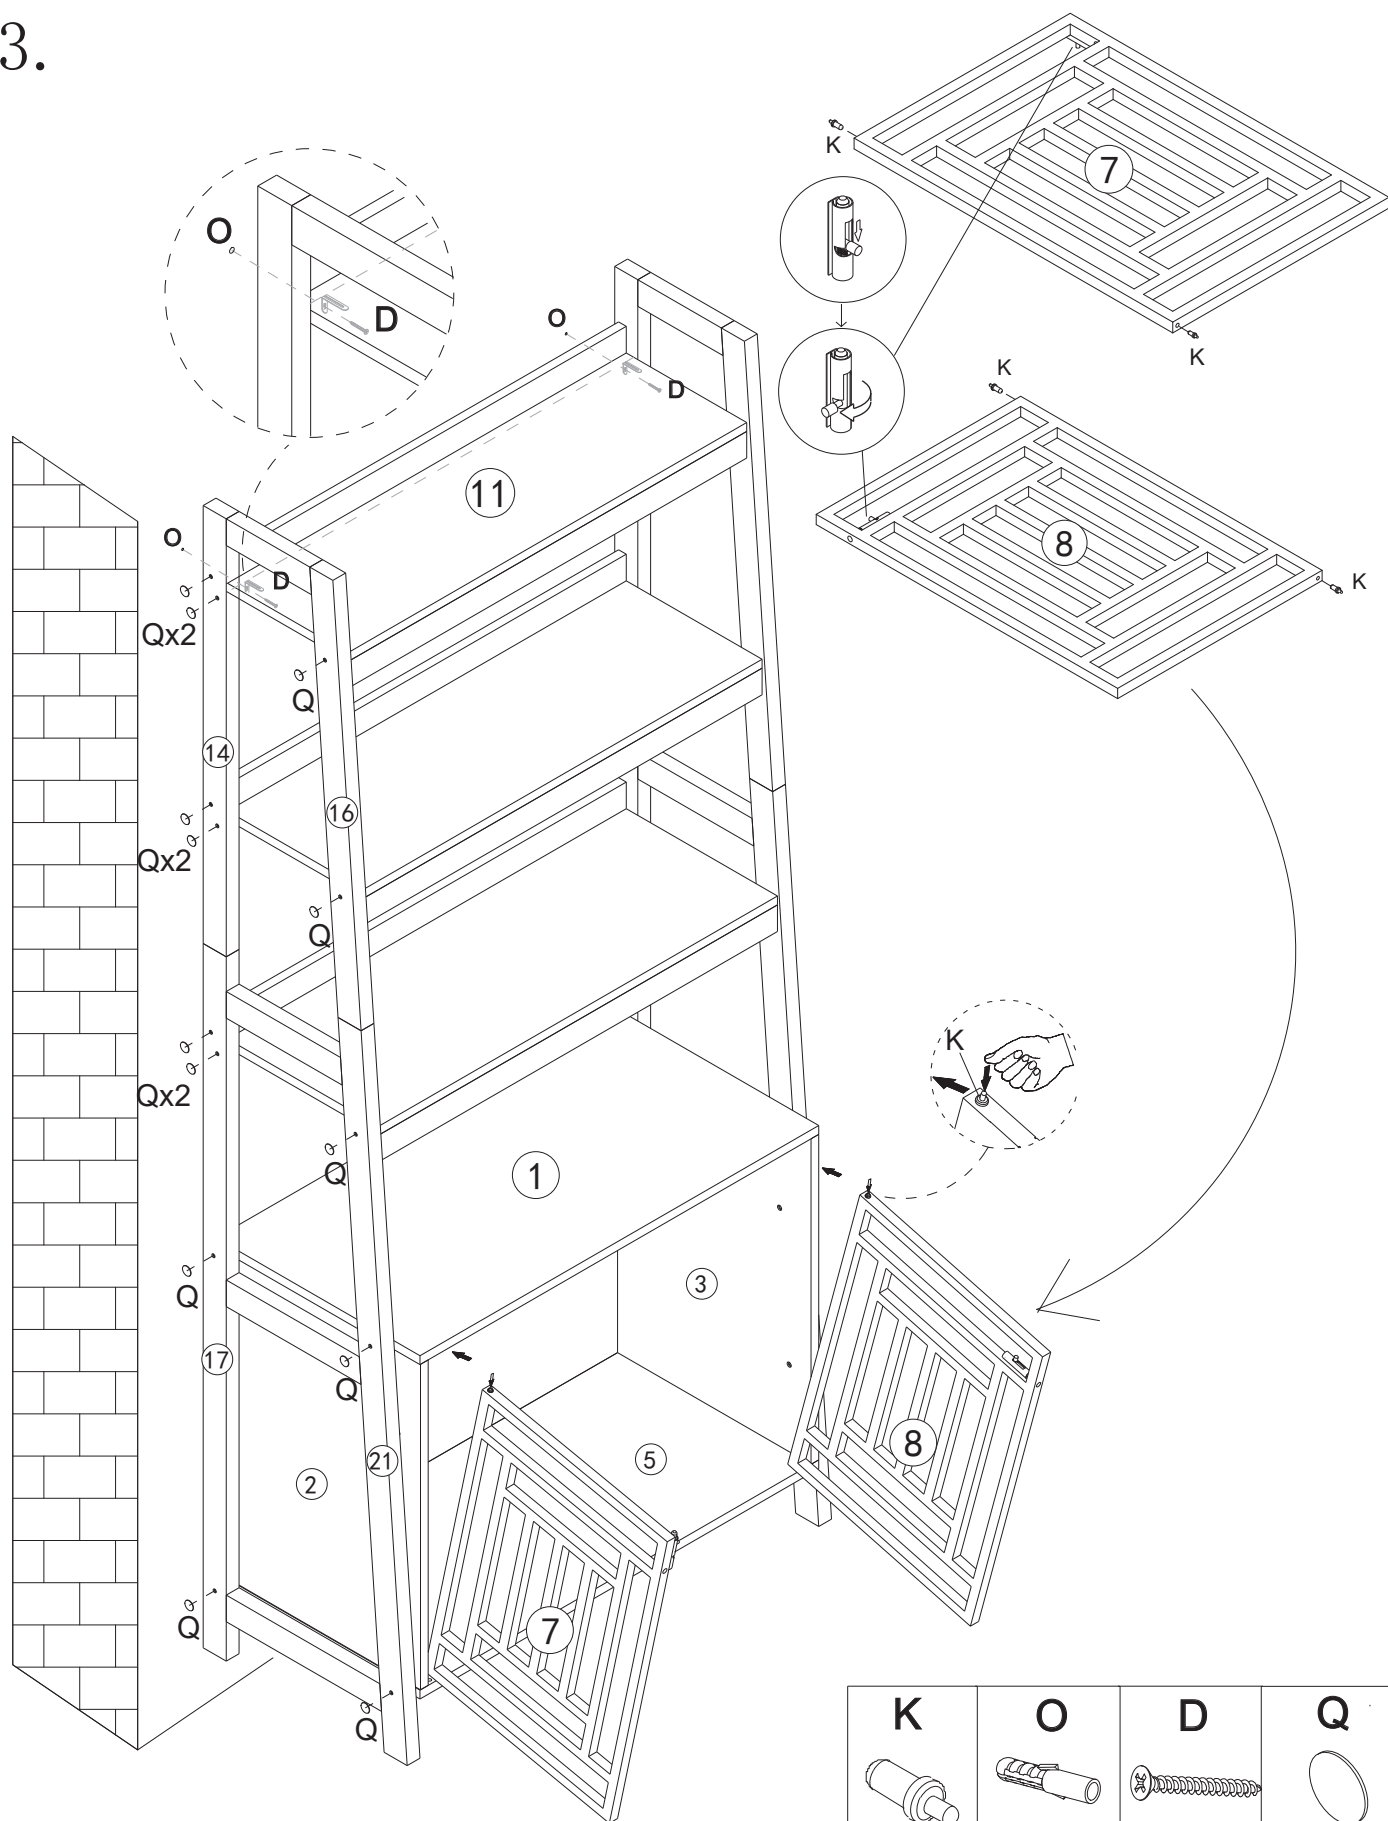13.



K	O	D	Q
			
4PCS	2PCS	2PCS	13PCS

14.

