

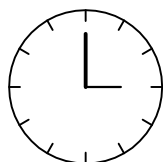
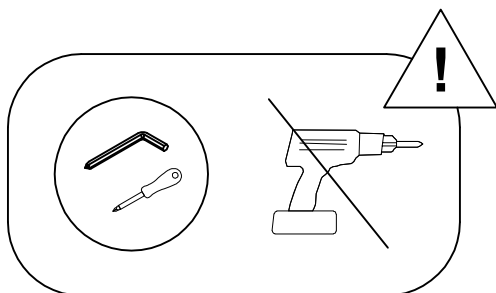
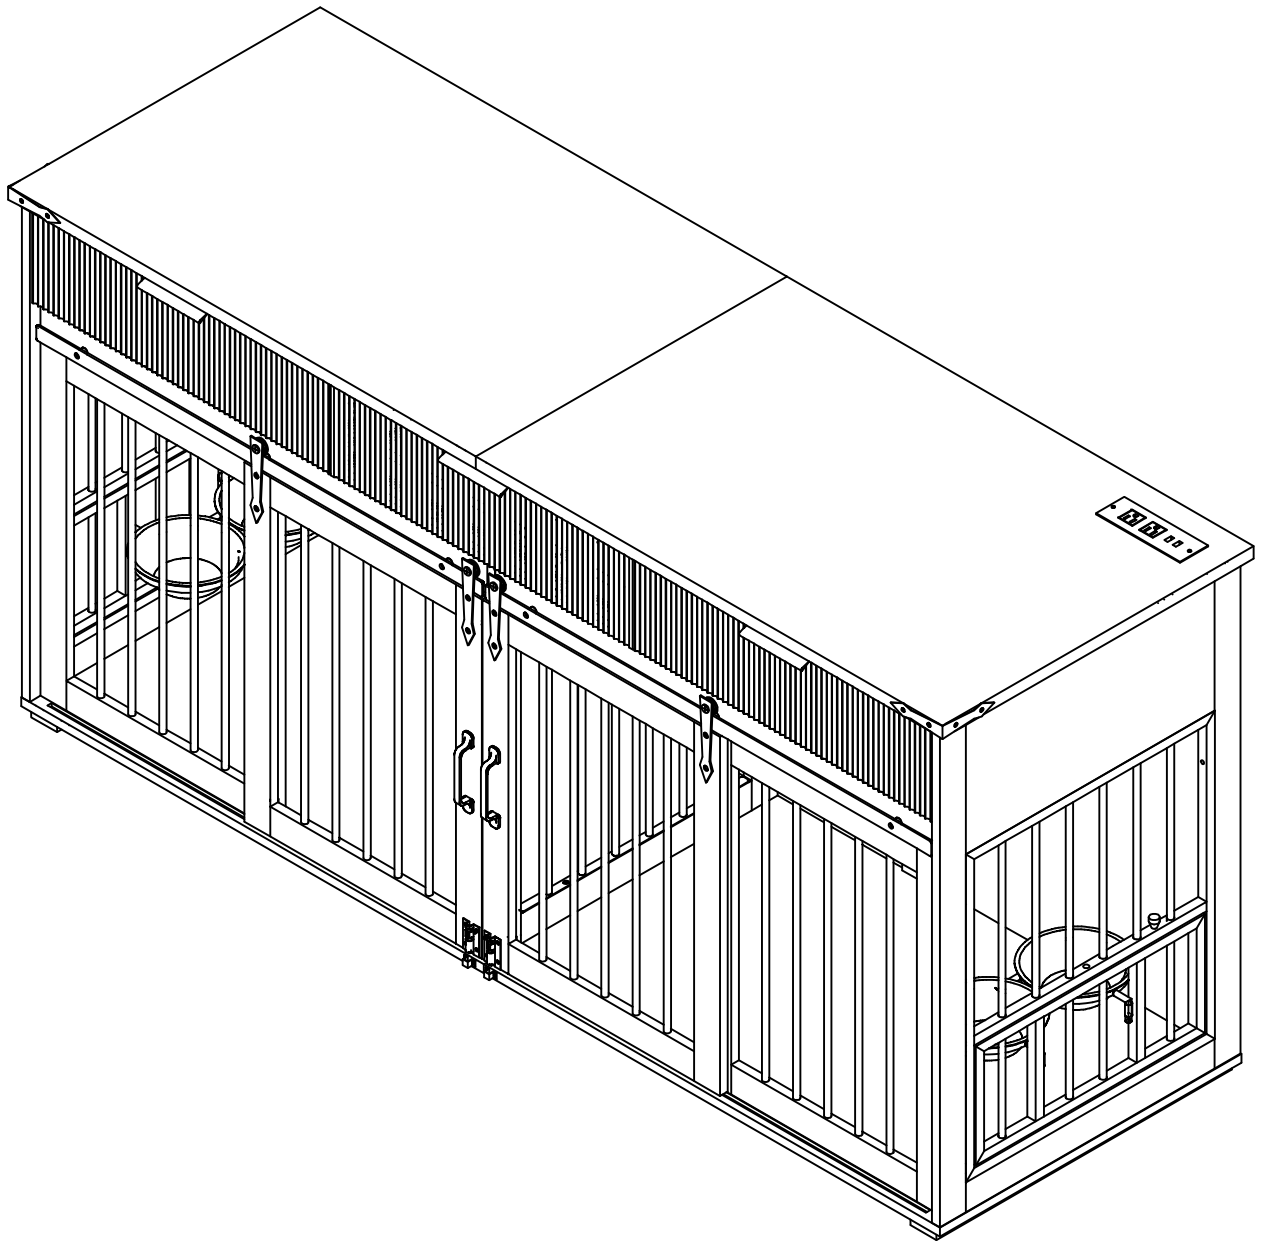


ASSEMBLY INSTRUCTION

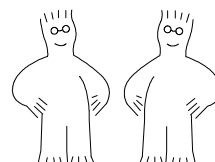

90'

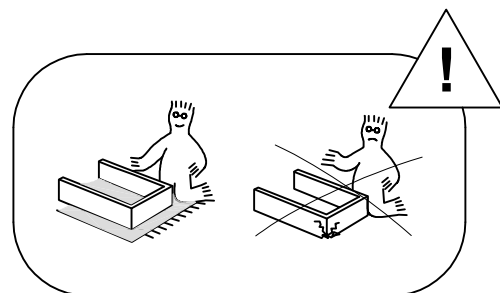

2



WARNING:

Please read this manual carefully before using the product. Failure to do so may result in serious injury.

ASSEMBLY PRECAUTIONS

1. Assemble only according to these instructions. Improper assembly can create hazards.
2. Wear ANSI-approved safety goggles and heavy-duty work gloves during assembly.
3. Keep the assembly area clean and well-lit.
4. Keep bystanders out of the area during assembly.
5. Do not assemble when tired or when under the influence of alcohol, drugs or medication.
6. The product capabilities apply to properly and completely assembled products only.
7. Assemble on a flat, level, hard and smooth surface capable of safely.
8. For additional information regarding the parts listed in the following pages, please refer to the Assembly Diagram of this manual. Unwrap and separate all parts in a clean work area.


SAVE THESE INSTRUCTIONS



















USE PRECAUTIONS










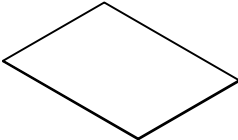
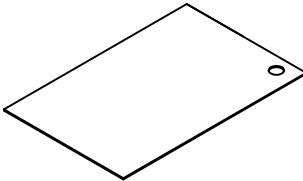
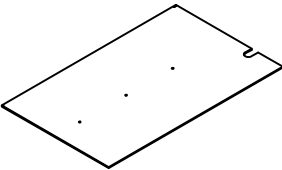
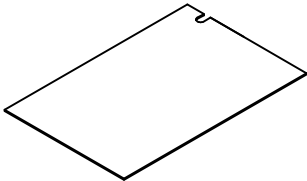
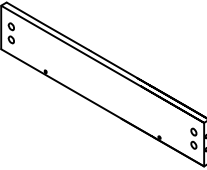
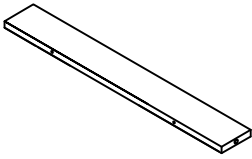
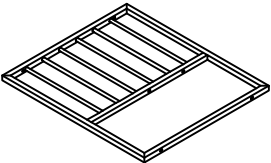
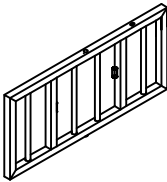
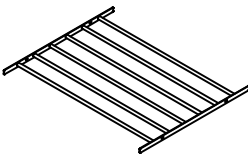
1. This product is not a toy Do not allow children to play with or near this item.
2. Do not exceed weight capacities, before moving.
3. Use only on a flat, level, hard and smooth surface capable of safely.
4. Use as intended only.
Inspect before every use; do not use if parts are loose or damaged.




WARNING!

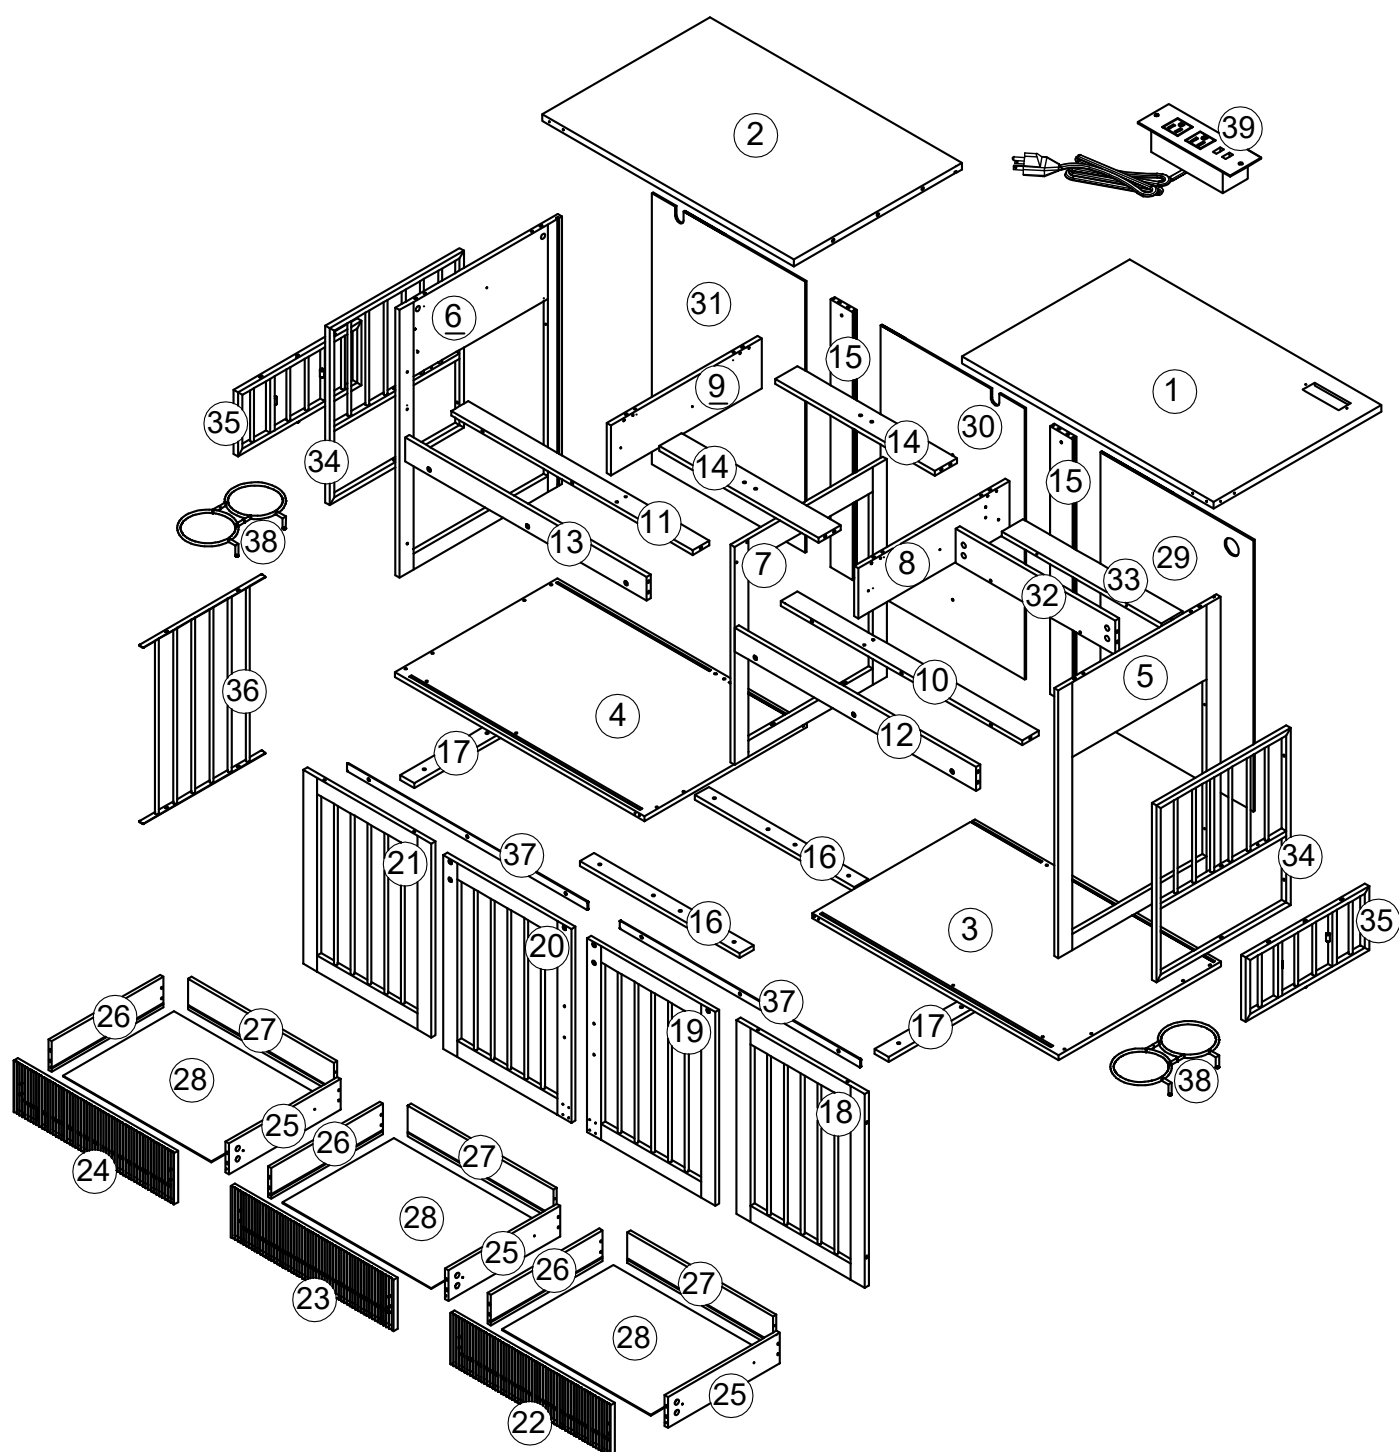





Serious or fatal crushing injuries can occur from furniture tip over. To prevent tip over this furniture must be used with the wall attachment device(s) provided.

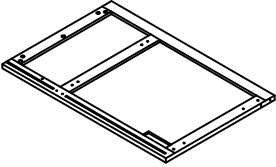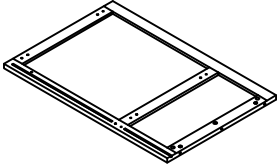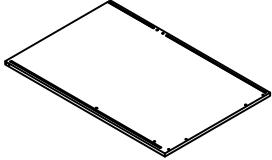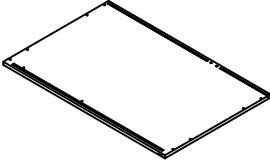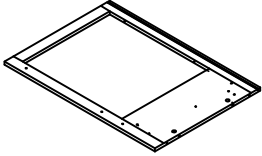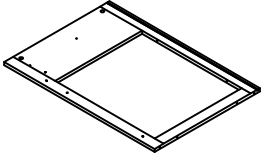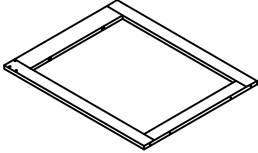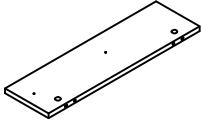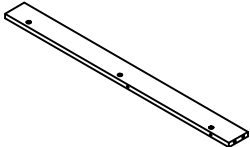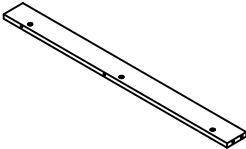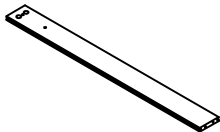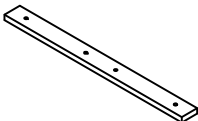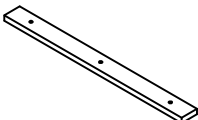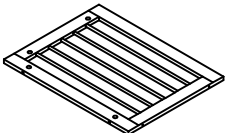

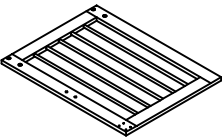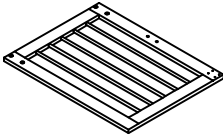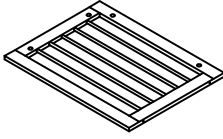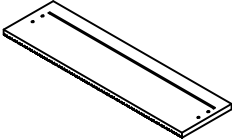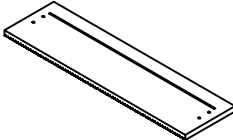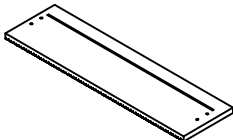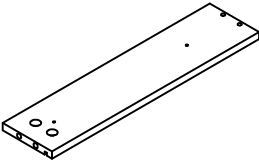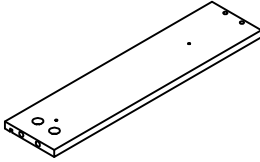

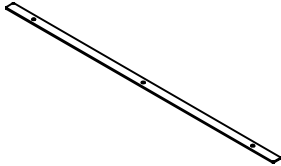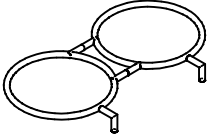















<div>①</div>  <div>X1PC</div>	<div>②</div>  <div>X1PC</div>	<div>③</div>  <div>X1PC</div>
<div>④</div>  <div>X1PC</div>	<div>⑤</div>  <div>X1PC</div>	<div>⑥</div>  <div>X1PC</div>
<div>⑦</div>  <div>X1PC</div>	<div>⑧</div>  <div>X1PC</div>	<div>⑨</div>  <div>X1PC</div>
<div>⑩</div>  <div>X1PC</div>	<div>⑪</div>  <div>X1PC</div>	<div>⑫</div>  <div>X1PC</div>
<div>⑬</div>  <div>X1PC</div>	<div>⑭</div>  <div>X2PCS</div>	<div>⑮</div>  <div>X2PCS</div>
<div>⑯</div>  <div>X2PCS</div>	<div>⑰</div>  <div>X2PCS</div>	<div>⑱</div>  <div>X1PC</div>







<p>19</p>  <p>X1PC</p>	<p>20</p>  <p>X1PC</p>	<p>21</p>  <p>X1PC</p>
<p>22</p>  <p>X1PC</p>	<p>23</p>  <p>X1PC</p>	<p>24</p>  <p>X1PC</p>
<p>25</p>  <p>X3PCS</p>	<p>26</p>  <p>X3PCS</p>	<p>27</p>  <p>X3PCS</p>
<p>28</p>  <p>X3PCS</p>	<p>29</p>  <p>X1PC</p>	<p>30</p>  <p>X1PC</p>
<p>31</p>  <p>X1PC</p>	<p>32</p>  <p>X1PC</p>	<p>33</p>  <p>X1PC</p>
<p>34</p>  <p>X2PCS</p>	<p>35</p>  <p>X2PCS</p>	<p>36</p>  <p>X1PC</p>




<p>37</p>  <p>X2PCS</p>	<p>38</p>  <p>X2PCS</p>	<p>39</p>  <p>X1PC</p>
--	--	---

(A)	X51	(B)	X57	(C)	X16	(D)	X2	(E)	X10	(F)	X14
											
Ø6*35mm		Ø15*9.5mm		Ø6*30mm		M6*45mm		M6*25mm		M6*22mm	


	X12		X2		X62		X54		X2		X10
											
M6*10mm		M6		ST5*40mm		ST3.5*12mm		M4*18mm		ST4*12mm	


(M)	X3	(N)	X6	(O)	X4	(P)	X4	(Q)	X2	(R)	X2
											
ST3.5*12mm		340mm								6*30mm&4*35mm	

<div>S</div>	X6	<div>T</div>	X2	<div>U</div>	X2	<div>V</div>	X2	<div>W</div>	X4	<div>X</div>	X3
											
		Ø15-Ø6.5*3mm								Ø6*70mm	


Y	X1	Z	X1	Z1	X1
					
S4		S3			


Step1

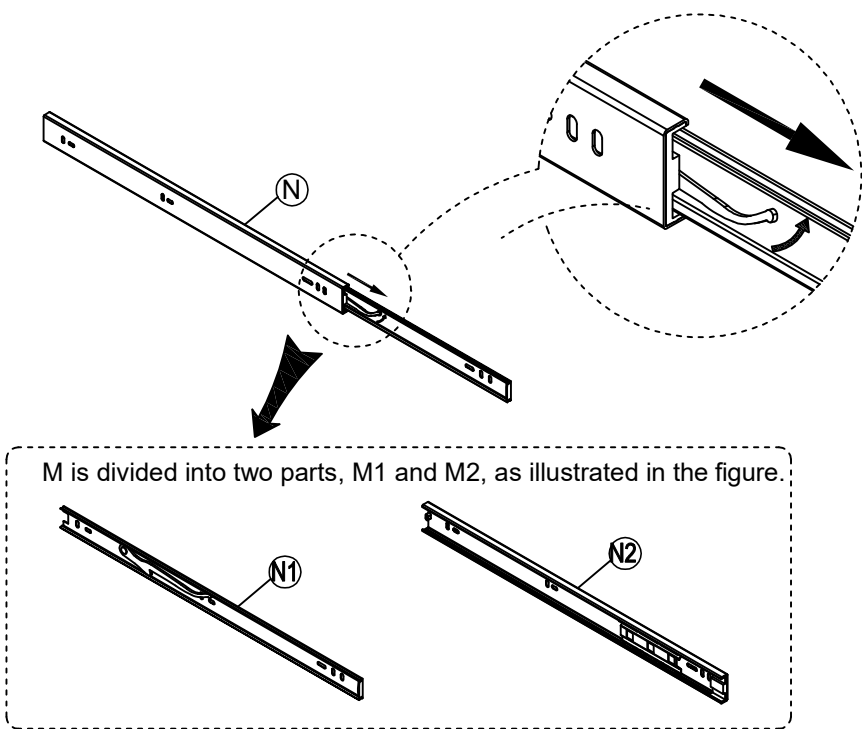




(N)	X6
	
340mm	

Step2

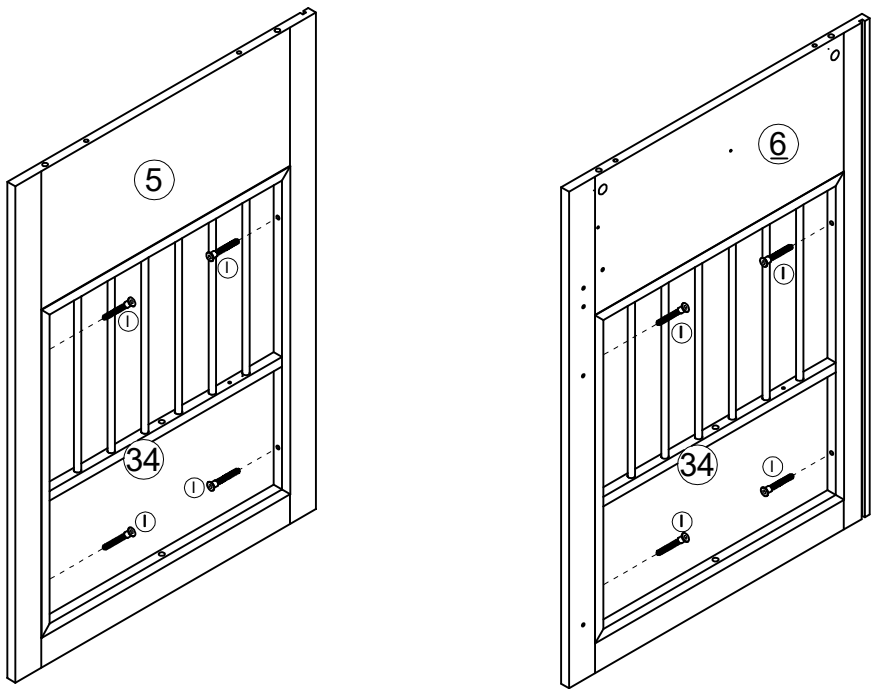




(1)	X8
	
ST5*40mm	

Step3

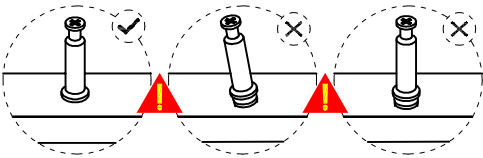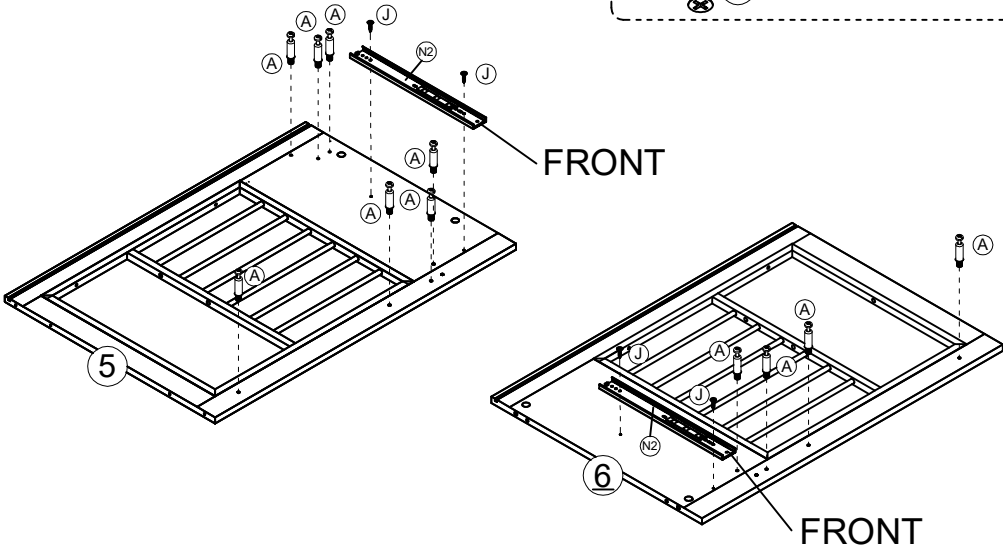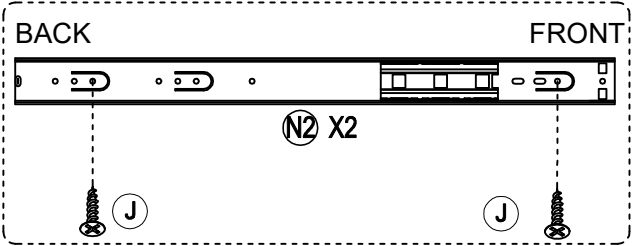



(N)	X2	(J)	X4	(A)	X11
(N2)					
	340mm	ST3.5*12mm		Ø6*35mm	


Step4

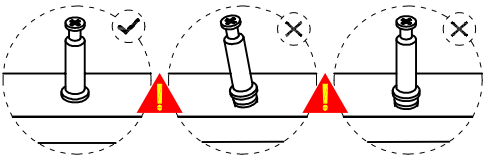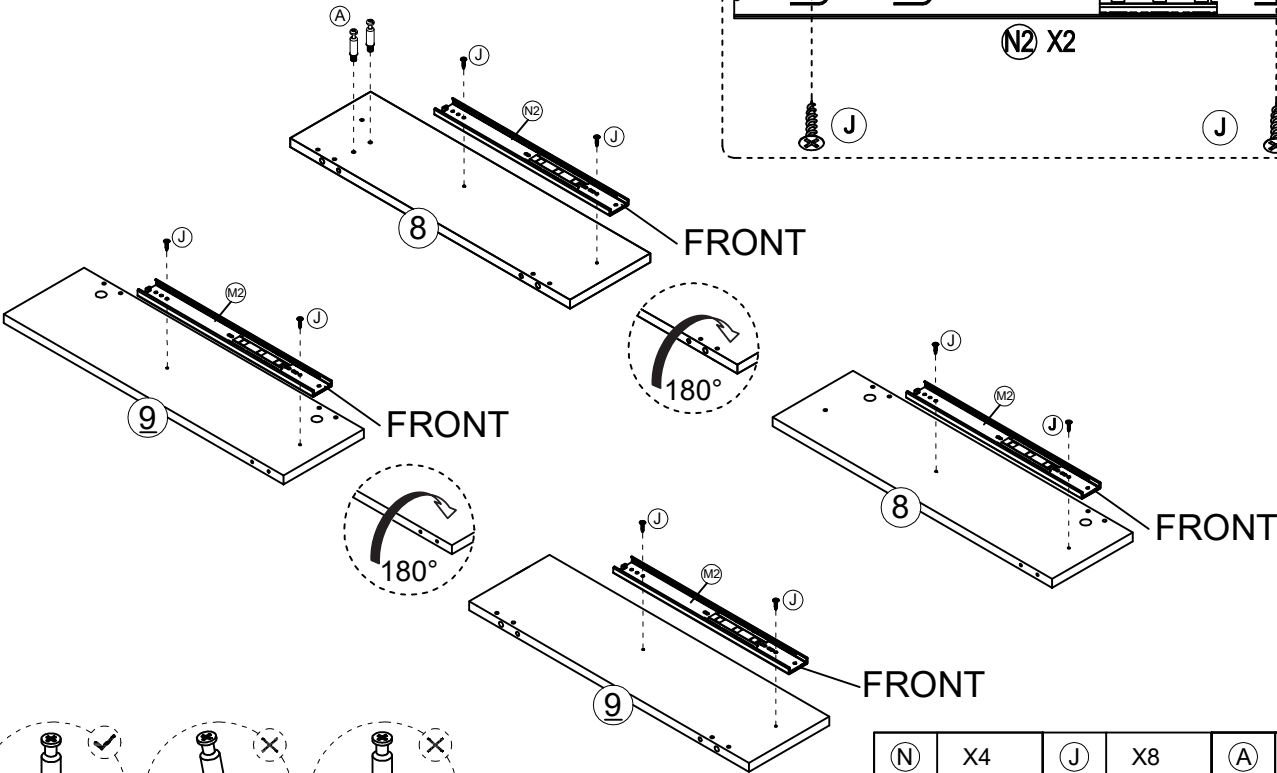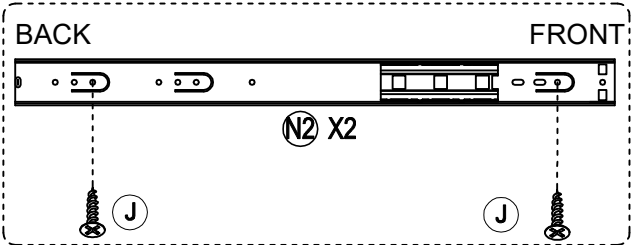




(N)	X4	(J)	X8	(A)	X2
(N2)					
	340mm	ST3.5*12mm		Ø6*35mm	

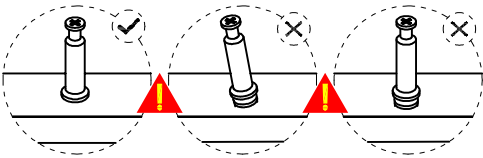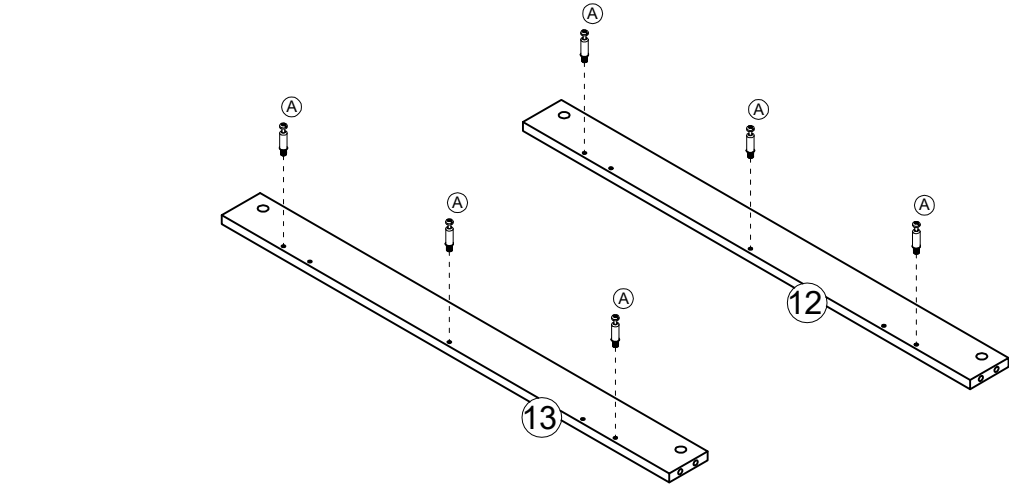


Step5




(A)	X6
	
Ø6*35mm	

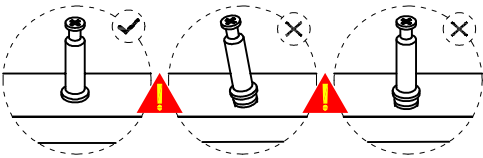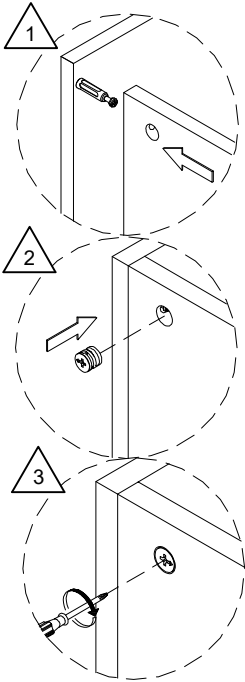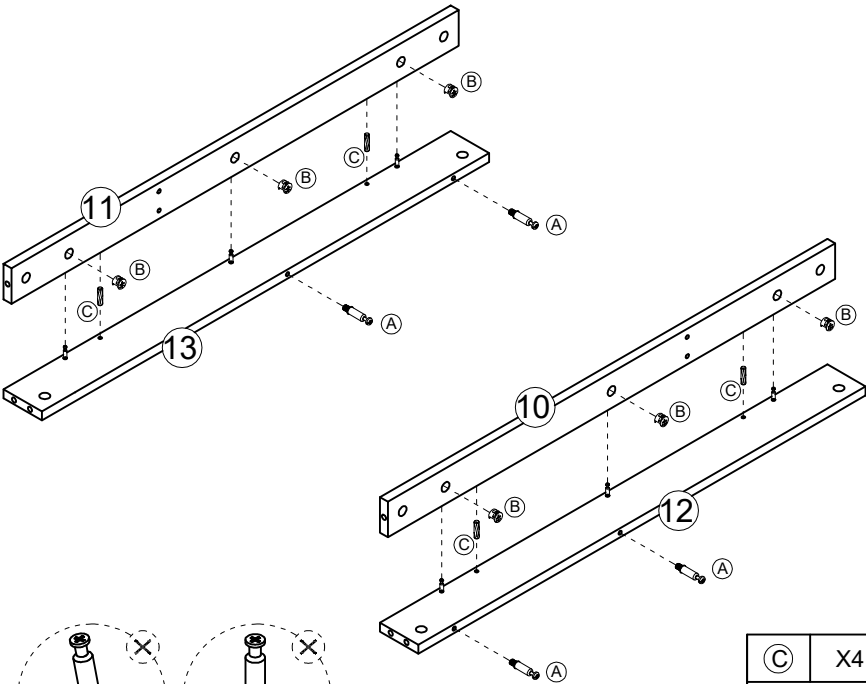Step6



(C)	X4	(B)	X6	(A)	X4
					
Ø6*30mm		Ø15*9.5mm		Ø6*35mm	

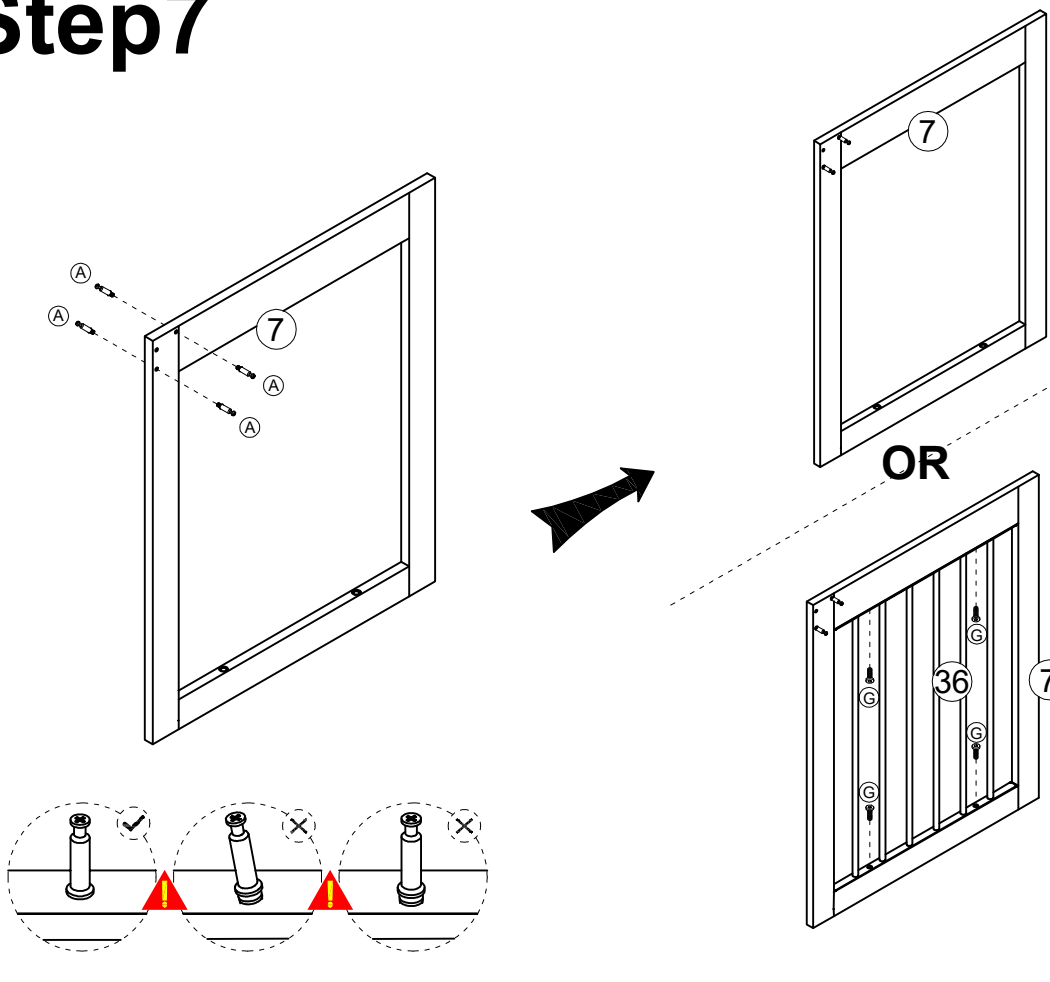

Step7




Option 1

OR

Option 2

(G)	X4	(A)	X4
			
M6*10mm		Ø6*35mm	



Step8

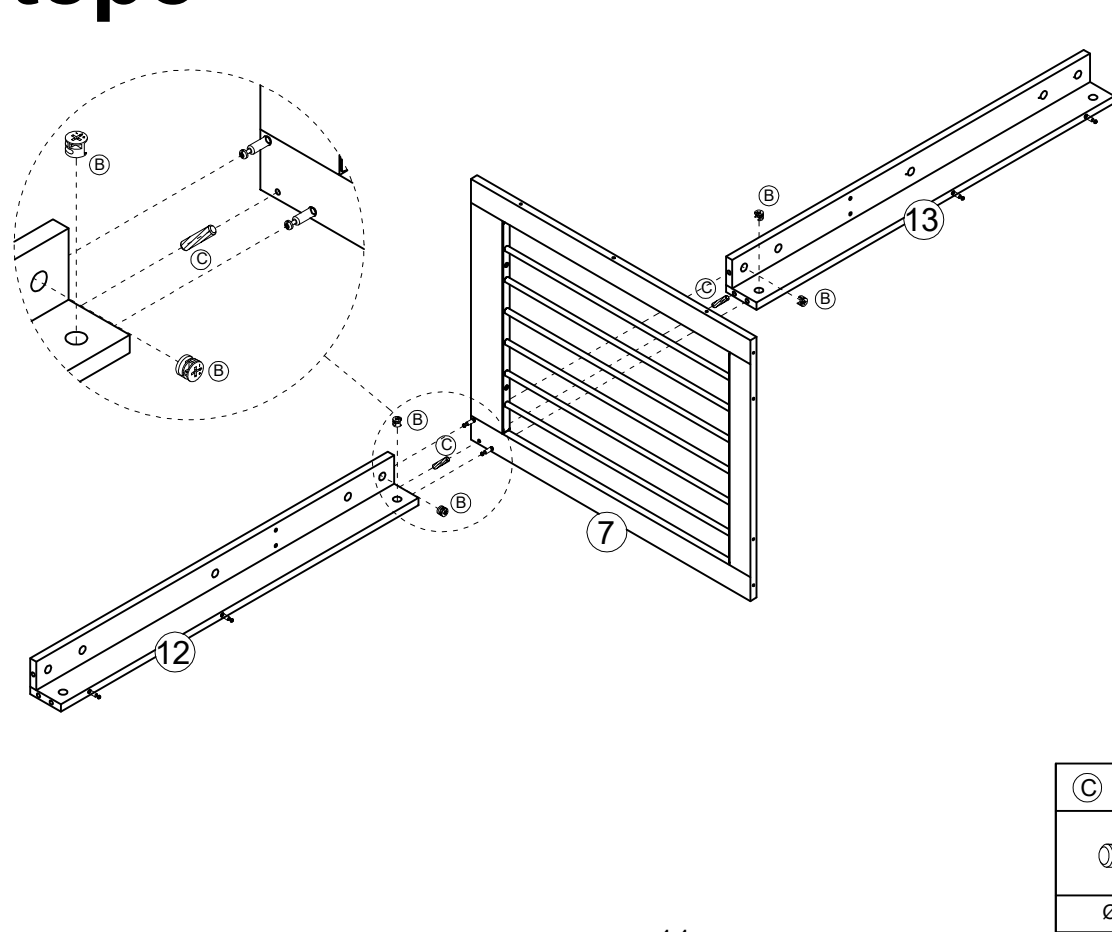


Option 1


OR

Option 2

(C)	X2	(B)	X4
			
Ø6*30mm		Ø15*9.5mm	


Step9

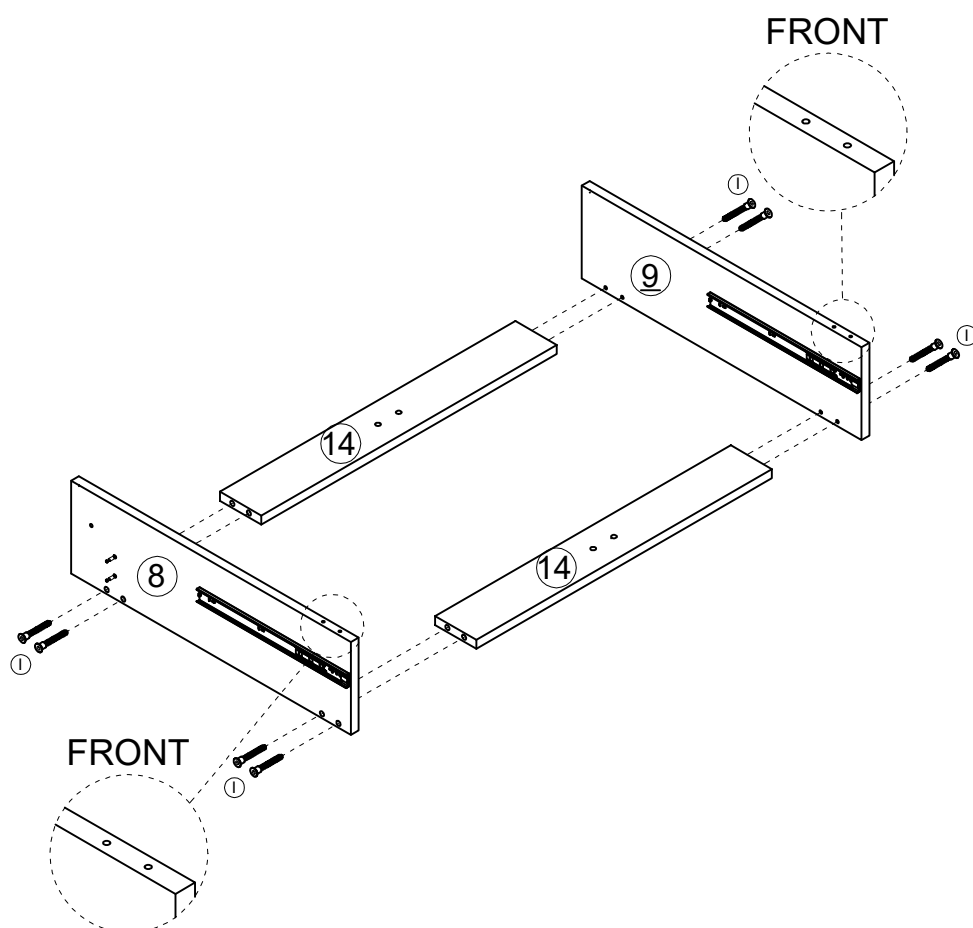


①	X8
	
ST5*40mm	



Step10

Note: Need to use a raised auxiliary pad

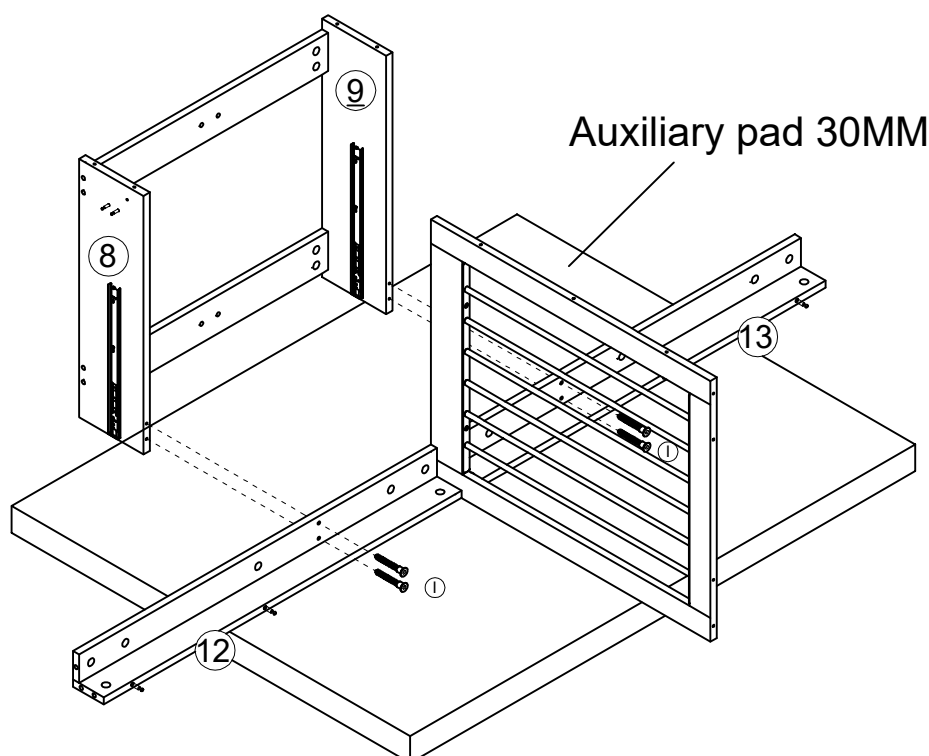


①	X4
	
ST5*40mm	

Step11

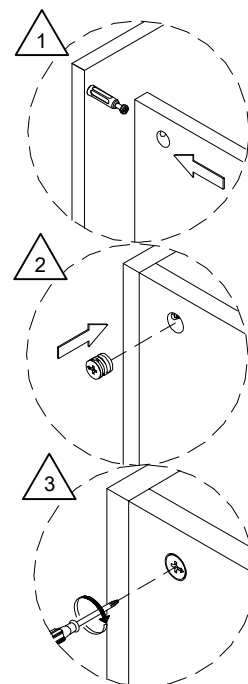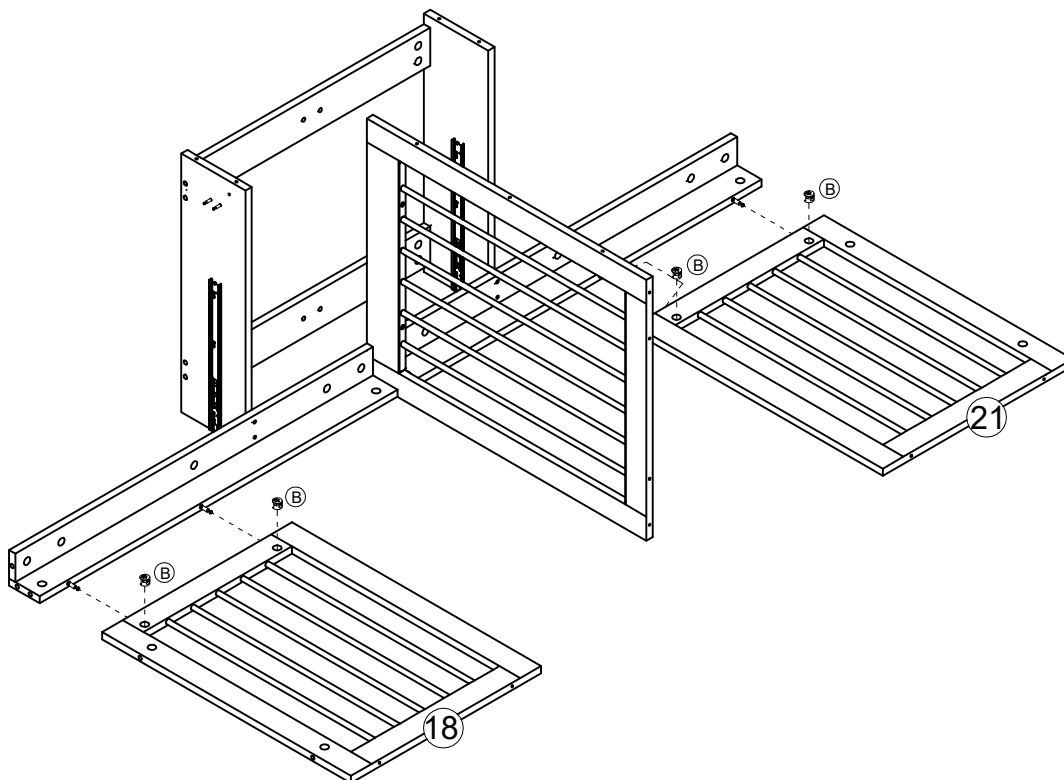


(B)	X4
Ø15*9.5mm	




Step12

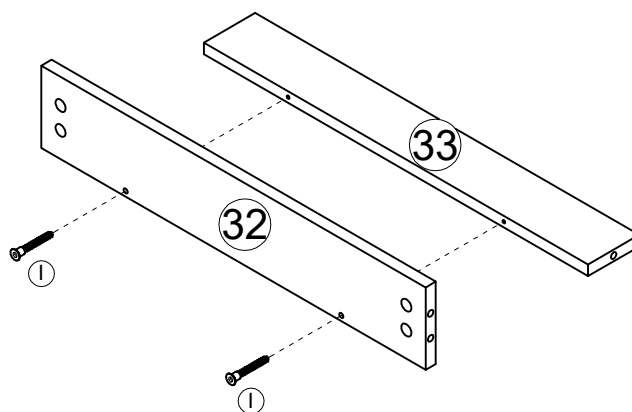


(1)	X2
ST5*40mm	

Step13

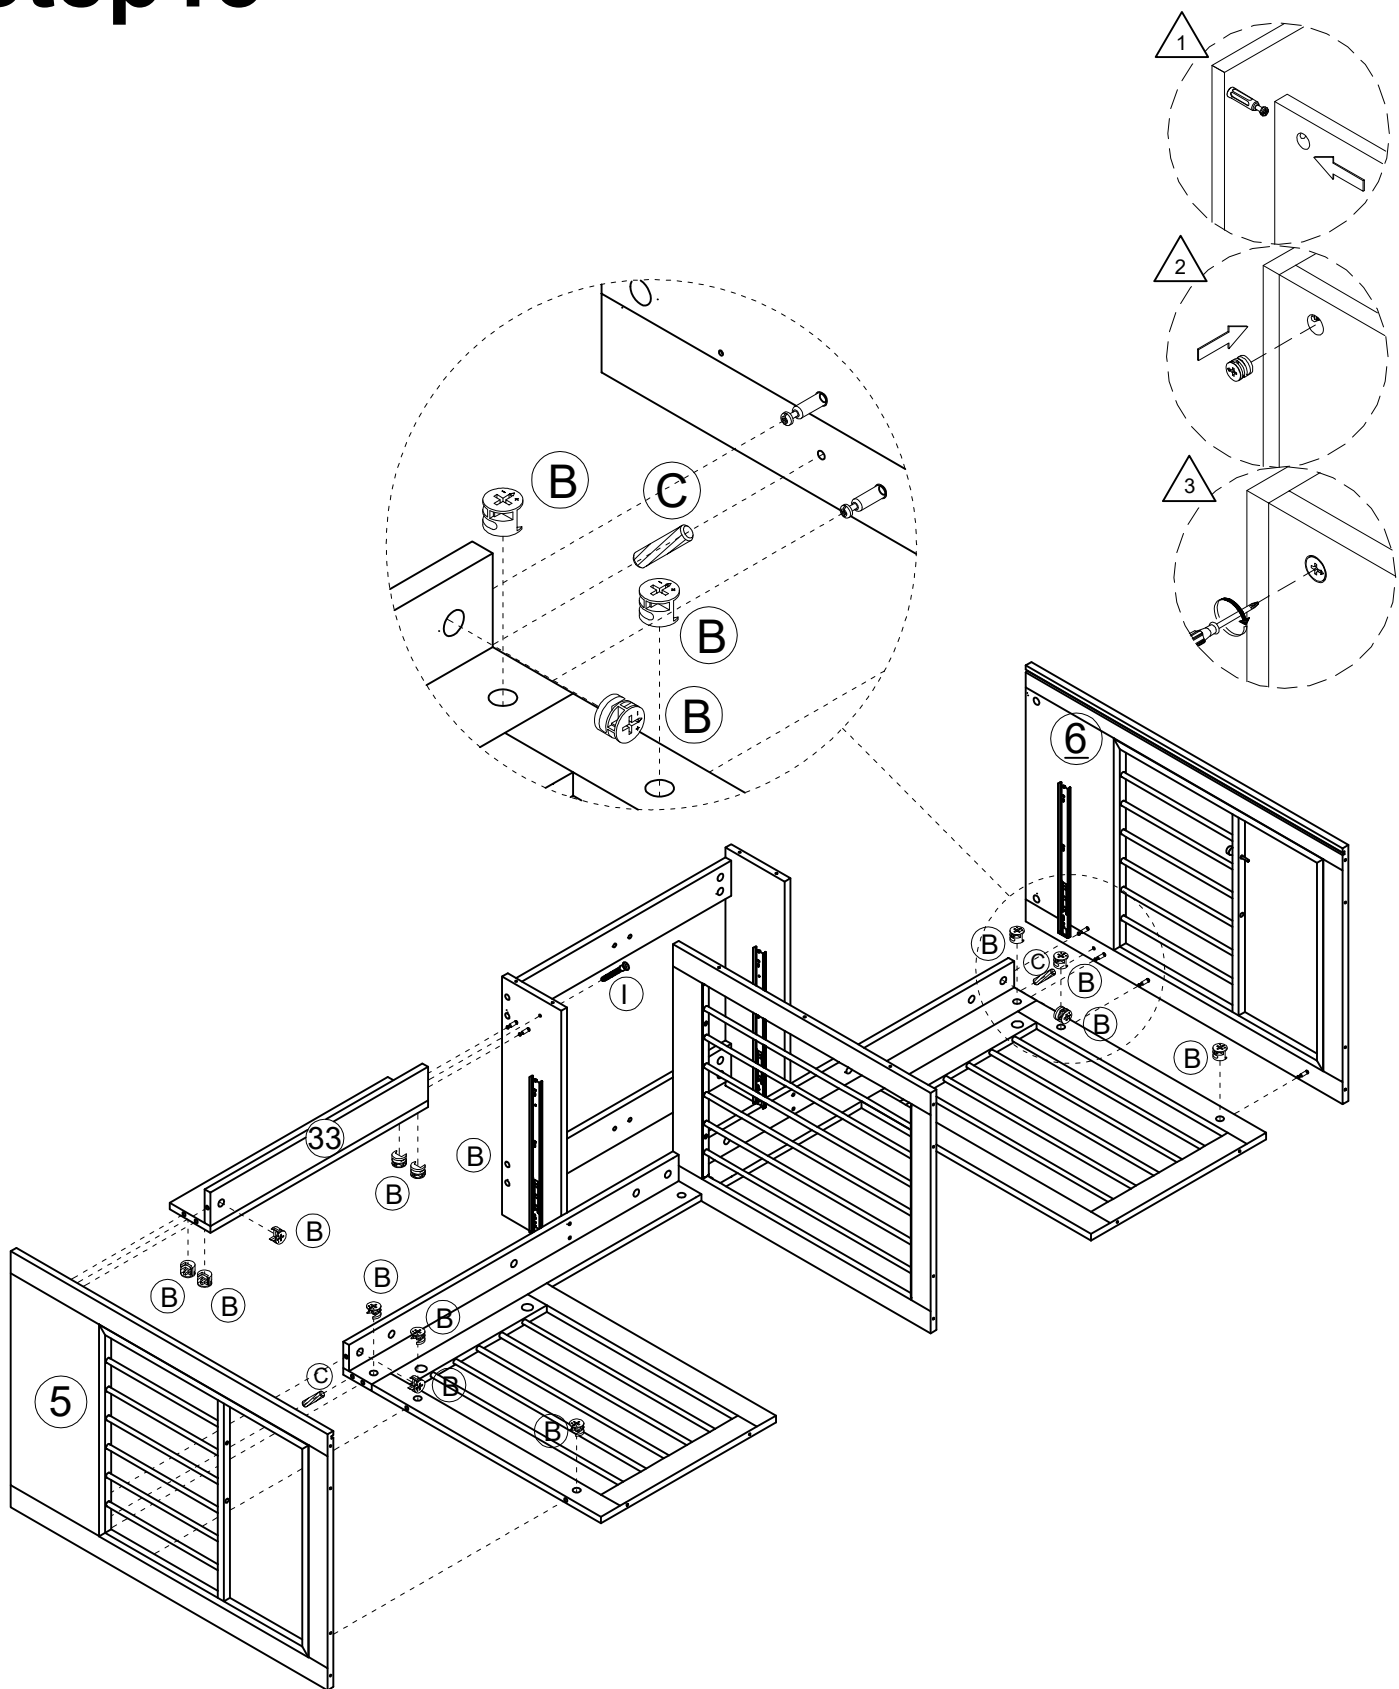


①	X1	②	X2	③	X13
					
ST5*40mm		Ø6*30mm		Ø15*9.5mm	


Step14

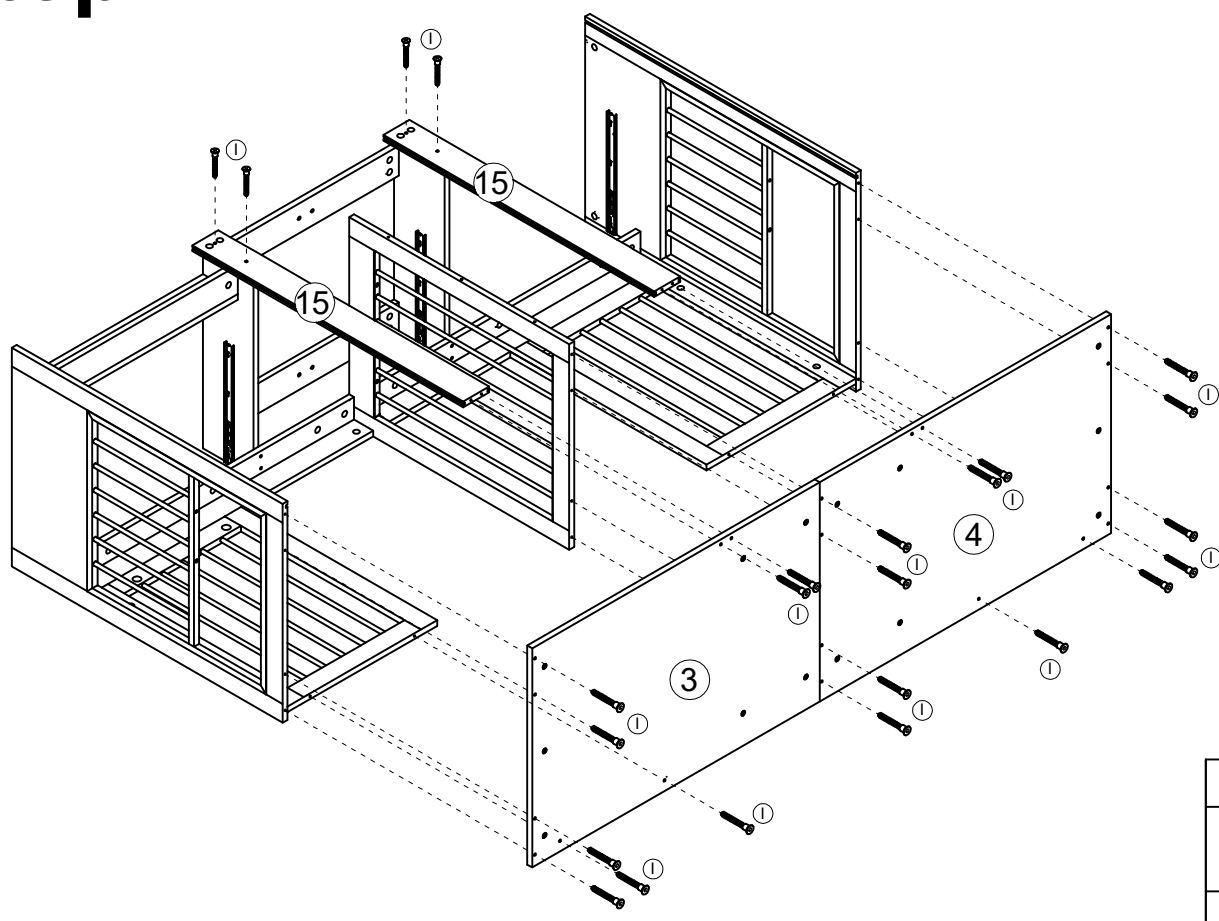


Step15

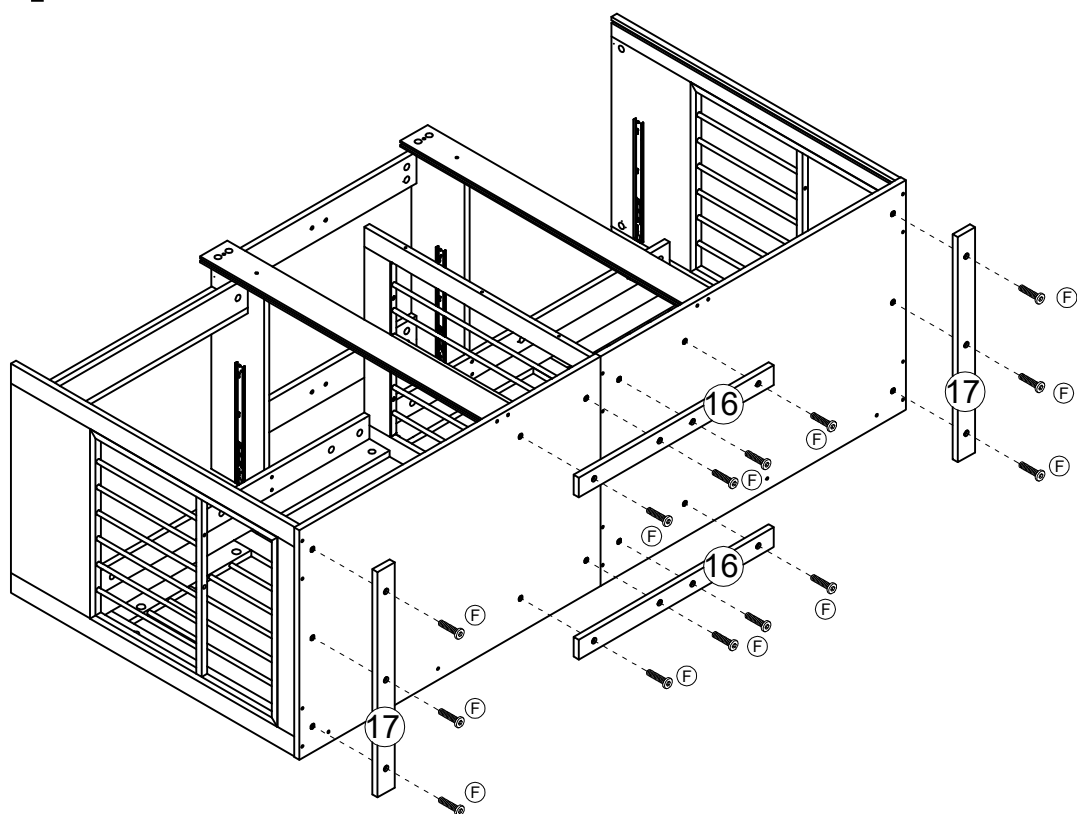


Step16

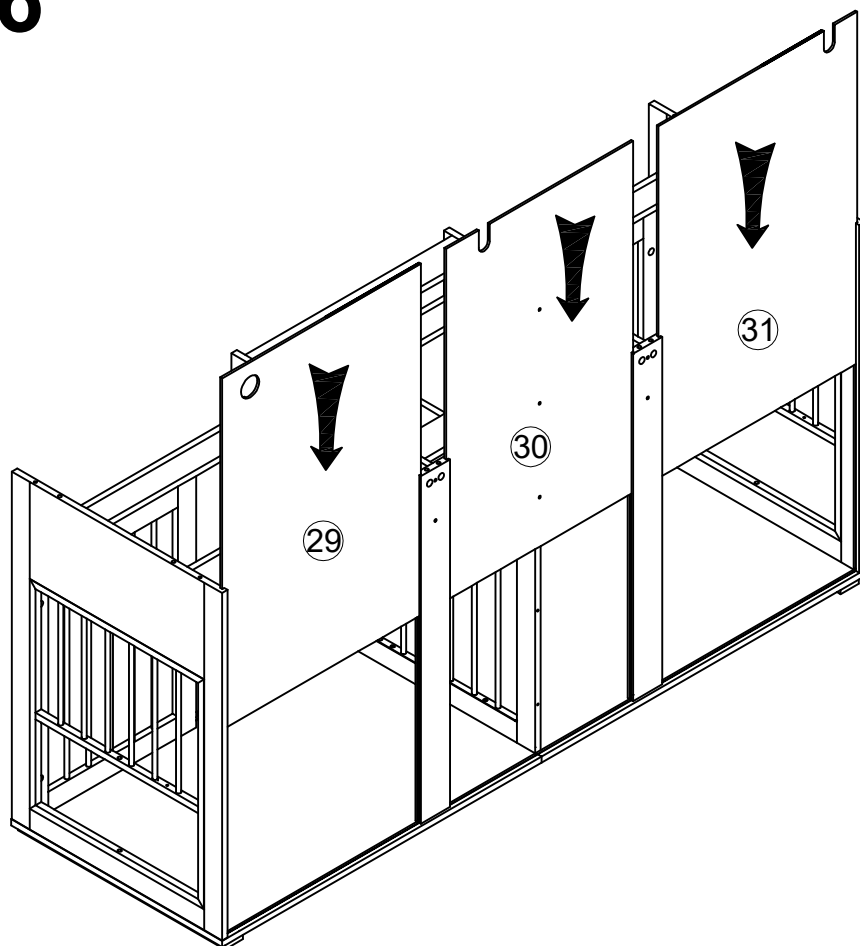




Step17

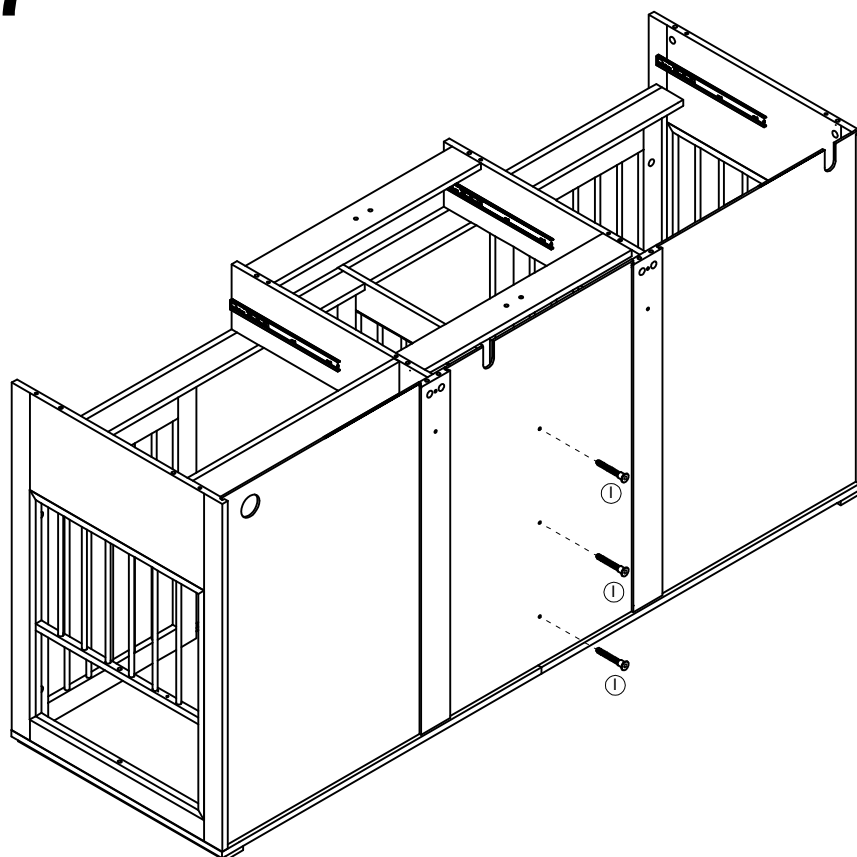



①	X3
	
ST5*40mm	

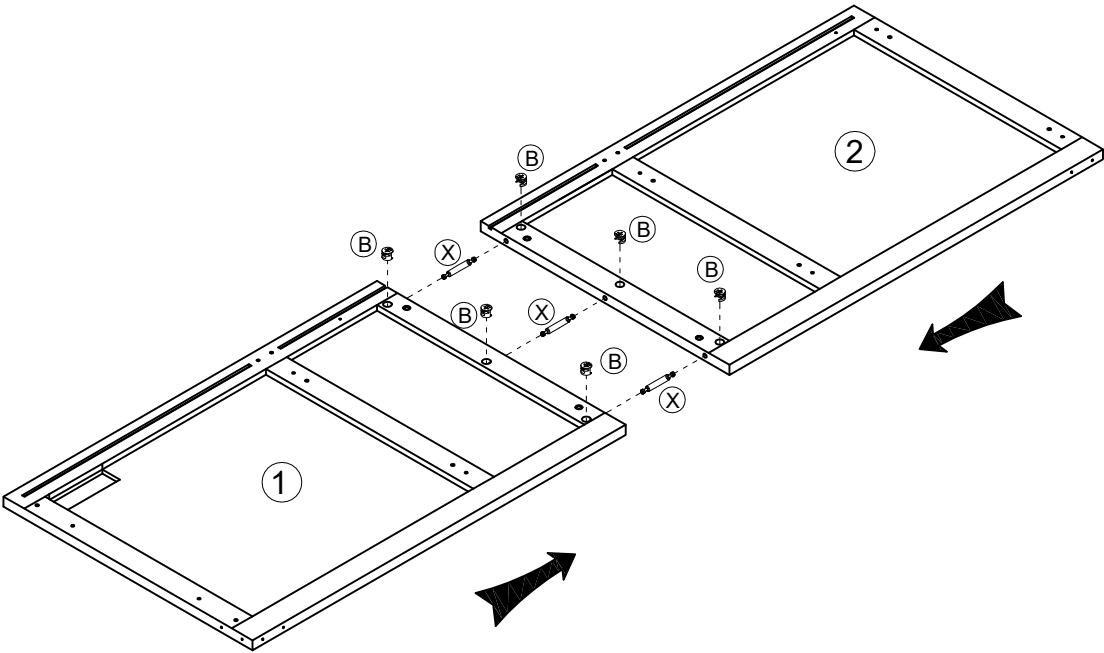


Step18





(B)	X6	(X)	X3
			
Ø15*9.5mm		Ø6*70mm	

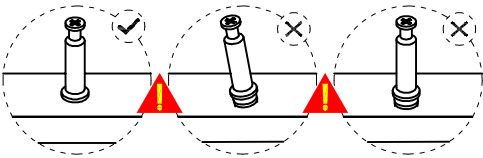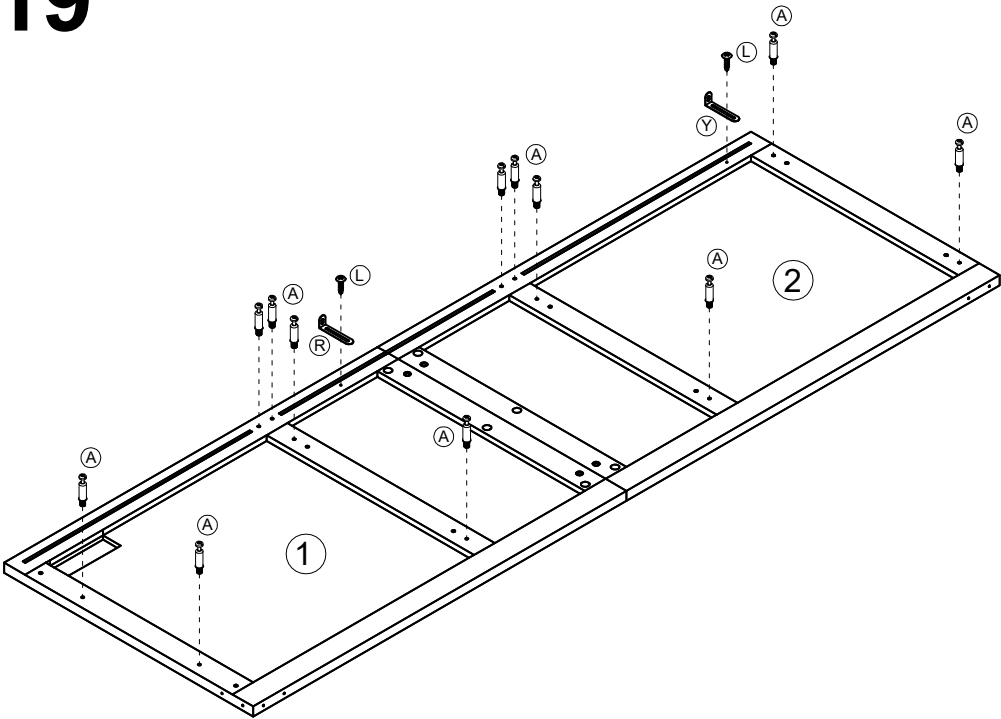Step19




(R)	X2	(L)	X2	(A)	X12
					
		ST4*12mm		Ø6*35mm	


Step20

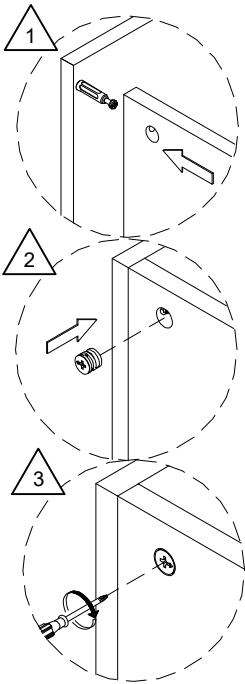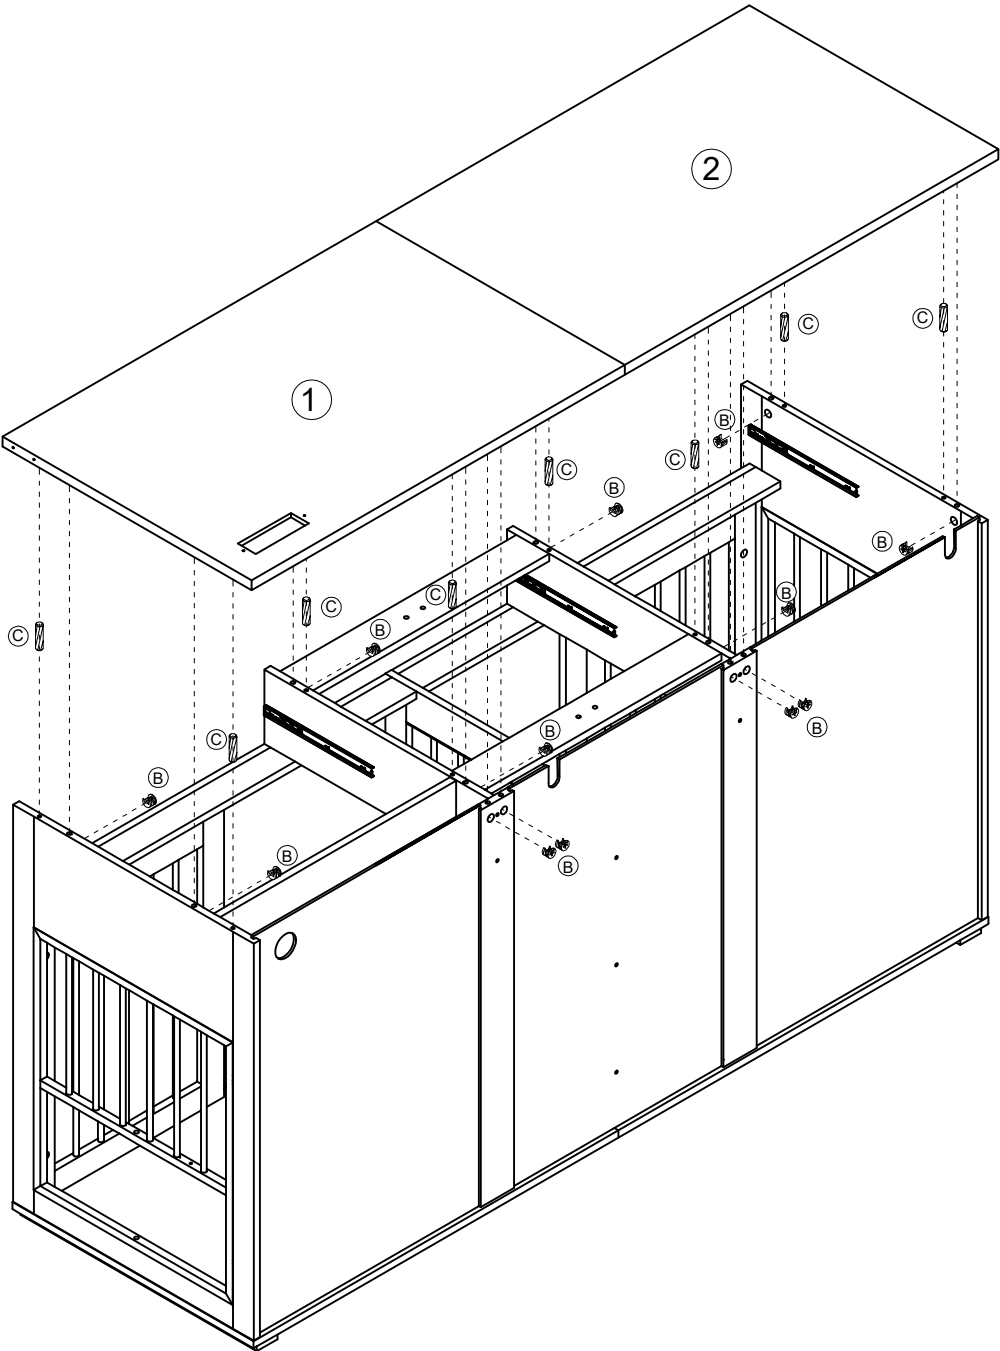


(C)	X8	(B)	X12
Ø6*30mm		Ø15*9.5mm	

Step21

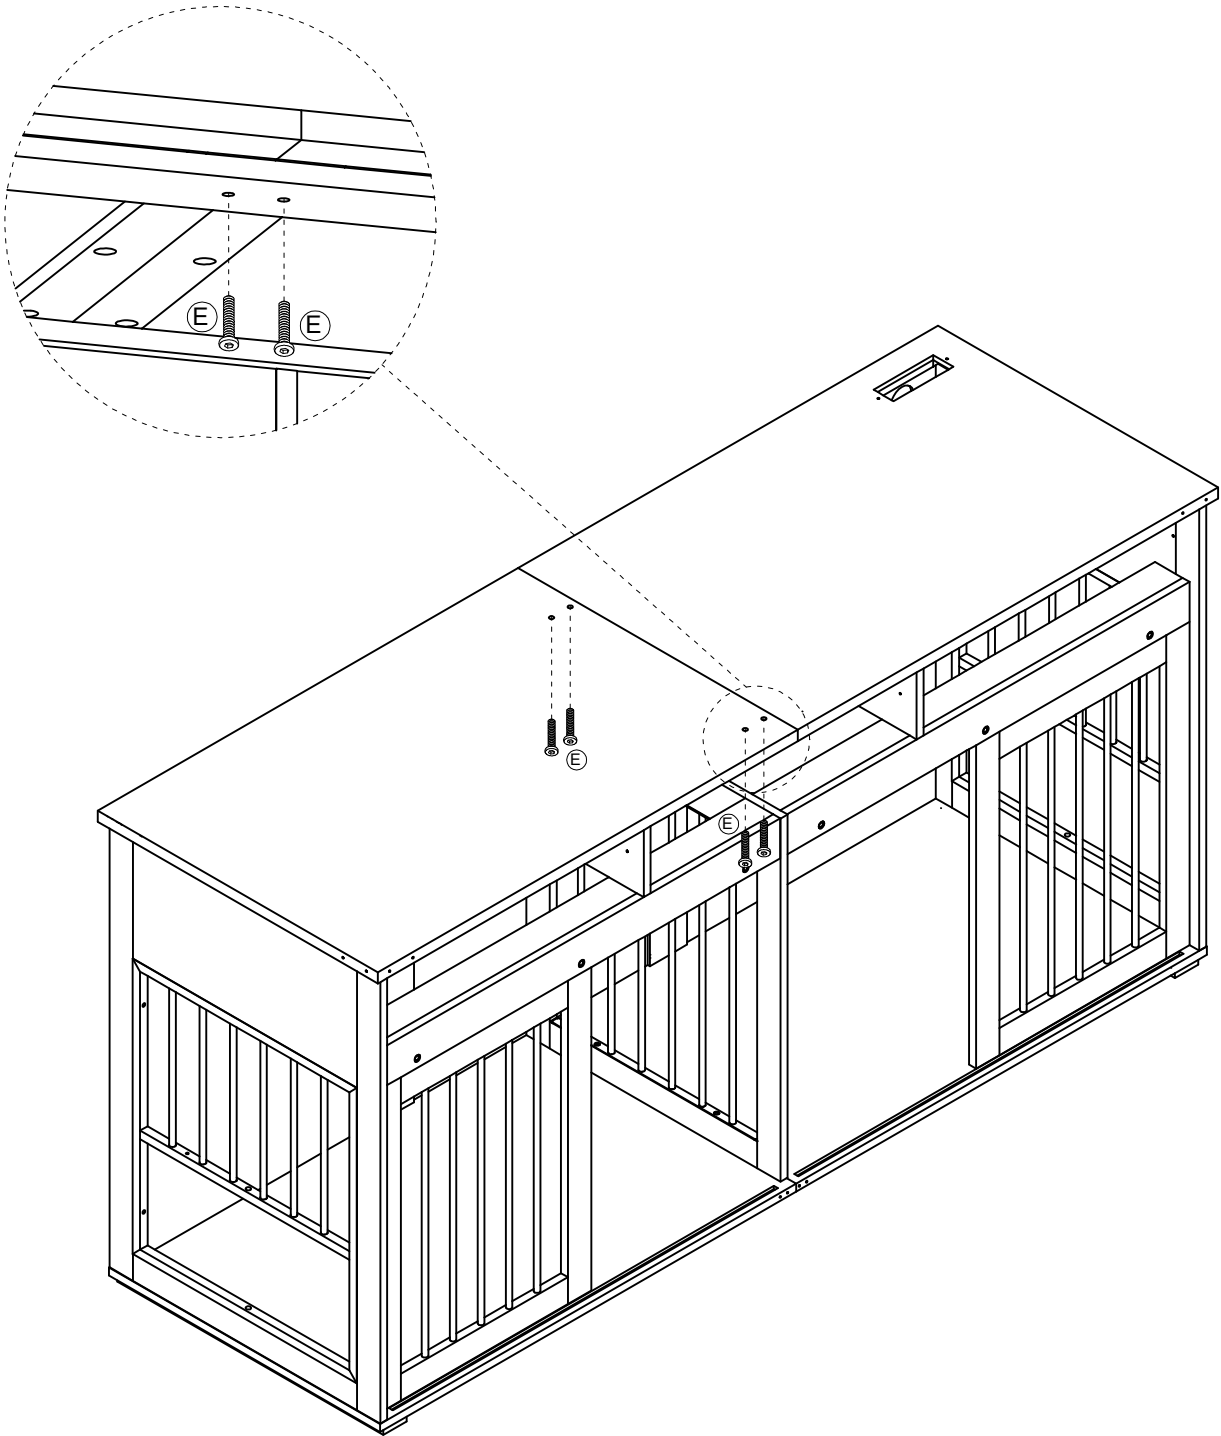


Ⓔ	X4
	
M6*25mm	

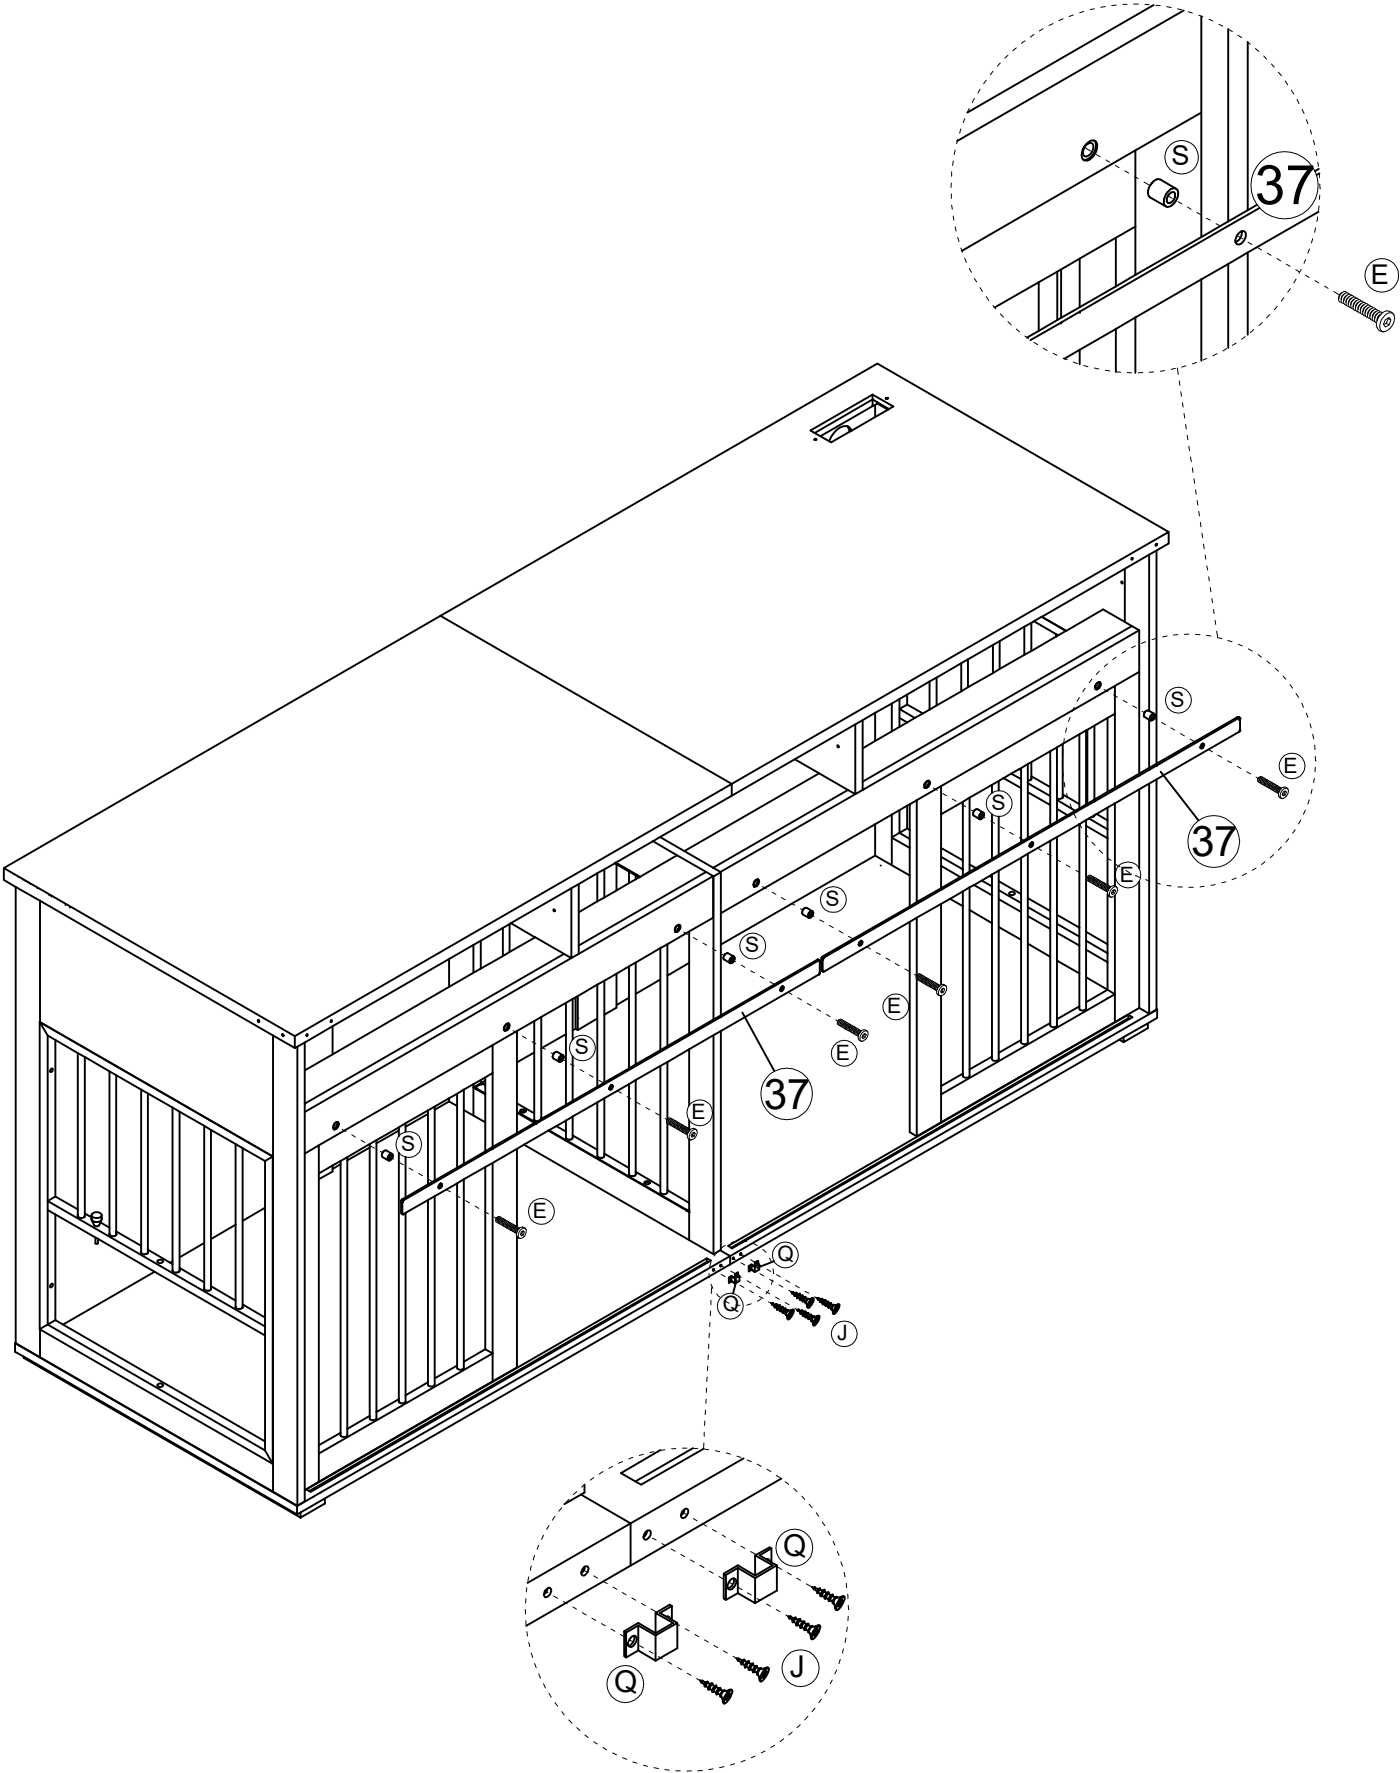


Step22




Q	X2	J	X4	S	X6	E	X6
		ST3.5*12mm				M6*25mm	

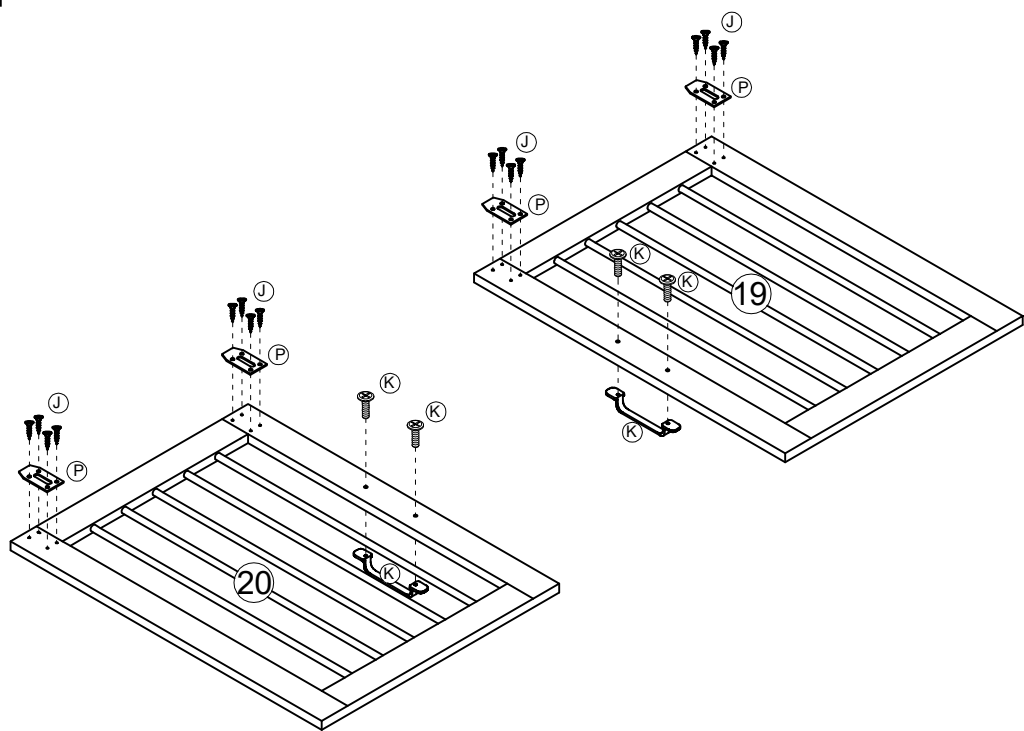

Step23




(P)	X4	(K)	X2	(J)	X16
					
		M4*18mm		ST3.5*12mm	

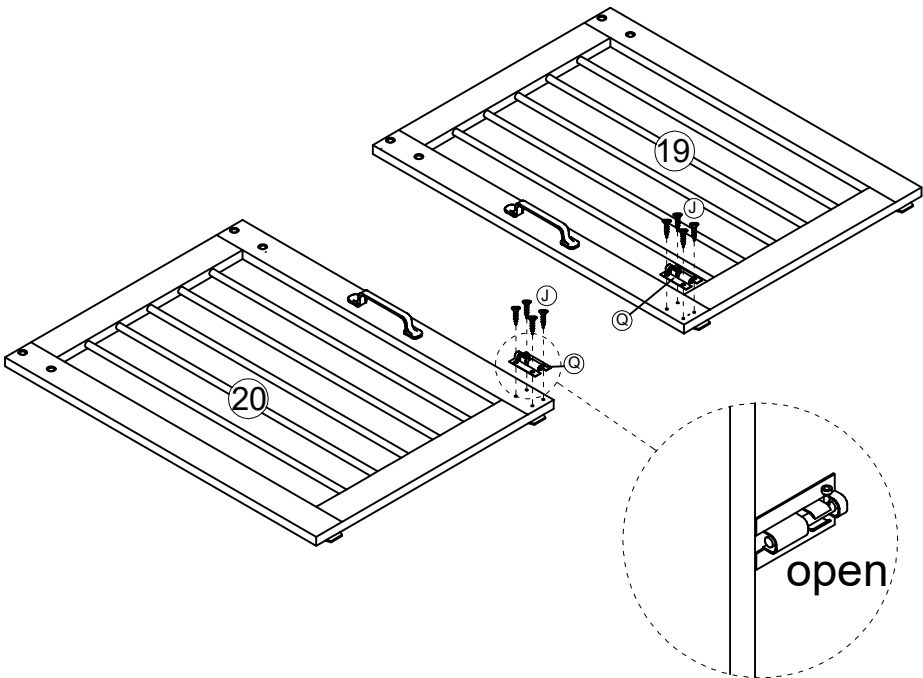

Step24





(Q)	X2	(J)	X8
			
		ST3.5*12mm	

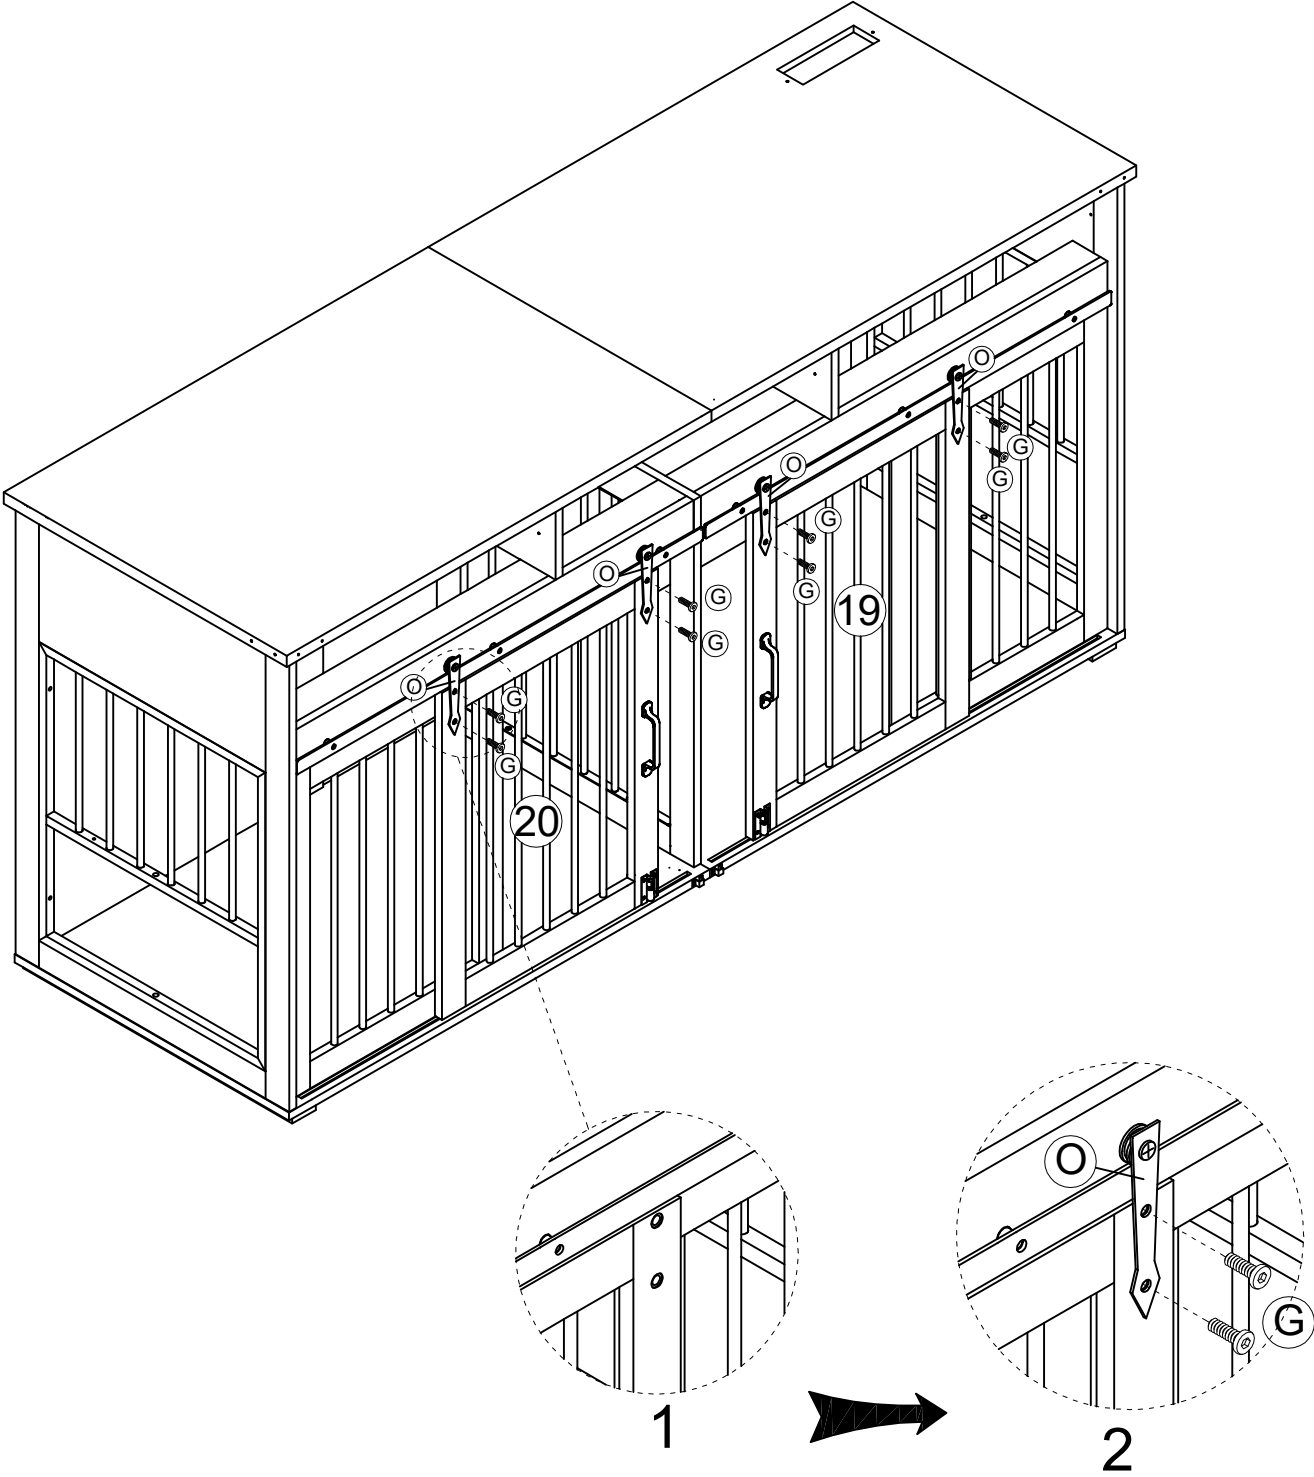Step25





○	X4	G	X8
			
		M6*10mm	

Step26

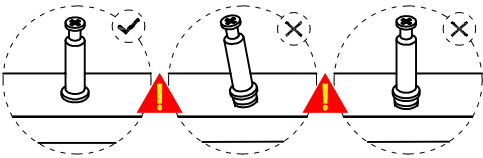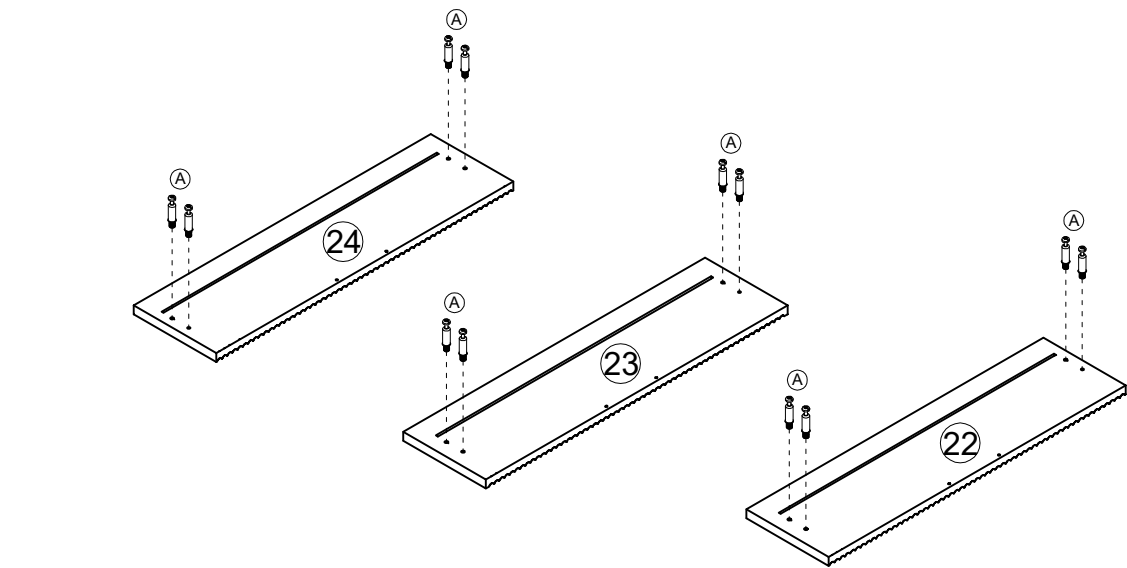


(A)	X12
Ø6*35mm	

Step27

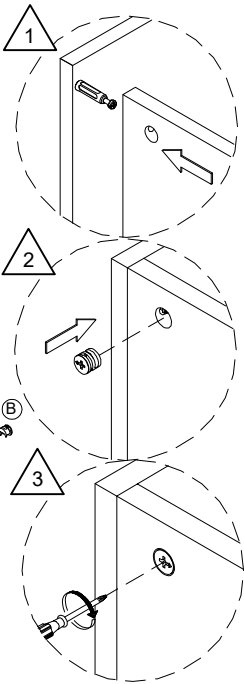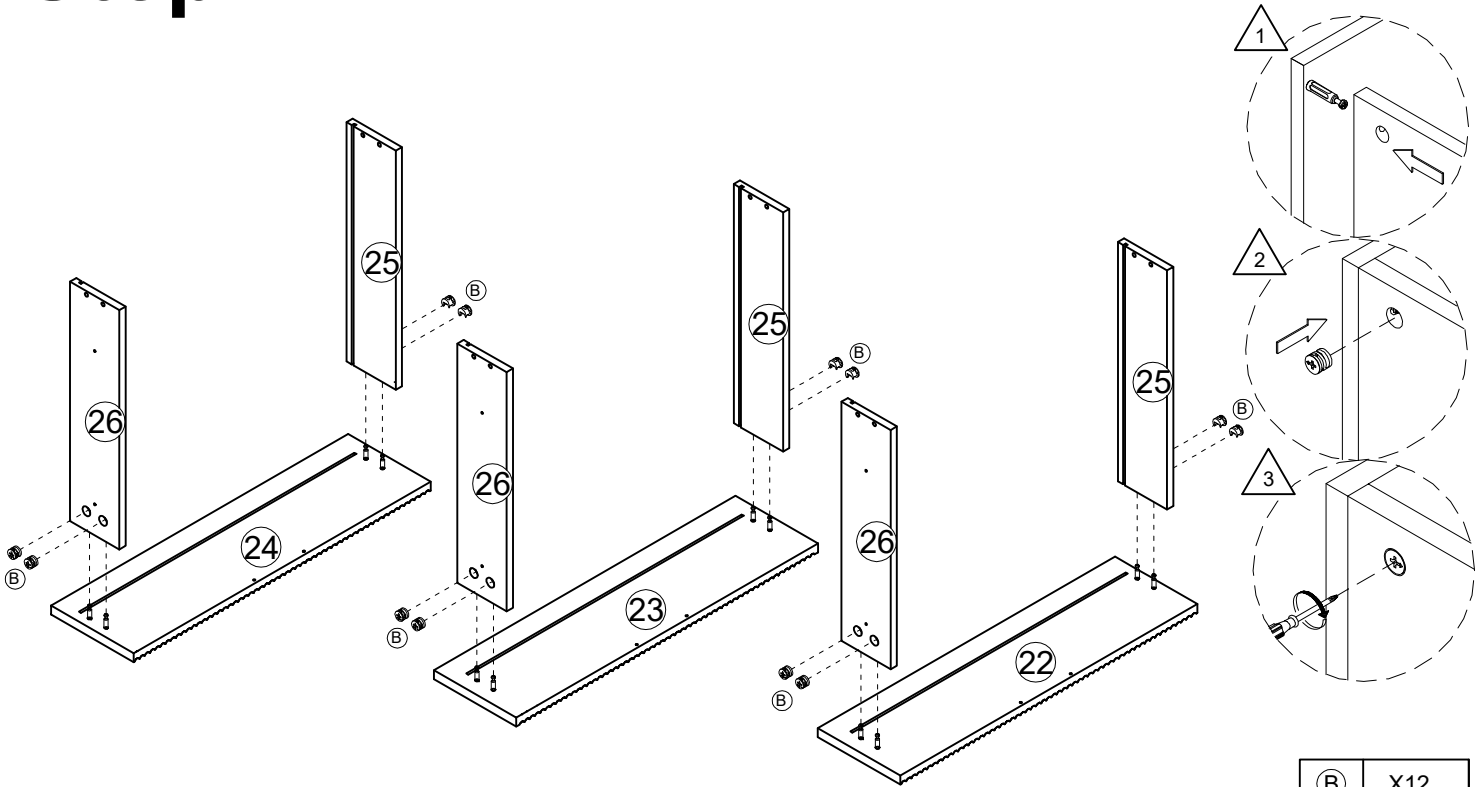



(B)	X12
Ø15*9.5mm	

Step28




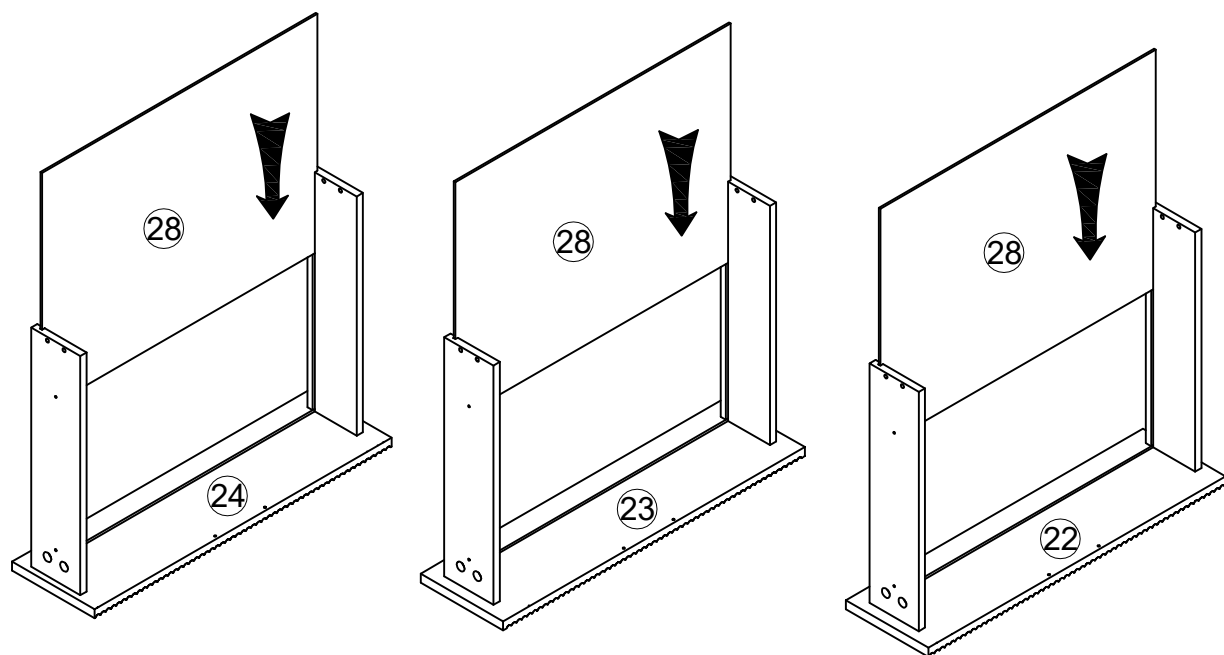


Step29

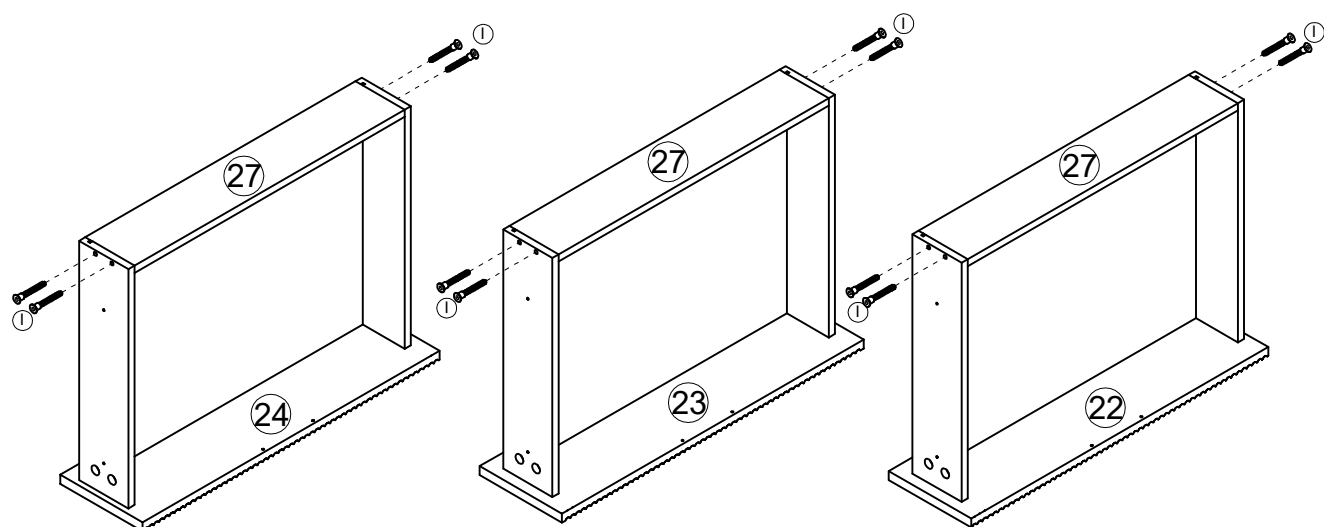


①	X12
	
ST5*40mm	

Step30

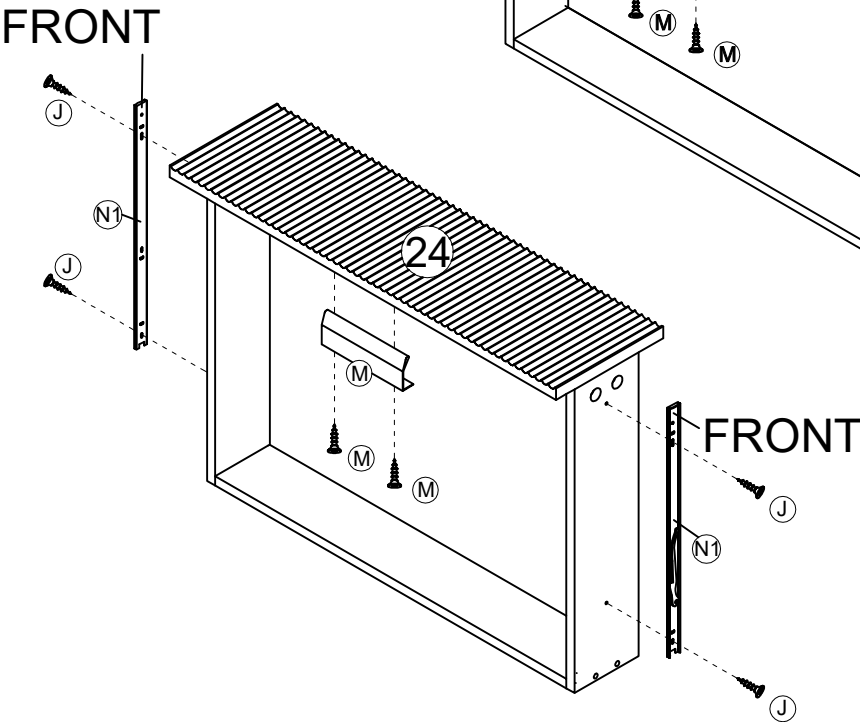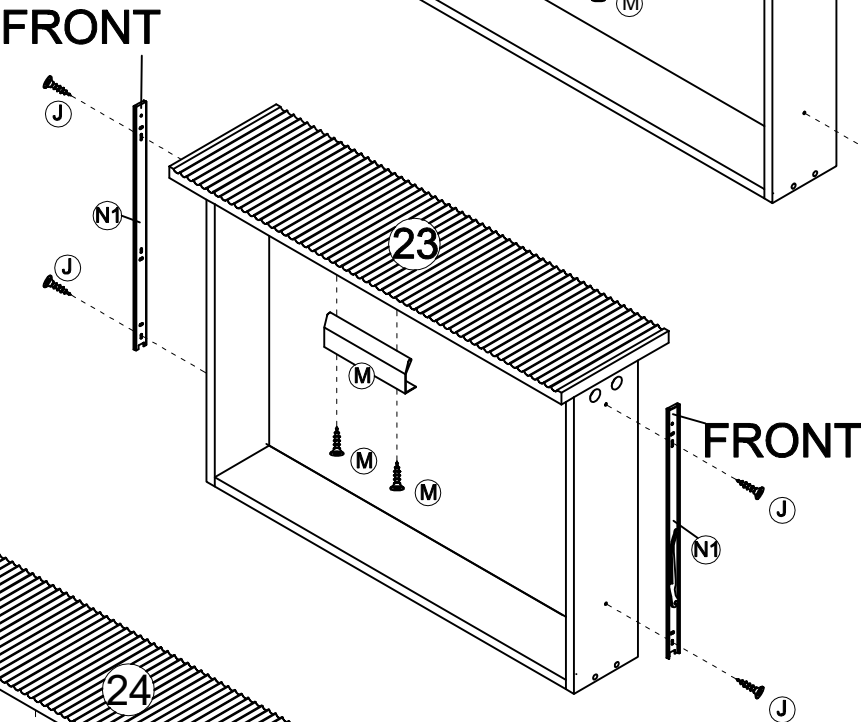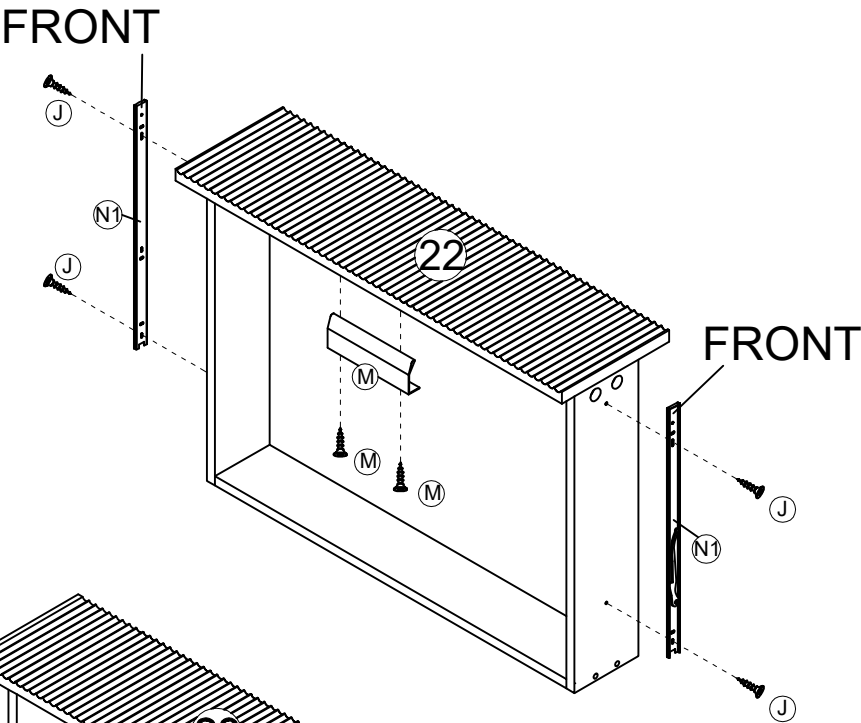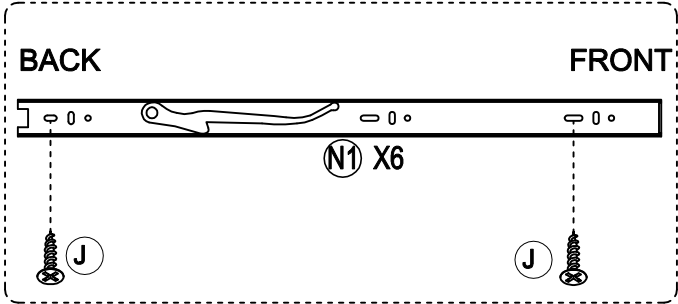


(N)	X6	(M)	X3	(J)	X12
340mm		ST3.5*12mm		ST3.5*12mm	

Step31

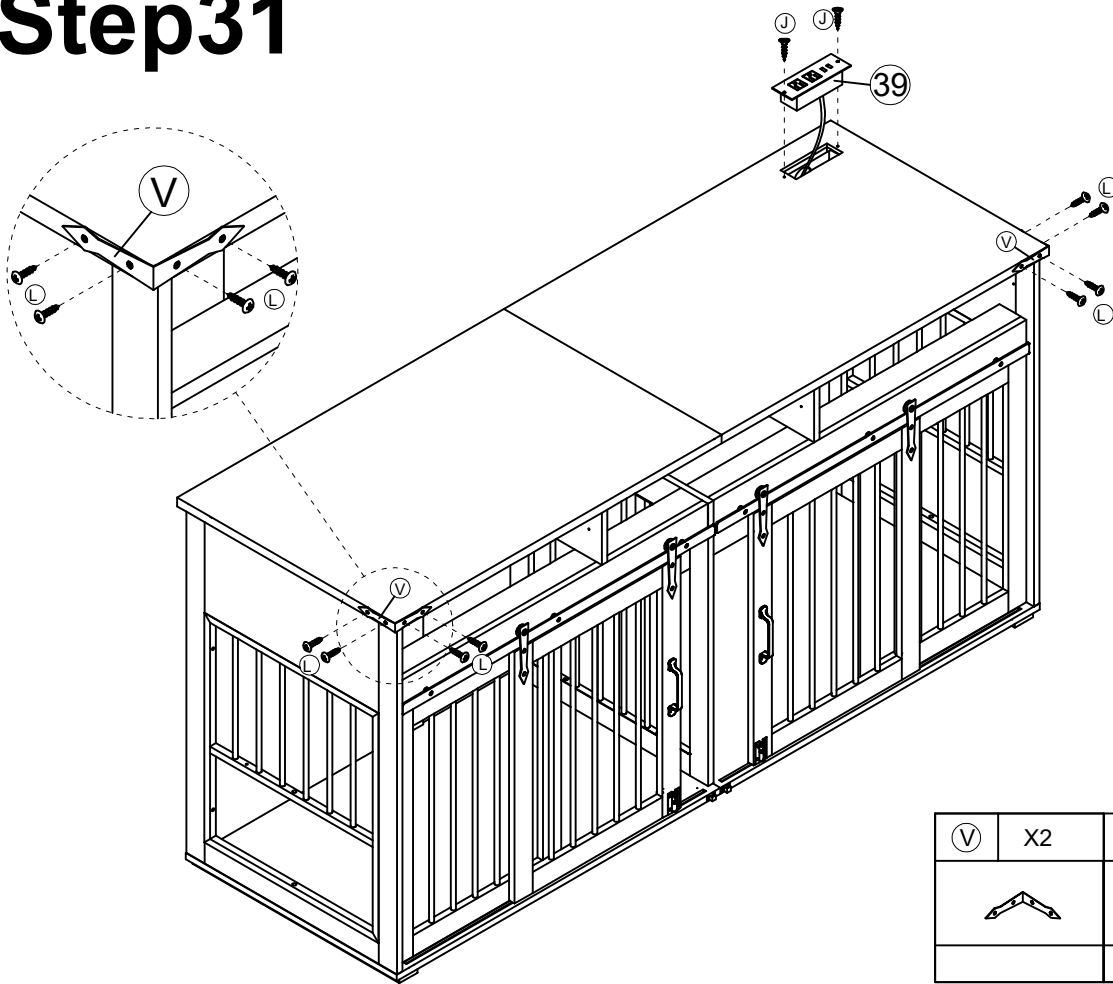



Step32

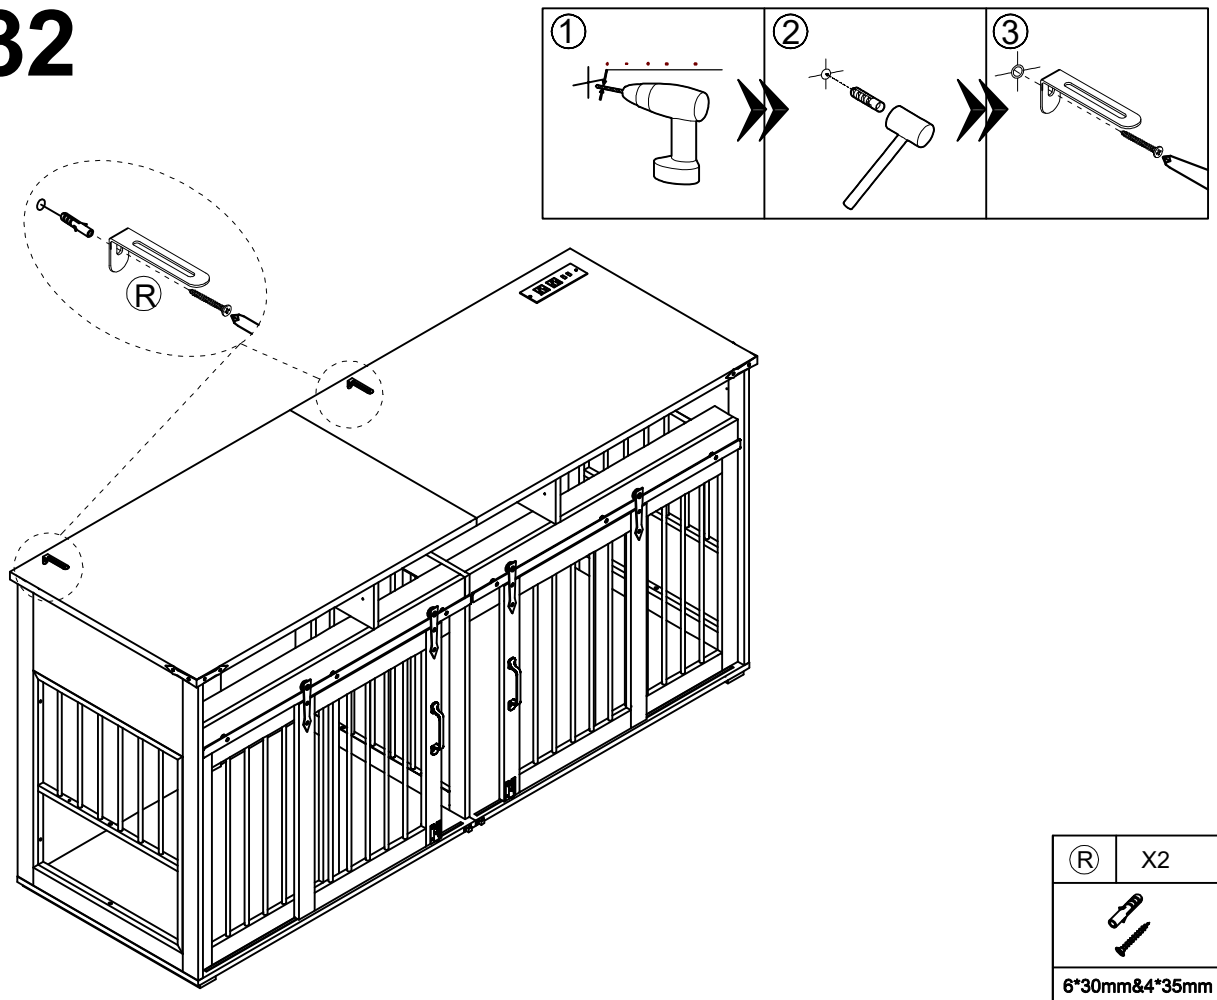



Step33



Align with the slide rail position and insert the drawer.

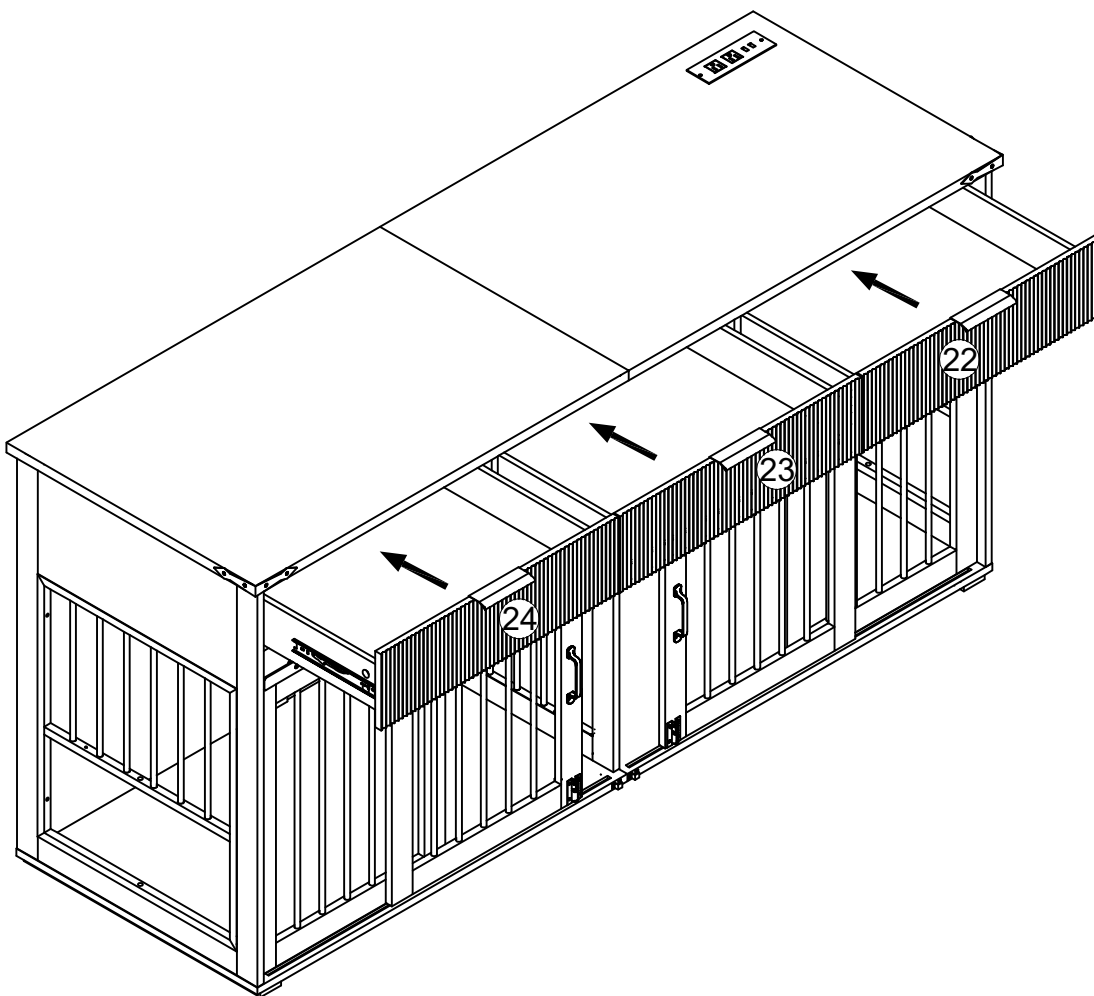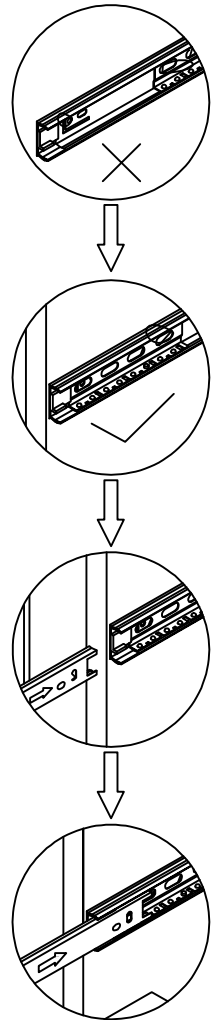Note: For optimal alignment, please adjust the drawer up and down to fit the tracks properly.

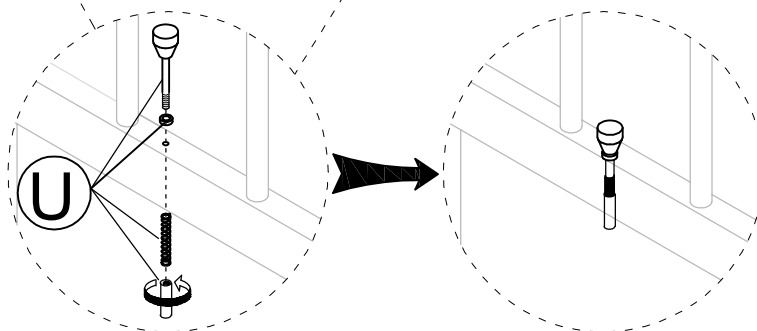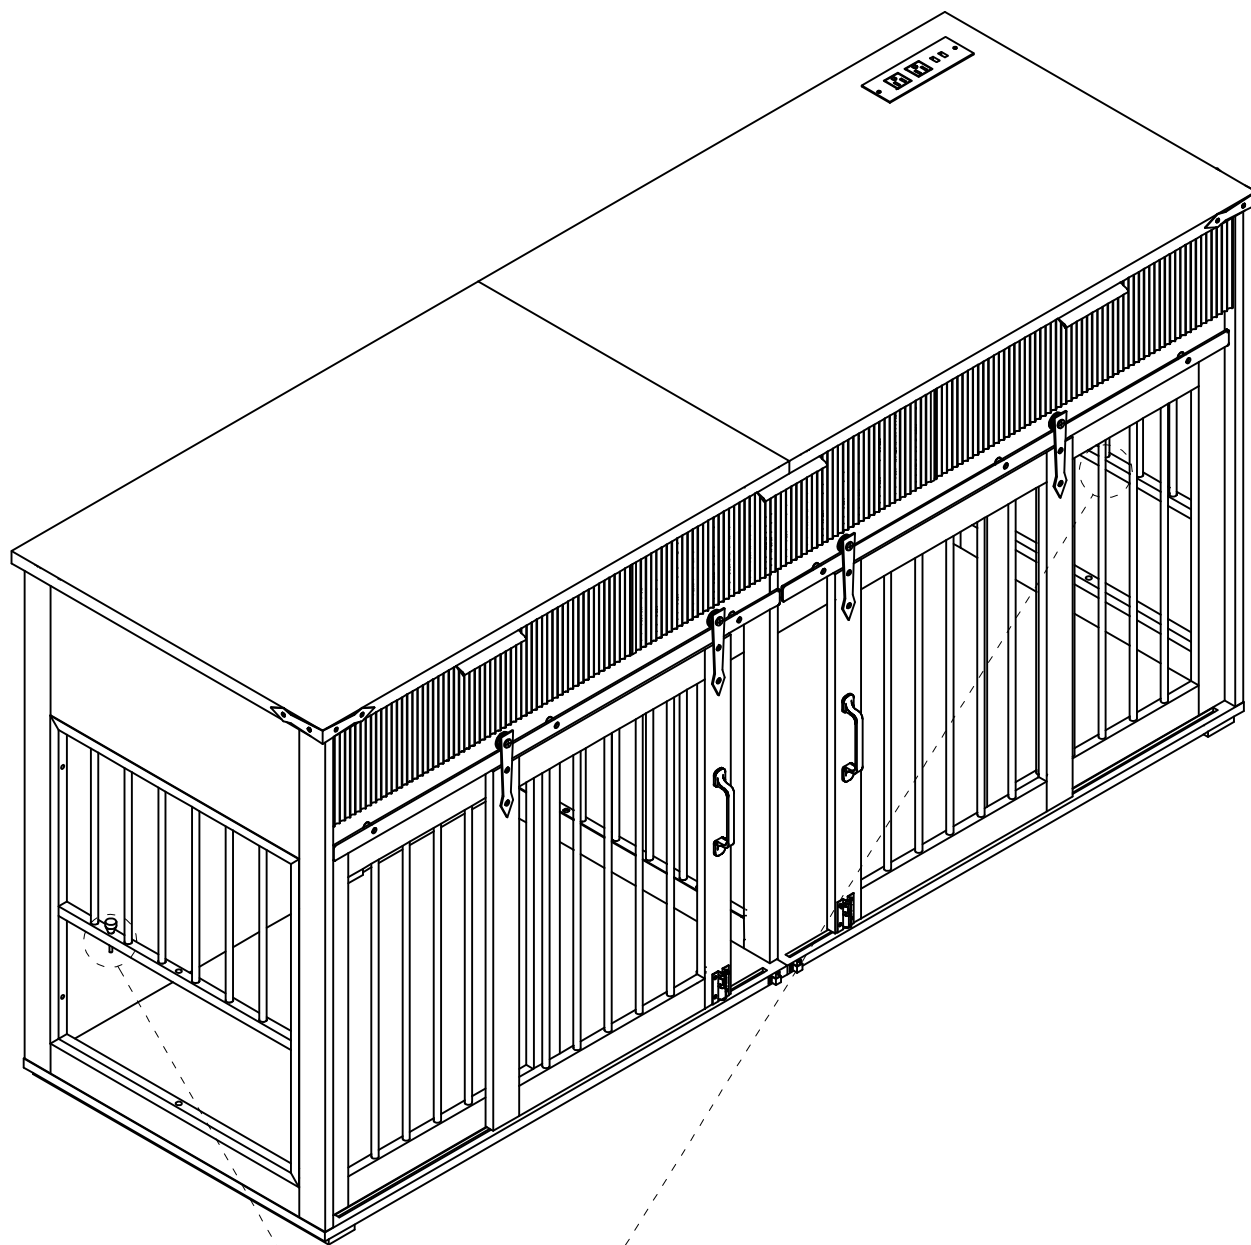


Step34





U	X2
	

Step35

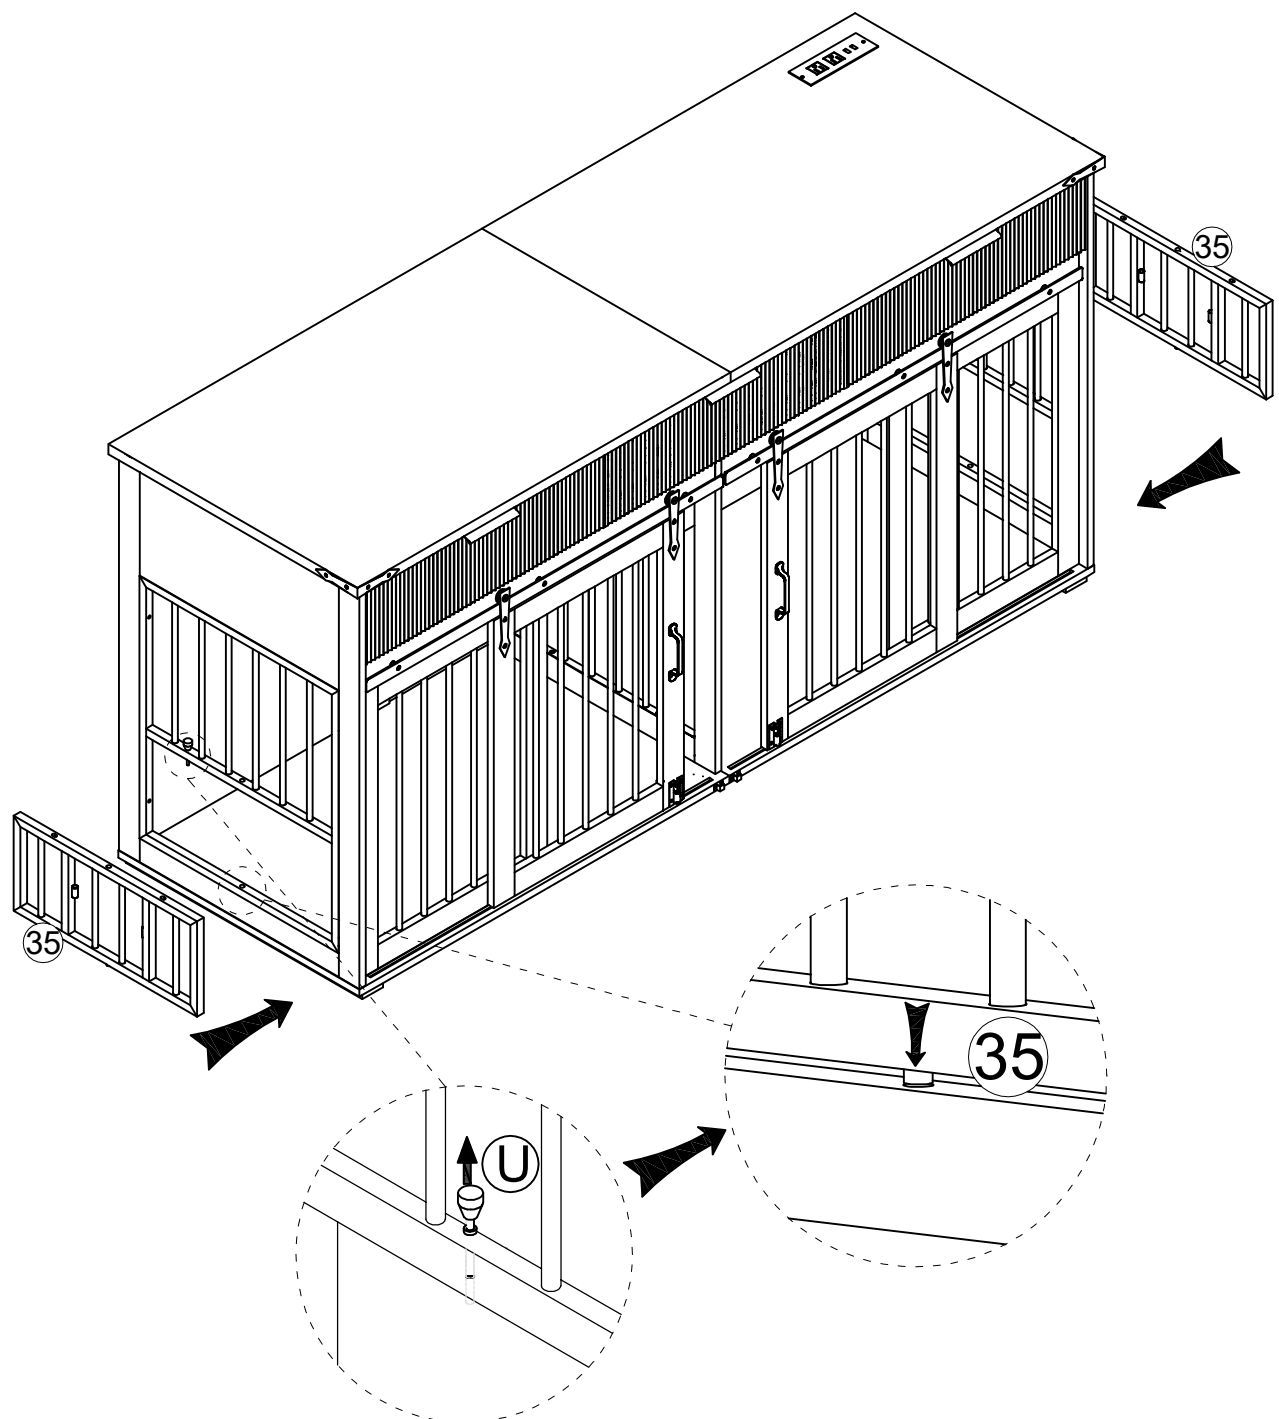


Step36

Note:Do not tighten the bolts & nuts, keep 90% of tightness.

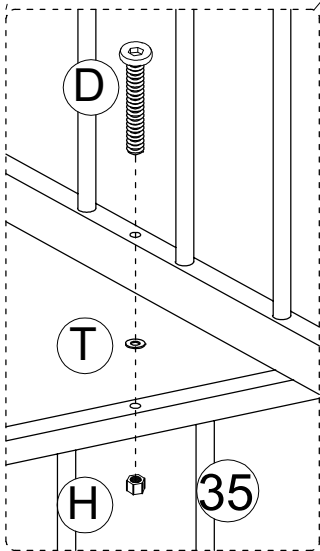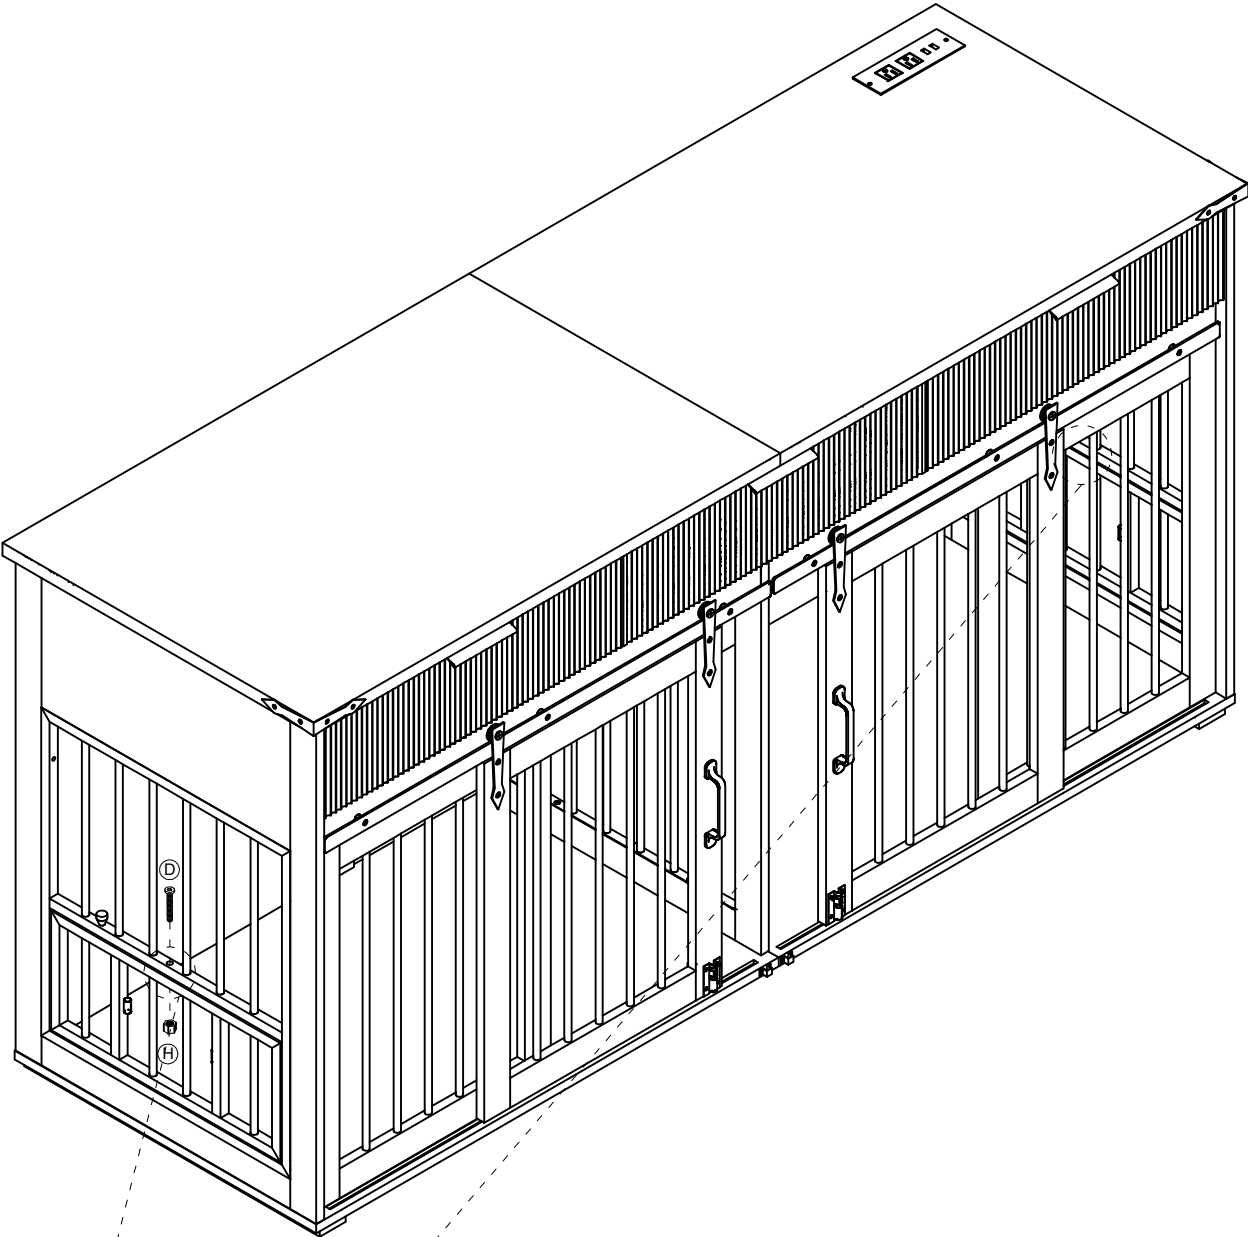


(T)	X2	(H)	X2	(D)	X2
Ø15-Ø6.5*3mm		M6		M6*45mm	


Step37

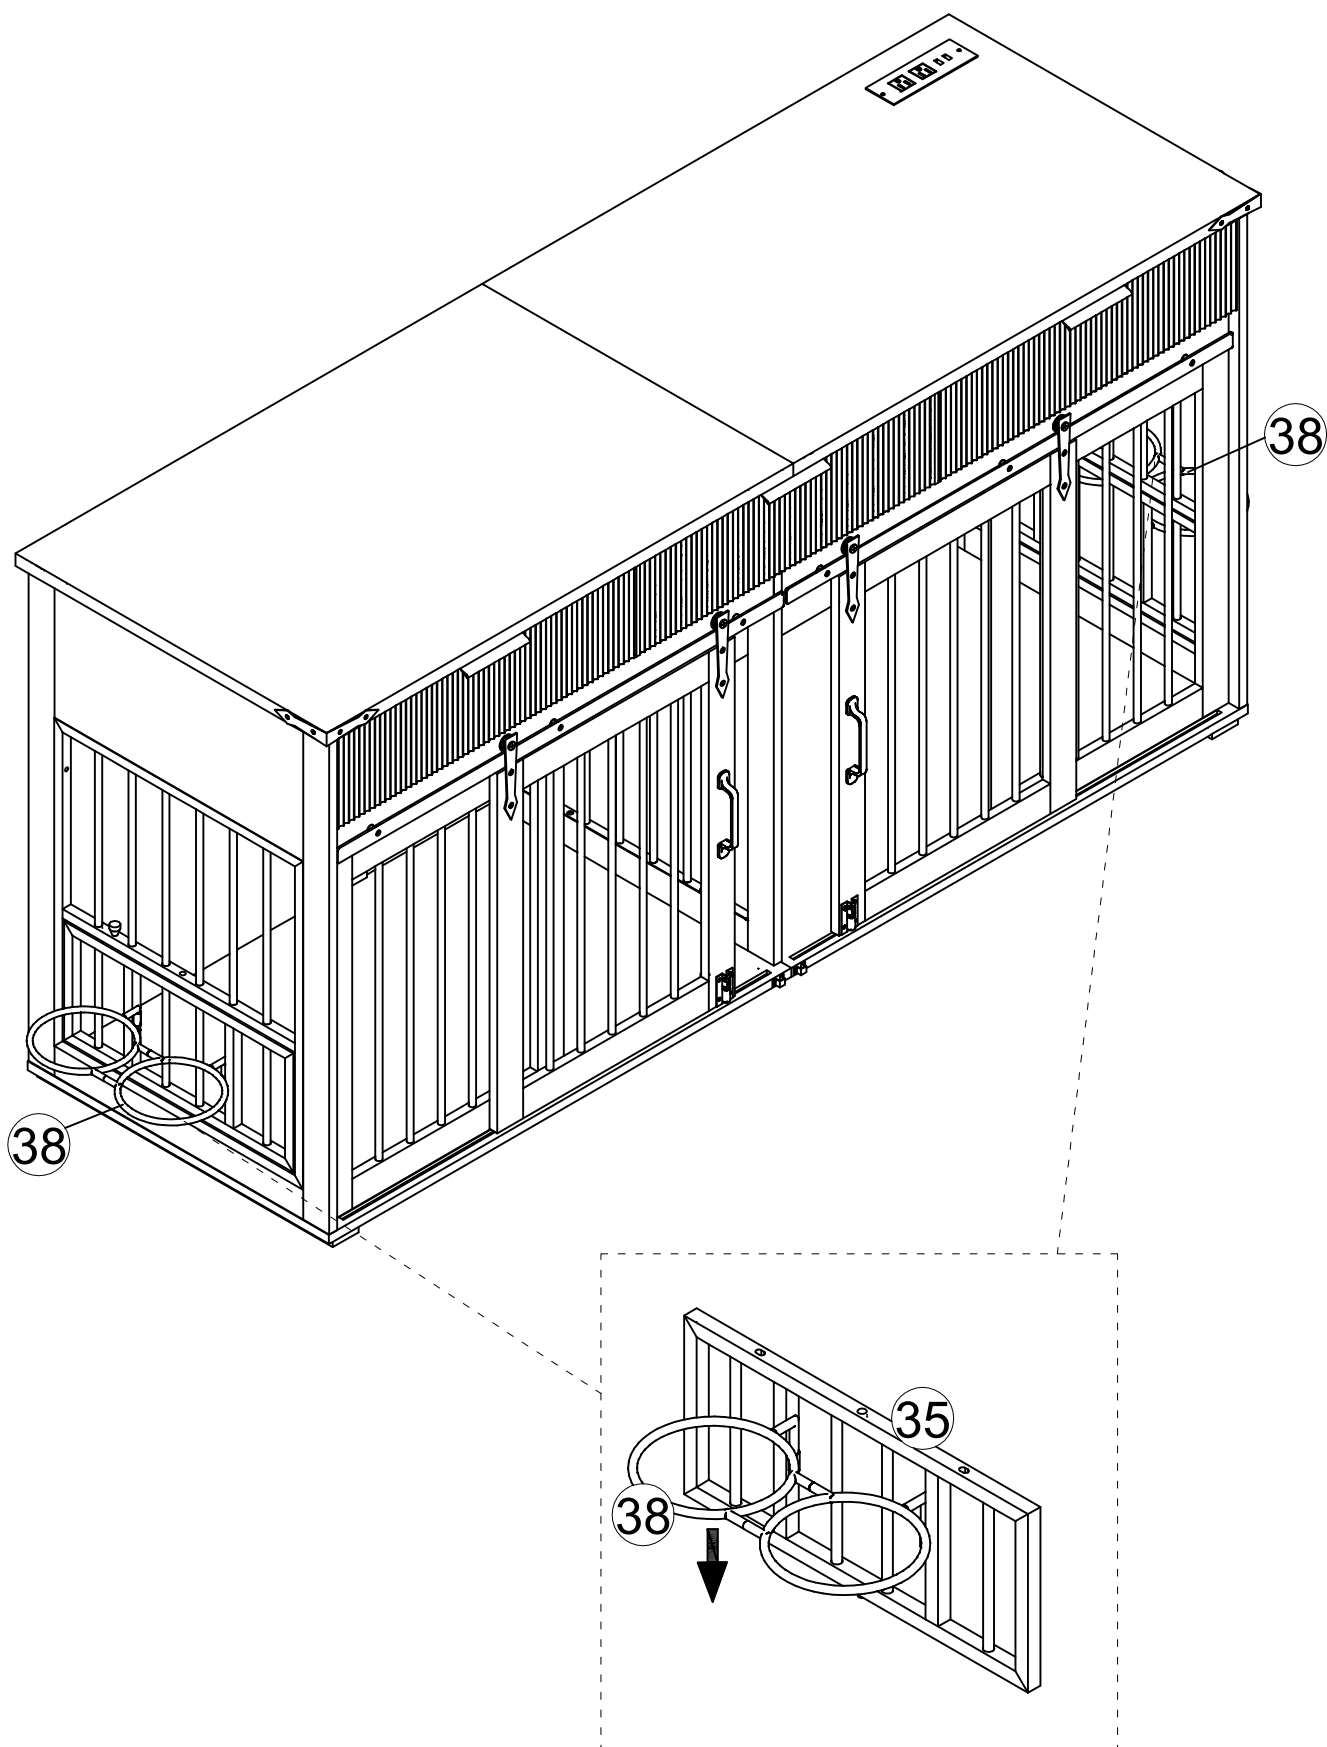


Step38

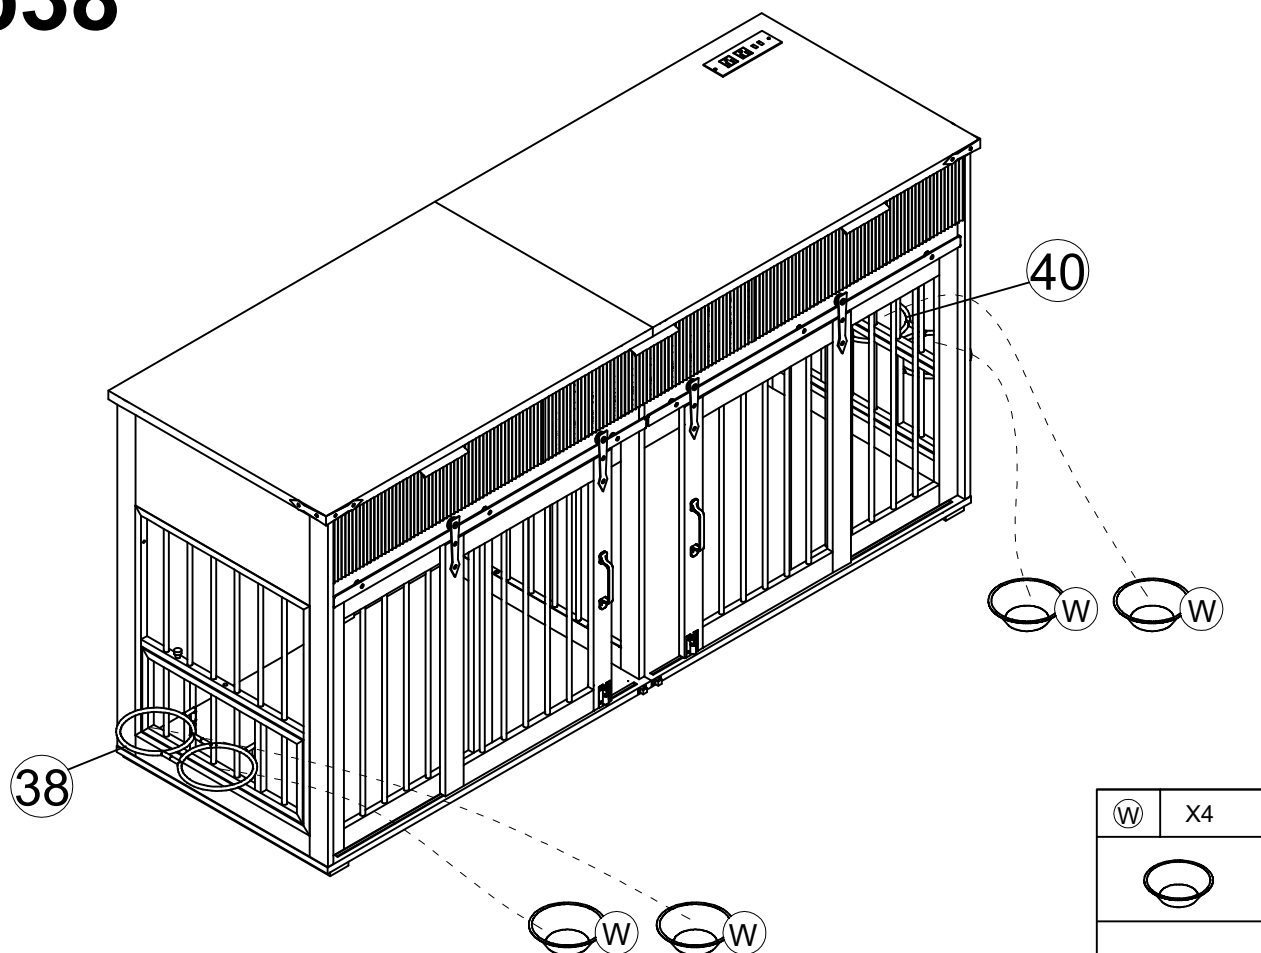



Step39

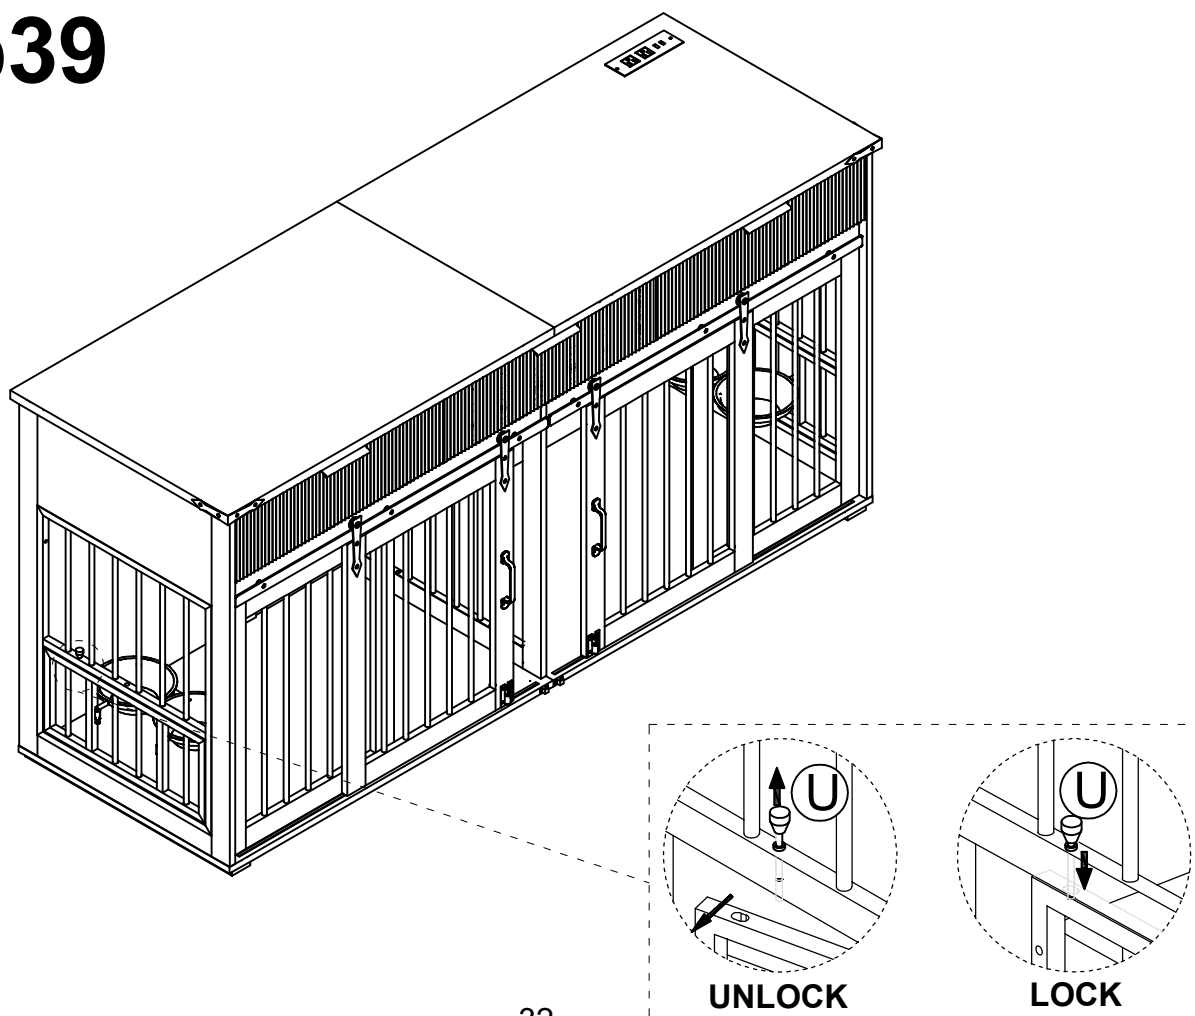

Step40

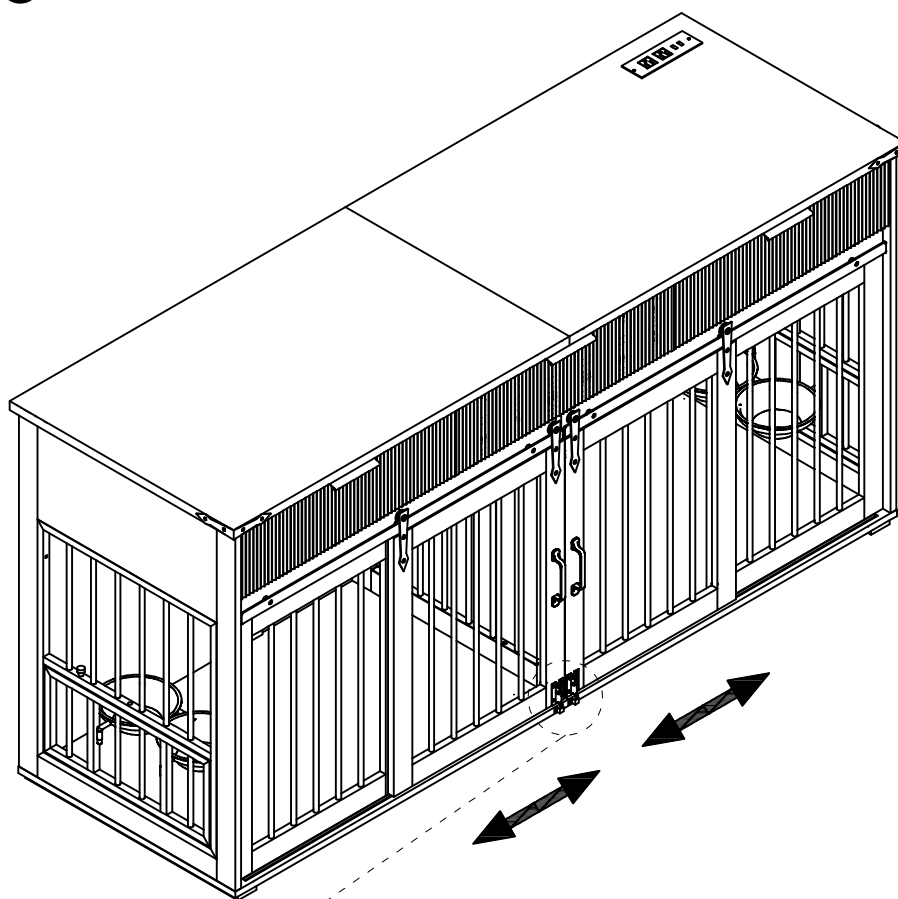

UNLOCK

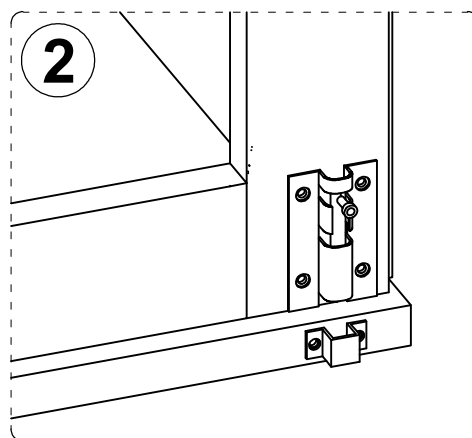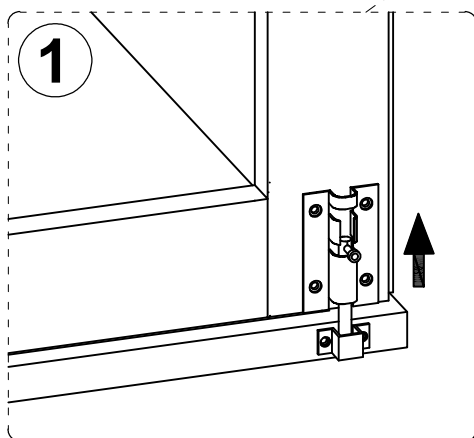

LOCK

